

**(I) Boeing 737-200 and -200 Adv Series****I Additional Requirements and Special Conditions****1.1 Comparator Warning Indicator**

Comparator warning indicators are required for the two main attitude indicators and the comparison is to be made at the instrument presentation. The independence of these systems shall not be violated by the comparator.