

Radiotelephony Manual

CAP 413



CAP 413

Radiotelephony Manual

Edition 24

Incorporating amendments to 31 March 2026

Effective date 1 July 2026

www.caa.co.uk

1 JULY 2026

© Civil Aviation Authority 2026

All rights reserved. Copies of this publication may be reproduced for personal use, or for use within a company or organisation, but may not otherwise be reproduced for publication.

To use or reference CAA publications for any other purpose, for example within training material for students, please contact the CAA at the address below for formal agreement.

First published September 1978
Second edition April 1984
Third edition August 1992
Fourth edition January 1994
Fifth edition January 1995
Sixth edition January 1996
Seventh edition December 1996
Eighth edition January 1998
Ninth edition January 1999
Tenth edition January 2000
Eleventh edition January 2001
Twelfth edition 5 February 2002 (corrected 7 February 2002)
Thirteenth edition 1 October 2002
Fourteenth edition 1 September 2003
Fifteenth edition 1 September 2004
Sixteenth edition 1 May 2006
Seventeenth edition 21 July 2008
Eighteenth edition 19 February 2009 (effective date 12 March 2009)
Nineteenth edition 15 December 2009
Twentieth edition 31 March 2011
Twentieth edition incorporating amendments to 17 November 2011
Twentieth edition incorporating amendments to 12 July 2012
Twentieth edition incorporating amendments to 15 November 2012
Twentieth edition incorporating amendments to 4 April 2013
Twenty-first edition 18 July 2013
Twenty-first edition incorporating amendments to 14 November 2013
Twenty-first edition incorporating amendments to 6 March 2014
Twenty-first edition incorporating amendments to 24 July 2014
Twenty-first edition incorporating amendments to 13 November 2014
Twenty-first edition incorporating amendments to 28 May 2015
Twenty-first edition incorporating amendments to 6 November 2015
Twenty-second edition 26 May 2016 (effective date 23 June 2016)
Twenty-third edition Corr 8 June 2020 (effective date 17 August 2020)
Twenty-third edition incorporating amendments to 26 November 2020 (effective date 21 January 2021)
Twenty-fourth edition 30 April 2026 (effective date 1 July 2026)

Enquiries regarding the content of this publication should be addressed to:

Future Safety, Safety and Airspace Regulation Group,

Civil Aviation Authority, Aviation House, Beehive Ring Road, Crawley, West Sussex, RH6 0YR.

E-mail: ATS.Enquiries@caa.co.uk.

Specific military enquiries regarding Chapter 10 should be addressed to: MAA Regulation ATM,

Juniper L1 #5104, MOD Abbey Wood North, Bristol, BS34 8JH. Email: DSA-MAA-Reg-ATM@mod.uk

The latest version of this document is available in electronic format at www.caa.co.uk/CAP413

Amendment Record

Amendment Number	Amendment Date	Incorporated by	Incorporated on

List of Effective Pages

Section	Pg.	Date
Amendment Record	iii	1 July 2026
List of Effective Pages	iv	1 July 2026
List of Effective Pages	v	1 July 2026
List of Effective Pages	vi	1 July 2026
List of Effective Pages	vii	1 July 2026
List of Effective Pages	viii	1 July 2026
Contents	1	1 July 2026
Contents	2	1 July 2026
Contents	3	1 July 2026
Contents	4	1 July 2026
Contents	5	1 July 2026
Contents	6	1 July 2026
Contents	7	1 July 2026
Contents	8	1 July 2026
Contents	9	1 July 2026
Contents	10	1 July 2026
Revision History	1	1 July 2026
Foreword	1	1 July 2026
Foreword	2	1 July 2026
Foreword	3	1 July 2026
Foreword	4	1 July 2026
Foreword	5	1 July 2026
Foreword	6	1 July 2026
Chapter 1	1	1 July 2026

Section	Pg.	Date
Chapter 2	1	1 July 2026
Chapter 2	2	1 July 2026
Chapter 2	3	1 July 2026
Chapter 2	4	1 July 2026
Chapter 2	5	1 July 2026
Chapter 2	6	1 July 2026
Chapter 2	7	1 July 2026
Chapter 2	8	1 July 2026
Chapter 2	9	1 July 2026
Chapter 2	10	1 July 2026
Chapter 2	11	1 July 2026
Chapter 2	12	1 July 2026
Chapter 2	13	1 July 2026
Chapter 2	14	1 July 2026
Chapter 2	15	1 July 2026
Chapter 2	16	1 July 2026
Chapter 2	17	1 July 2026
Chapter 2	18	1 July 2026
Chapter 2	19	1 July 2026
Chapter 2	20	1 July 2026
Chapter 2	21	1 July 2026
Chapter 2	22	1 July 2026
Chapter 2	23	1 July 2026
Chapter 2	24	1 July 2026
Chapter 2	25	1 July 2026
Chapter 2	26	1 July 2026
Chapter 2	27	1 July 2026
Chapter 2	28	1 July 2026
Chapter 2	29	1 July 2026
Chapter 2	30	1 July 2026
Chapter 2	31	1 July 2026
Chapter 2	32	1 July 2026
Chapter 3	1	1 July 2026
Chapter 3	2	1 July 2026
Chapter 3	3	1 July 2026

Section	Pg.	Date
Chapter 3	4	1 July 2026
Chapter 3	5	1 July 2026
Chapter 3	6	1 July 2026
Chapter 3	7	1 July 2026
Chapter 3	8	1 July 2026
Chapter 3	9	1 July 2026
Chapter 3	10	1 July 2026
Chapter 3	11	1 July 2026
Chapter 3	12	1 July 2026
Chapter 3	13	1 July 2026
Chapter 3	14	1 July 2026
Chapter 3	15	1 July 2026
Chapter 4	1	1 July 2026
Chapter 4	2	1 July 2026
Chapter 4	3	1 July 2026
Chapter 4	4	1 July 2026
Chapter 4	5	1 July 2026
Chapter 4	6	1 July 2026
Chapter 4	7	1 July 2026
Chapter 4	8	1 July 2026
Chapter 4	9	1 July 2026
Chapter 4	10	1 July 2026
Chapter 4	11	1 July 2026
Chapter 4	12	1 July 2026
Chapter 4	13	1 July 2026
Chapter 4	14	1 July 2026
Chapter 4	15	1 July 2026
Chapter 4	16	1 July 2026
Chapter 4	17	1 July 2026
Chapter 4	18	1 July 2026
Chapter 4	19	1 July 2026
Chapter 4	20	1 July 2026
Chapter 4	21	1 July 2026
Chapter 4	22	1 July 2026
Chapter 4	23	1 July 2026
Chapter 4	24	1 July 2026
Chapter 4	25	1 July 2026
Chapter 4	26	1 July 2026
Chapter 4	27	1 July 2026
Chapter 4	28	1 July 2026

Section	Pg.	Date
Chapter 4	29	1 July 2026
Chapter 4	30	1 July 2026
Chapter 4	31	1 July 2026
Chapter 4	32	1 July 2026
Chapter 4	33	1 July 2026
Chapter 4	34	1 July 2026
Chapter 4	35	1 July 2026
Chapter 4	36	1 July 2026
Chapter 4	37	1 July 2026
Chapter 4	38	1 July 2026
Chapter 4	39	1 July 2026
Chapter 4	40	1 July 2026
Chapter 4	41	1 July 2026
Chapter 4	42	1 July 2026
Chapter 4	43	1 July 2026
Chapter 4	44	1 July 2026
Chapter 4	45	1 July 2026
Chapter 4	46	1 July 2026
Chapter 4	47	1 July 2026
Chapter 4	48	1 July 2026
Chapter 4	49	1 July 2026
Chapter 4	50	1 July 2026
Chapter 4	51	1 July 2026
Chapter 4	52	1 July 2026
Chapter 4	53	1 July 2026
Chapter 4	54	1 July 2026
Chapter 4	55	1 July 2026
Chapter 4	56	1 July 2026
Chapter 4	57	1 July 2026
Chapter 4	58	1 July 2026
Chapter 4	59	1 July 2026
Chapter 4	60	1 July 2026
Chapter 4	61	1 July 2026
Chapter 4	62	1 July 2026
Chapter 4	63	1 July 2026
Chapter 4	64	1 July 2026
Chapter 4	65	1 July 2026
Chapter 4	66	1 July 2026
Chapter 4	67	1 July 2026
Chapter 4	68	1 July 2026

Section	Pg.	Date
Chapter 4	69	1 July 2026
Chapter 4	70	1 July 2026
Chapter 4	71	1 July 2026
Chapter 4	72	1 July 2026
Chapter 4	73	1 July 2026
Chapter 4	74	1 July 2026
Chapter 4	75	1 July 2026
Chapter 4	76	1 July 2026
Chapter 4	77	1 July 2026
Chapter 4	78	1 July 2026
Chapter 4	79	1 July 2026
Chapter 5	1	1 July 2026
Chapter 5	2	1 July 2026
Chapter 5	3	1 July 2026
Chapter 5	4	1 July 2026
Chapter 5	5	1 July 2026
Chapter 5	6	1 July 2026
Chapter 5	7	1 July 2026
Chapter 5	8	1 July 2026
Chapter 5	9	1 July 2026
Chapter 5	10	1 July 2026
Chapter 5	11	1 July 2026
Chapter 5	12	1 July 2026
Chapter 5	13	1 July 2026
Chapter 5	14	1 July 2026
Chapter 5	15	1 July 2026
Chapter 5	16	1 July 2026
Chapter 5	17	1 July 2026
Chapter 5	18	1 July 2026
Chapter 5	19	1 July 2026
Chapter 5	20	1 July 2026
Chapter 5	21	1 July 2026
Chapter 5	22	1 July 2026
Chapter 6	1	1 July 2026
Chapter 6	2	1 July 2026
Chapter 6	3	1 July 2026
Chapter 6	4	1 July 2026
Chapter 6	5	1 July 2026
Chapter 6	6	1 July 2026
Chapter 6	7	1 July 2026

Section	Pg.	Date
Chapter 6	8	1 July 2026
Chapter 6	9	1 July 2026
Chapter 6	10	1 July 2026
Chapter 6	11	1 July 2026
Chapter 6	12	1 July 2026
Chapter 6	13	1 July 2026
Chapter 6	14	1 July 2026
Chapter 6	15	1 July 2026
Chapter 6	16	1 July 2026
Chapter 6	17	1 July 2026
Chapter 6	18	1 July 2026
Chapter 6	19	1 July 2026
Chapter 6	20	1 July 2026
Chapter 6	21	1 July 2026
Chapter 6	22	1 July 2026
Chapter 6	23	1 July 2026
Chapter 6	24	1 July 2026
Chapter 6	25	1 July 2026
Chapter 6	26	1 July 2026
Chapter 6	27	1 July 2026
Chapter 6	28	1 July 2026
Chapter 6	29	1 July 2026
Chapter 6	30	1 July 2026
Chapter 6	31	1 July 2026
Chapter 6	32	1 July 2026
Chapter 6	33	1 July 2026
Chapter 6	34	1 July 2026
Chapter 6	35	1 July 2026
Chapter 6	36	1 July 2026
Chapter 6	37	1 July 2026
Chapter 6	38	1 July 2026
Chapter 6	39	1 July 2026
Chapter 6	40	1 July 2026
Chapter 6	41	1 July 2026
Chapter 6	42	1 July 2026
Chapter 7	1	1 July 2026
Chapter 7	2	1 July 2026
Chapter 7	3	1 July 2026
Chapter 7	4	1 July 2026
Chapter 7	5	1 July 2026

Section	Pg.	Date
Chapter 7	6	1 July 2026
Chapter 7	7	1 July 2026
Chapter 7	8	1 July 2026
Chapter 8	1	1 July 2026
Chapter 8	2	1 July 2026
Chapter 8	3	1 July 2026
Chapter 8	4	1 July 2026
Chapter 8	5	1 July 2026
Chapter 8	6	1 July 2026
Chapter 8	7	1 July 2026
Chapter 8	8	1 July 2026
Chapter 8	9	1 July 2026
Chapter 8	10	1 July 2026
Chapter 9	1	1 July 2026
Chapter 9	2	1 July 2026
Chapter 9	3	1 July 2026
Chapter 9	4	1 July 2026
Chapter 9	5	1 July 2026
Chapter 9	6	1 July 2026
Chapter 9	7	1 July 2026
Chapter 9	8	1 July 2026
Chapter 9	9	1 July 2026
Chapter 9	10	1 July 2026
Chapter 9	11	1 July 2026
Chapter 9	12	1 July 2026
Chapter 9	13	1 July 2026
Chapter 9	14	1 July 2026
Chapter 10	1	1 July 2026
Chapter 10	2	1 July 2026
Chapter 10	3	1 July 2026
Chapter 10	4	1 July 2026
Chapter 10	5	1 July 2026
Chapter 10	6	1 July 2026
Chapter 10	7	1 July 2026
Chapter 10	8	1 July 2026
Chapter 10	9	1 July 2026
Chapter 10	10	1 July 2026
Chapter 10	11	1 July 2026
Chapter 10	12	1 July 2026
Chapter 10	13	1 July 2026

Section	Pg.	Date
Chapter 10	14	1 July 2026
Chapter 10	15	1 July 2026
Chapter 10	16	1 July 2026
Chapter 10	17	1 July 2026
Chapter 10	18	1 July 2026
Chapter 10	19	1 July 2026
Chapter 10	20	1 July 2026
Chapter 10	21	1 July 2026
Chapter 10	22	1 July 2026
Chapter 10	23	1 July 2026
Chapter 10	24	1 July 2026
Chapter 10	25	1 July 2026
Chapter 10	26	1 July 2026
Chapter 10	27	1 July 2026
Chapter 10	28	1 July 2026
Chapter 10	29	1 July 2026
Chapter 10	30	1 July 2026
Chapter 10	31	1 July 2026
Chapter 10	32	1 July 2026
Chapter 10	33	1 July 2026
Chapter 10	34	1 July 2026
Chapter 10	35	1 July 2026
Chapter 10	36	1 July 2026
Chapter 11	1	1 July 2026
Chapter 11	2	1 July 2026
Chapter 11	3	1 July 2026
Chapter 11	4	1 July 2026
Chapter 11	5	1 July 2026
Chapter 11	6	1 July 2026
Chapter 11	7	1 July 2026
Chapter 11	8	1 July 2026
Chapter 11	9	1 July 2026
Chapter 11	10	1 July 2026
Chapter 11	11	1 July 2026
Chapter 11	12	1 July 2026
Chapter 11	13	1 July 2026
Chapter 11	14	1 July 2026
Chapter 11	15	1 July 2026
Chapter 11	16	1 July 2026
Chapter 11	17	1 July 2026

Section	Pg.	Date
Chapter 11	18	1 July 2026
Chapter 11	19	1 July 2026
Chapter 11	20	1 July 2026
Chapter 11	21	1 July 2026
Chapter 11	22	1 July 2026
Chapter 11	23	1 July 2026
Chapter 11	24	1 July 2026
Chapter 11	25	1 July 2026
Chapter 11	26	1 July 2026
Chapter 11	27	1 July 2026
Chapter 11	28	1 July 2026
Chapter 11	29	1 July 2026
Chapter 11	30	1 July 2026
Chapter 11	31	1 July 2026
Chapter 11	32	1 July 2026
Chapter 11	33	1 July 2026
Chapter 11	34	1 July 2026
Chapter 11	35	1 July 2026
Chapter 11	36	1 July 2026
Chapter 11	37	1 July 2026

Section	Pg.	Date
Chapter 11	38	1 July 2026
Chapter 11	39	1 July 2026
Chapter 11	40	1 July 2026
Chapter 11	41	1 July 2026
Chapter 11	42	1 July 2026
Chapter 11	43	1 July 2026
Chapter 11	44	1 July 2026
Chapter 11	45	1 July 2026
Chapter 11	46	1 July 2026
Chapter 11	47	1 July 2026
Appendix 1	1	1 July 2026
Appendix 1	2	1 July 2026
Appendix 1	3	1 July 2026
Appendix 1	4	1 July 2026
Appendix 1	5	1 July 2026
Appendix 2	1	1 July 2026
Appendix 2	2	1 July 2026
Appendix 2	3	1 July 2026
Appendix 2	4	1 July 2026
Bibliography	1	1 July 2026

INTENTIONALLY BLANK

Contents

Chapter	Section	Page Number
	Amendment Record	iii
	List of Effective Pages	iv
	Contents	1
	Revision History	1
	Foreword	1
	Background	1
	Regulatory References	2
	Introduction	2
	CAP 413 Radiotelephony (RTF) Manual – Status	2
	Interpretation of Words	4
	CAP 413 – Amendments	5
	Effective Date	5
	Supplementary Instructions	5
	Enquiries	5
Chapter 1	Glossary – Removed to CAP 1430	1
Chapter 2	Radiotelephony General Procedures	
	General Procedures	1
	Introduction	1
	Use of VHF RTF Channels	2
	Transmitting Techniques	3
	Transmission of Letters	4
	Transmission of Numbers	5
	Transmission of Time	7
	Standard Words and Phrases	8
	Callsigns for Aeronautical Stations	10

	Callsigns for Aircraft	11
	Police Flights	13
	HEMS Flights	14
	Search and Rescue Flights	14
	Prefixes	15
	Student Flights	16
	High Speed Flights	16
	Unmanned Flights	17
	Military Aircraft Callsigns	17
	Continuation of Communications	19
	Corrections and Repetitions	20
	Acknowledgement of Receipt	21
	Transfer of Communications	21
	Clearance Issue and Read-back Requirements	22
	Withholding Clearances	25
	Simultaneous Transmissions	27
	Complying with Clearances and Instructions	27
	Communication Failure	28
	Test Transmissions	30
	Pilot Complaints Concerning Aeronautical Communications	31
	Air Traffic Service Complaints Concerning Aircraft Communications	31
	Hours of Service and Communications Watch	31
	Record of Communications	32
	Categories of Message	32
Chapter 3	General Phraseology	
	General	1
	Introduction	1
	Level Reporting	1
	Speed Control	6
	Initial Call – IFR Flight	8
	Initial Call – VFR Flight	9

	Passing Message Details	10
	Position Reporting	11
	Flight Plans	12
	Low Visibility Procedures	13
	Delays	13
	<u>Transmission of Surface Wind</u>	14
Chapter 4	Aerodrome Phraseology	
	Introduction	1
	Aerodrome Control Service Phraseology	5
	Departure Information and Engine Starting Procedures	5
	Pushback and Powerback	6
	Taxi Instructions	6
	Pre-Departure Manoeuvring	10
	Take-Off Clearance	12
	Final Approach and Landing	22
	Missed Approach	25
	Runway Vacating and Communicating After Landing	25
	Essential Aerodrome Information	26
	Arrestor Systems at Military Aerodromes	27
	Aerodrome Flight Information Service Phraseology	28
	Introduction	28
	Type of Service	28
	AFIS Phraseology for Ground Movement, Take-Off, Landing and Transit	29
	RNP Instrument Approach Procedures	38
	Initial Call	38
	Position Reporting	38
	Traffic Information	39
	Final Approach Fix	39
	Inbound / Outbound Aircraft Interaction	40
	Reporting <u>Equipment</u> Problems	40

	Aerodrome Phraseology for Helicopters	41
	Introduction	41
	Helicopter Callsigns	41
	Helicopter Phraseology for Taxiing	41
	Helicopter Phraseology for Take-Off and Landing (ATC only)	43
	Helicopter Hover Phraseology Examples (ATC and AFIS only)	43
	Helicopter Taxiing Phraseology Examples (ATC and AFIS only)	43
	Ground Taxi Instruction (if required)	44
	Helicopter Take-Off and Landing Phraseology Examples (ATC only)	44
	Aerodrome Phraseology for Vehicles (ATC and AFIS only)	47
	Introduction	47
	Movement Instructions	47
	To Cross a Runway	50
	Vehicles Towing Aircraft	52
	Low Visibility Procedures	52
	Messages Regarding Safety of an Aircraft	52
	Messages Regarding Wildlife	53
	Driver Unsure of Position	53
	Broken-down Vehicle	53
	Radio Failure	53
	Aerodrome Air/Ground Communication Service Phraseology	54
	Introduction	54
	Type of Service	54
	Air/Ground Station Identification	54
	Phraseology and Examples	55
	<u>AGCS RNP Initial Call</u>	59
	<u>AGCS PPR Management</u>	59
	<u>AGCS Position Information</u>	60
	<u>AGCS Information on Aerodrome Traffic</u>	61

	<u>AGCS RAIM Failure</u>	61
	<u>AGCS Unexpected Go-around</u>	62
	<u>ATZ / Aerodrome Traffic Circuit Management (AGCS)</u>	62
	<u>ATZ / Aerodrome Traffic Circuit Management (AFIS)</u>	63
	Offshore Communication Service	64
	Radiotelephony Reports at Unattended Aerodromes	68
	Introduction	68
	Additional Procedures for the Use of SAFETYCOM	69
	Unattended Aerodrome Phraseology Examples	69
	Aerodrome Information	70
	Meteorological Conditions	70
	Voice Weather Broadcast (VOLMET) UK	71
	Runway Visual Range (RVR)/Visibility	71
	<u>Runway Surface Conditions</u>	73
	Grass Runways	78
	Automatic Terminal Information Service (ATIS) UK	78
Chapter 5	Phraseology associated with the use of ATS Surveillance Systems	
	General	1
	Introduction	1
	Identification of Aircraft using an ATS Surveillance System	1
	<u>Loss of identification of Aircraft using ATS Surveillance Systems</u>	3
	Secondary Surveillance Radar Phraseology	3
	Minimum Safe Altitude Warning (MSAW) Phraseology	5
	ATS Surveillance Service	6
	Vectoring using an ATS Surveillance System	7
	Essential Traffic Information	9
	Traffic Information and Avoiding Action Phraseology	10
	ACAS/TCAS Phraseology	16

	Communication and Loss of Communication	17
	<u>Special Use Airspace (SUA) Activity Information and Crossing Services</u>	18
	Operations with a Flight Information Display (FID)	21
Chapter 6	Approach Phraseology	
	Approach Control Service Phraseology	1
	IFR Departures	1
	VFR Departures	3
	IFR Arrivals	3
	VFR Arrivals	9
	Special VFR Flights	11
	Vectoring to Final Approach	12
	Direction Finding (DF)	16
	VDF Procedure	18
	NDB(L) and VOR Procedures	23
	<u>Phraseology linked to the use of Global Navigation Satellite System on an RNP Approach</u>	27
	Procedure Clearance	27
	Position reporting	27
	Final Approach Fix	27
	Reporting GNSS Problems	28
	<u>Visual Manoeuvring (Circling)</u>	<u>28</u>
	Surveillance Radar Approach (SRA)	29
	Landing Altimeter Setting (QNE)	34
	PAR Approach	34
	Clearance to enter Control Zones (CTR)	34
	Aerodrome Traffic Zone (ATZ) associated with another Aerodrome	36
	UK Flight Information Services	37
	Reduced Traffic Information	39
	Traffic Service – Operations below ATC Terrain Safety Levels	41
	Deconfliction Service – Descent below ATC Unit Terrain Safe Level	42

	Deconfliction Service – Departing and Arriving Aircraft	42
Chapter 7	Area Phraseology	
	Area Control Service Phraseology	1
	General	1
	Position Reporting	2
	Flights Joining Airways	2
	Flights Transitioning Between Different Classifications of Controlled Airspace	4
	Flights Leaving Airways	5
	Flights Crossing Airways	6
	Flights Holding En-Route	6
	Reduced Vertical Separation Minimum (RVSM) Phraseology	7
Chapter 8	Emergency Phraseology	
	Distress and Urgency Communication Procedures	1
	Introduction	1
	States of Emergency	1
	UHF and VHF Emergency Service	1
	UHF and VHF Emergency Service – General Procedures	2
	Emergency Message	3
	PAN PAN MEDICAL	5
	Ejection from Aircraft	5
	Ballistic Recovery Systems	5
	Speechless Code	6
	Radio Procedures – Practice Emergencies	6
	Training Fix	7
	Relayed emergency Message	7
	Imposition of Silence	7
	Emergency Descent	8
	Fuel Shortage	9
	Termination of Distress Communications and of RTF Silence	9

Chapter 9	Miscellaneous Phraseology	
	Other Communications	1
	Wake Turbulence	1
	Reporting of Unnotified Small Unmanned Aircraft Activity	1
	Sailplane Operations	2
	Wind Shear	6
	AIRPROX Reporting	6
	Oil Pollution Reporting	7
	Interceptions by Military Aircraft	7
	Aircraft Operating Agency messages	8
	8.33 kHz Phraseology	10
	Operations by Aircraft deploying Brake Chutes	11
	Freezing Orders	12
	CPDLC Failure	13
	Aerodrome emergency Services	13
	Radio Mandatory Zones	14
Chapter 10	Military Specific Phraseology	
	Military Specific Phraseology	1
	Military Variances to Chapter 2	1
	Transmission of UHF Channels	1
	Transmission of Time	1
	Standard Words and Phrases	2
	Communications	2
	Transponder Phraseology	2
	Military Specific Procedures (Control of Aircraft)	2
	NATO Standard Visual Circuit Procedures	2
	Weather and Aerodrome Information	3
	Use of Runway Designators	4
	Cancellation of Take-Off	4
	Phraseology for Joining the Visual Circuit/Pattern	4
	Landing Gear Position	6

	Calibrator Aircraft	7
	Arrestor System Procedures and Phraseology	7
	Phraseology for Fixed-Wing STOVL Operations	10
	Suspecting Hypoxia in Aircrew	10
	Flameout/Engine Failure – Aerodrome Phraseology	11
	PAR Phraseology	11
	PAR Azimuth Only/SRA Phraseology	14
	ILS Phraseology	16
	Descent to Low Level	16
	Jamming Phraseology	18
	Speechless Procedures	18
	Military Missed Approach	21
	Suspension of RTF Procedures	21
	Formations in Trail	21
	Contact Lost	22
	Freecall and Continue With	22
	<u>Use of Unassured Aircraft Surveillance Data</u>	22
	Aerobatics and General Handling	23
	Passing the Number of Persons on Board (POB)	23
	Clearances with an Occupied Runway	23
	Formation Clearances	24
	TACAN Specific Phraseology	24
	Radar PFL	25
	Controlled Descent through Cloud (QGH)	26
	High Level QGH	26
	Low Level QGH	28
	Flameout Spiral Descent	30
	No Compass/No Gyro	32
	Supersonic Flight	33
	Military Aerodrome Traffic Zones (MATZ) and Penetration Services	33
	Military Safety Broadcast – Sécurité	35

	Rate of Climb and Descent	35
	Air to Air Refuelling	36
Chapter 11	Phraseology Examples	
	Examples of Types of Flight	1
	Introduction	1
	An IFR Flight	2
	ATC Clearance	3
	Pushback and Taxi	4
	Pre-departure and Take-off	5
	En-Route	8
	A VFR/IFR Flight	21
	Engine Start and Departure Information	21
	Pre-departure and Take-off	23
	Post Departure Flight	24
	En-Route Flight	25
	Flight Receiving Lower Airspace and MATZ Penetration Service	27
	Flight in the Military Visual Circuit	32
	Flight Receiving Lower Airspace Radar Service (LARS) and <u>Special Use Airspace Information and Crossing Service</u>	36
	Military Safety Broadcast – Sécurité	38
	Callsign Prefix – ‘STUDENT’	38
	Flight Receiving Avoiding Action	39
	Flight Receiving En-Route Basic Service	41
	Flight Transmitting a Practice Pan	43
	Arrival Flight (Aerodrome FIS)	46
Appendix 1	UK Differences to ICAO Radiotelephony Procedures	1
Appendix 2	UK Civil/Military Radiotelephony Differences	1
Bibliography		1

INTENTIONALLY BLANK

Revision History

Revisions included in Edition 24

1 July 2026

In addition to editorial changes and minor corrections, Edition 24 comprises updates in line with:

SI 2020/02

SI 2021/01

SI 2021/02

SI 2021/03

SI 2022/01

SI 2022/02

SI 2023/01

SI 2024/01

Section	Subject
<u>Chapter 2 - Radiotelephony</u>	<u>Changes to Police, HEMS and Search and Rescue</u>
<u>Chapter 3 – General Phraseology</u>	<u>Amendment to Transmission of Surface Wind</u>
<u>Chapter 4 – Aerodrome Phraseology</u>	<u>Addition of AGCS/AFIS Phraseology</u> <u>Amendment to Runway Surface Conditions</u>
<u>Chapter 5 - Phraseology associated with the use of ATS Surveillance Systems</u>	<u>Addition of Special Use Airspace Phraseology</u> <u>Addition of Flight Information Display (FID) Phraseology</u>
<u>Chapter 9 – Miscellaneous Phraseology</u>	<u>Addition of Radio Mandatory Zones</u>
<u>Military Specific Phraseology</u>	<u>Addition of Calibrator Aircraft Phraseology</u> <u>Amendments to SVTOL Aircraft Phraseology</u> <u>Amendment to Suspecting Hypoxia in Aircrew Phraseology</u> <u>Amendment to PAR Phraseology</u> <u>Addition of Phraseology for Use of Unassured Aircraft Surveillance Data</u> <u>Addition of Phraseology for Rate of Climb and Descent</u> <u>Addition of information on Air-to-Air Refuelling</u>

Foreword

Background

1. Civil Aviation Publications (CAPs) published by the Civil Aviation Authority (CAA) are based upon national legislation and non-legislative regulatory material such as Standards and Recommended Practices (SARPs) and Procedures for Air Navigation Services (PANS) developed by the International Civil Aviation Organisation (ICAO). CAPs are published to provide UK industry with guidance and clarification on the means of achieving compliance with regulatory requirements and may detail additional national requirements including CAA administrative procedures.
2. The publication of CAPs fulfils the CAA's obligations under the Transport Act 2000, which requires the Authority to exercise its functions so as to further the interests of aircraft operators and owners, aerodrome managers, passengers, and those with right in property carried in aircraft, with regard to range, availability, continuity, cost, and quality of air traffic services.
3. CAPs also support compliance with the Civil Aviation Authority (Chicago Convention) Directions 2022, which require the CAA to act consistently with the United Kingdom's obligations under the Convention on International Civil Aviation (the "Chicago Convention") and to consider whether domestic legislation requires amendment to ensure appropriate implementation of ICAO provisions. Where an ICAO provision is not transposed into domestic law, but may be applied through certification, licensing, or approval, the Directions require the CAA to publish the requirements necessary to implement that provision and to verify compliance.
4. UK Aviation-related regulation comprises two principal strands:
 - a) legislation made under the Air Navigation Order, including the Rules of the Air Regulations 2015; and
 - b) legislation made under Assimilated Regulation (EU) No. 2018/1139 'The Basic Regulation.'
5. CAPs are periodically revised to reflect changes in regulatory source material, industry feedback, and recognised good practice. This CAP must be read in conjunction with the regulations and documents referenced within it. The absence of any particular source regulatory document does not remove the user's responsibility to be aware of, and comply with, the requirements contained within the source regulatory materials unless otherwise exempted from those requirements.
6. The words 'must', 'shall' and 'will' indicate that compliance with applicable regulatory requirements is necessary. In the case of acceptable means of

compliance (AMC), the word 'should' indicates that compliance is required, unless complying with an approved alternative means of compliance.

Regulatory References

7. CAP 413 is published to assist air traffic services (ATS) providers and airspace users understanding of, and compliance with the requirements pertaining to phraseology laid down in:
 - a) ICAO: Annex 10 Volume 11, Annex 10, Volume V, Annex 11, Doc 4444 PANS-ATM, Doc 9432 Manual of Radiotelephony and Circular 211-AN/128.
 - b) UK: Assimilated Regulation (EU) No. 923/2012 'Standardised European Rules of the Air (SERA) ad ANO 2016 (as amended), CAP 493 Manual of Air Traffic Services Part 1, CAP 774 UK Flight Information Services (see also CAP 1434), CAP 797 Flight Information Service Officer (FISO) Manual and CAP 1430 the UK ATM Vocabulary.

Introduction

8. UK Reg (EU) No. 923/2012 and its Annex, UK Standardised European Rules of the Air (UK SERA), provides regulatory reference for radiotelephony communication procedures. Section 14 of UK SERA sets out the requirements for voice communication procedures, including phraseology, message precedence, and read-back procedures. Whilst Appendix 1 to AMC1 SERA.14001 provides the standardised radiotelephony (RT) phraseology, CAP 413 provides the detailed phraseology, structure, and worked examples necessary for operational implementation of these regulatory requirements and thereby provides pilots, ATS personnel and other ground personnel, both civil and military, with a compendium of clear, concise, standardised phraseology and associated guidance, for RT communication in United Kingdom airspace.
9. Terms and abbreviations used in this document are defined within CAP 1430 the UK Air Traffic Management Vocabulary.
10. The units of measurement used in the UK are listed within AIP GEN 2.1-1. Conversion table to assist ATS personnel to convert specific units of measurement are listed within AIP GEN 2.6.

CAP 413 – Status

11. All users of RT in the United Kingdom are expected to comply with the phraseology described in this manual and SERA.14001 requires that Standardised phraseology shall be used in all situations for which it has been specified.
12. However, the phraseology examples contained herein are not intended to be exhaustive and, when circumstances differ, pilots, ATS personnel and other

ground personnel will be expected to use plain language, which should be as clear and concise as possible.

13. Chapter 10 of this Manual details Military Specific Phraseology for specific use by military ATCOs and military aircrew. The RT described in Chapter 10 is complementary to NATO STANAG 3817. It is also complementary to the remainder of CAP 413, as it either differs from civil phraseology or there is no equivalent civil phraseology, e.g. in the case of arrestor system procedures. Civil pilots visiting military aerodrome will be expected to be aware of the military phraseology in Chapter 10 and to comply with such instructions as may be issued by military controllers during their visit. Where relevant, cross references from the remainder of CAP 413 to the equivalent military phraseology are provided for the assistance of civil pilots visiting military aerodromes.
14. Operational details can be found in the United Kingdom Aeronautical Information Publication (UK AIP).
15. CAP 413 is also a useful reference for those studying for the UK Flight Radiotelephony Operator's Licence in conjunction with CAP 2325 and CAP 2118.
16. Candidates for pilot and instrument rating examinations should note that the syllabus for the communications examination is drawn directly from the ICAO Annex 10 Volume 2 and ICAO Doc 9432 and not CAP 413.
17. Examples of phraseology in CAP 413 are intended to be representative of communications in common use. The initial call in a series of messages is shown on the left side of the page, subsequent messages appear in chronological order on the right side of the page.
18. Where appropriate, words contained in parentheses indicate that specific information, such as a level, a place or a time, etc., must be inserted to complete the phrase, or alternatively that optional phrases may be used. Words in square parentheses indicate optional additional words, or information that may be necessary in specific instances.
19. Black text and grey-scale illustrations are used to facilitate printing on monochrome printers.
20. The agency making the transmission is identified by a representative symbol (e.g. Aircraft) as follows:



AIRCRAFT



HELICOPTER



VEHICLE



GROUND STATION

(ATC, AFIS, AGCS)

Interpretation of Words

21. To avoid any misunderstanding within this document, certain words or terms are to be interpreted as having specific meanings as follows:

is to, are to, shall, must	Means the compliance with the instruction or regulatory requirement is necessary.
should	In the case of AMC to EU requirements, the word 'should' indicates that compliance is required, unless complying with an approved AltMoC. Otherwise, it means that it is strongly advisable that an instruction is carried out and is applied where the more positive 'shall' is unreasonable but nevertheless a pilot/FISO would have to have good reason for not doing so.
may	Means that an instruction is permissive, options or alternative, e.g. 'a FISO may seek assistance....' But would not if they did not need it.
will	is used for informative or descriptive writing, e.g. 'pilots will file...' is not an instruction to the pilot.

22. Where reference is made to an Area Control Centre (ACC), it shall be the centre within whose Flight Information Region (FIR) the aerodrome is situated. Where guidance on an air traffic matter is required, it may be obtained from the watch supervisor at the ACC.

CAP 413 – Amendments

Amendments

23. Amendments to CAP 413 will be published as required.
24. Underlining is used to indicate new or revised text. Prior to the effective date of an amendment, the full version of CAP 413 will be available on the CAA website (www.caa.co.uk). This document will contain a summary of changes and an updated List of Effective Pages. From the effective date of the amendment, the superseded version of CAP 413 will be removed from the website.

Effective Date

25. The effective date of an instruction is stated at the foot of the page. Publication of a new edition means that all pages will have the same date; however, new instructions are effective on the amendment publication date.

Supplementary Instructions

26. Supplementary Instructions to CAP 413 are issued for the following reasons:
- a) to introduce an entirely new subject or a radical change to existing instructions;
 - b) to re-emphasise an existing instruction.
27. Supplementary Instructions will be incorporated into the main body of the document in a suitable and timely manner.

Enquiries

28. Any enquiries concerning the text should be addressed to:

The Editor – CAP 413
Airspace, ATM & Aerodromes
Civil Aviation Authority
Safety and Airspace Regulation Group
Beehive Ring Road
Crawley
West Sussex
RH6 0YR

E-mail: ats.enquiries@caa.co.uk

Chapter 1: Glossary

Content removed and placed in [CAP 1430 – UK Air Traffic Management Vocabulary](#).

Chapter 2: Radiotelephony

General Procedures

Introduction

- 2.1 Radiotelephony provides the means by which pilots of aircraft and ground personnel communicate with each other. To ensure communications are clear and fully understood it is of vital importance that transmissions by RTF should comply with internationally agreed procedures and phraseology. RTF communications between pilots and ground personnel will comprise one or more of the following elements in any message transmitted.

Table 1

RTF Element	Compliance	Guidance Material
Clearance	Requiring strict compliance	Clearances transmitted by ground personnel (usually Air Traffic Control) are to be strictly complied with and the clearance issued is to be read back verbatim, e.g. 'BIGJET 347, cleared to Kennington via A1, at FL60, squawk 5501'
Instructions	To be followed and carried out where practically possible and safe to do so	Instructions transmitted are to be complied with and, in most cases, should be read back to reduce the chance of any ambiguity or misunderstanding, e.g. 'G-ABCD, taxi to the apron via taxiway Charlie'. Chapter 2 specifies those instructions that are to be read back in full. However, if the instruction is short, clear and unambiguous, acknowledgment of the instruction using standard phraseology such as 'Roger' (I have received all your last transmission) or 'Wilco' (I understand your message and will comply with it) is preferred for the sake of brevity in the use of radiotelephony transmission time

RTF Element	Compliance	Guidance Material
Information	Of benefit and usefulness between pilot and ground personnel in the interests of safety	Information is provided to assist the safe conduct of the flight and should not be read back, e.g. 'G-ABCD surface wind 240 degrees 15 knots'. If the information is not understood, a request to repeat the information is sufficient

- 2.2 Used properly, the clearances, instructions and information transmitted will greatly assist in the safe and expeditious operation of aircraft. A transmitted radiotelephony message will contain at least one of the elements listed but may contain all three elements if required. Pilots and ground personnel should be aware of the elements of each transmission to ensure only those elements that are required to be read back are transmitted. Verbose transmissions are to be avoided, and one of the most common faults in radiotelephony is the unnecessary retransmission of simple instructions and information.
- 2.3 The use of standard procedures and phraseology will avoid misunderstanding and reduce the need for repeat transmissions. Incidents and accidents have occurred in which a contributing factor has been the misunderstanding caused by the use of non-standard phraseology and not understanding the important elements of the message.
- 2.4 **The importance of using correct and precise standard phraseology cannot be over-emphasised.**

Use of VHF RTF Channels

- 2.5 Geographical separation between international services using the same or adjacent frequencies is determined so as to ensure as far as possible that aircraft at the limits of height and range to each service do not interfere with one another. In the case of en-route sectors these limits correspond to that of the ATC sector concerned and those for international aerodrome services are appropriate to a radius of 25 NM up to a height of 4,000 ft (Tower) or 10,000 ft (Approach).
- 2.6 Except in emergency, or unless otherwise instructed by the ATS, pilots should observe these limits. Services other than international services are provided on frequencies which are shared between numerous ground stations and have to operate to a higher utilisation in order to satisfy the demand for frequencies. Pilots using these frequencies should assist in reducing interference by keeping communications to a minimum and by limiting the use of aircraft transmitters to the minimum height and distance from the aerodrome that is operationally necessary. In the case of Tower, AFIS and AGCS facilities, communications on these frequencies should be

restricted as far as possible to heights up to 1,000 ft in the immediate vicinity of the aerodrome concerned and in any event within 10 NM and 3,000 ft.

- 2.7 SAFETYCOM transmissions shall be made only within a maximum range of 10 NM of the aerodrome of intended landing, and below 2,000 ft above the aerodrome elevation.

Transmitting Technique

- 2.8 The following transmitting techniques will assist in ensuring that transmitted speech is clearly and satisfactorily received:
1. Before transmitting check that the receiver volume is set at the optimum level and listen out on the frequency to be used to ensure that there will be no interference with a transmission from another station.
 2. Be familiar with microphone operating techniques and do not turn your head away from it whilst talking or vary the distance between it and your mouth. Severe distortion of speech may arise from:
 - a) Talking too close to the microphone;
 - b) Touching the microphone with the lips; or
 - c) Holding the microphone or boom (of a combined headset/ microphone system).
 3. Use a normal conversation tone, speak clearly and distinctly.
 4. Maintain an even rate of speech not exceeding 100 words per minute. When it is known that elements of the message will be written down by the recipients, speak at a slightly slower rate.
 5. Maintain the speaking volume at a constant level.
 6. A slight pause before and after numbers will assist in making them easier to understand.
 7. Avoid using hesitation sounds such as 'er'.
 8. Avoid excessive use of courtesies and entering into non-operational conversations.
 9. Depress the transmit switch fully before speaking and do not release it until the message is complete. This will ensure that the entire message is transmitted. However, do not depress transmit switch until ready to speak.
 10. Be aware that the mother tongue of the person receiving the message may not be English. Therefore, speak clearly and use standard RTF words and phrases wherever possible.
 11. Messages should not contain more than three specific phrases, comprising a clearance, instruction or pertinent information. In cases of

doubt, e.g. a foreign pilot having difficulty with the English language or an inexperienced pilot unsure of the procedures, the controller should reduce the number of items and if necessary, these should be passed, and acknowledged, singly.

- 2.9 One of the most irritating and potentially dangerous situations in radiotelephony is a 'stuck' microphone button. Operators should always ensure that the button is released after a transmission and the microphone placed in an appropriate place that will ensure that it will not inadvertently be switched on.
- 2.10 After a call has been made, a period of at least 10 seconds should elapse before a second call is made. This should eliminate unnecessary transmissions while the receiving station is getting ready to reply to the initial call.

Transmission of Letters

- 2.11 The words in the table below shall be used when individual letters are required to be transmitted. The syllables to be emphasised are in bold.

Table 2

Letter	Word	Appropriate pronunciation
A	Alpha	AL FAH
B	Bravo	BRAH VOH
C	Charlie	CHAR LEE or SHAR LEE
D	Delta	DELL TA
E	Echo	ECK OH
F	Foxtrot	FOKS TROT
G	Golf	GOLF
H	Hotel	HO TELL
I	India	IN DEE AH
J	Juliett	JEW LEE ETT
K	Kilo	KEY LOH
L	Lima	LEE MAH
M	Mike	MIKE
N	November	NO VEM BER
O	Oscar	OSS CAR
P	Papa	PAH PAH
Q	Quebec	KEH BECK

R	Romeo	ROW ME OH
S	Sierra	SEE AIR RAH
T	Tango	TANG GO
U	Uniform	YOU NEED FORM or OO NEE FORM
V	Victor	VIK TAH
W	Whiskey	WISS KEY
X	X-ray	ECKS RAY
Y	Yankee	YANG KEE
Z	Zulu	ZOO LOO

Transmission of Numbers

2.12 The syllables to be emphasised are in bold.

Table 3

Numeral or numeral element	Latin alphabet representation
0	ZERO
1	WUN
2	TOO
3	TREE
4	FOWER
5	FIFE
6	SIX
7	SEVEN
8	AIT
9	NINER
Decimal	DAYSEEMAL
Hundred	HUN DRED
Thousand	TOUSAND

2.13 All numbers, except those contained in sub-paragraph 2, shall be transmitted by pronouncing each digit separately as follows:

1. When transmitting messages containing aircraft callsigns, altimeter settings, flight levels (with the exception of FL100, 200, 300 etc. which are expressed as 'Flight Level (number) HUN DRED'), headings, wind

speeds/directions, airspeed and frequencies, each digit shall be transmitted separately; examples of this convention are as follows:

Table 4

Number	Transmitted as	Pronounced as
BAW 246	Speedbird Two Four Six	SPEEDBIRD TOO FOWER SIX
FL100	Flight Level One Hundred	FLIGHT LEVEL WUN HUN DRED
FL180	Flight Level One Eight Zero	FLIGHT LEVEL WUN AIT ZERO
150 Degrees	One Five Zero Degrees	WUN FIFE ZERO DEGREES
18 Knots	One Eight Knots	WUN AIT KNOTS
122.1	One Two Two Decimal One	WUN TOO TOO DAYSEEMAL WUN
(Squawk) 6500	Six Five Zero Zero	SIX FIFE ZERO ZERO

2. All numbers used in the transmission of altitude, height, cloud height, pressure setting*, transponder codes*, visibility and runway visual range information which contain whole hundreds and whole thousands shall be transmitted by pronouncing each digit in the number of hundreds or thousands followed by the word HUNDRED or TOUSAND as appropriate. Combinations of thousands and whole hundreds shall be transmitted by pronouncing each digit in the number of thousands followed by the word TOUSAND and the number of hundreds followed by the word HUNDRED; examples of this convention are as follows:

Table 5

Number	Transmitted as	Pronounced as
10	One Zero	WUN ZERO
100	One Hundred	WUN HUN DRED
2 500	Two Thousand Five Hundred	TOO TOUSAND FIFE HUNDRED
QNH 1000 hpa	One Thousand	WUN TOUSAND
(Squawk) 1000	One Thousand	WUN TOUSAND
11 000	One One Thousand	WUN WUN TOUSAND
25 000	Two Five Thousand	TOO FIFE TOUSAND

* For pressure setting and transponder codes see SERA.14035 (a) (1) (ii) and (iii).

- 2.14 Numbers containing a decimal point shall be transmitted as prescribed in paragraph 2.12 with the decimal point in appropriate sequence being indicated by the word decimal.
- 2.15 All six figures shall be used when identifying frequencies irrespective of whether they are 25 kHz or 8.33 kHz spaced. Exceptionally, when the final two digits of the frequency are both zero, only the first four digits need be given. In technical terms an 8.33 kHz frequency is referred to as a “channel”; however, the word “channel” is not used in RTF. Military phraseology for identifying UHF frequencies appears in Chapter 10.

Table 6

Frequency	Transmitted as	Pronounced as
118.125	One One Eight Decimal One Two Five	WUN WUN AIT DAY SEE MAL WUN TOO FIFE
119.050	One One Nine Decimal Zero Five Zero	WUN WUN NINER DAY SEE MAL ZERO FIFE ZERO
122.500	One Two Two Decimal Five	WUN TOO TOO DAY SEE MAL FIFE
118.000	One One Eight Decimal Zero	WUN WUN AIT DAY SEE MAL ZERO

- 2.16 When it is necessary to verify the accurate reception of numbers the person transmitting the message shall request the person receiving the message to read back the numbers.

Transmission of Time

- 2.17 When transmitting time, only the minutes of the hour are normally required. However, the hour should be included if there is any possibility of confusion. Time checks shall be given to the nearest minute and preceded by the word ‘TIME’. Coordinated Universal Time (UTC) is to be used at all times, unless specified. 2400 hours designates midnight, the end of the day, and 0000 hours the beginning of the day.

Table 7

Number	Transmitted as	Pronounced as
0823	Two Three or Zero Eight Two Three	TOO TREE (or ZERO AIT TOO TREE)
1300	One Three Zero Zero	WUN TREE ZERO ZERO
2057	Five Seven or Two Zero Five Seven	FIFE SEVEN (or TOO ZERO FIFE SEVEN)

Standard Words and Phrases

2.18 The following words and phrases shall be used in radiotelephony communications as appropriate and shall have the meaning given below:

Table 8

Word/Phrase	Meaning
ACKNOWLEDGE	Let me know that you have received and understood this message
AFFIRM	Yes
APPROVED**	Permission for proposed action granted
BREAK	Indicates the separation between messages
BREAK BREAK	Indicates the separation between messages transmitted to different aircraft in a busy environment NOTE: The phraseology "BREAK BREAK" may be confused with an instruction to an aircraft formation and should be used with caution
CANCEL	Annul the previously transmitted clearance
CHANGING TO	I intend to call...(unit) on...(frequency)
CHECK	Examine a system or procedure. (Not to be used in any other context. No answer is normally expected)
CLEARED ‡	Authorised to proceed under the conditions specified
CLIMB ‡	Climb and maintain
CONFIRM	I request verification of: (<i>clearance, instruction, action, information</i>)
CONTACT	Establish communications with...(your details have been passed)
CORRECT	True or accurate
CORRECTION	An error has been made in this transmission (or message indicated). The correct version is...
DESCEND ‡	Descend and maintain
DISREGARD	Ignore
FANSTOP	I am initiating a practice engine failure after take-off. (Used only by pilots of single engine aircraft). The response should be, "REPORT CLMBING AWAY"
FREECALL	Call...(unit) (your details have not been passed – mainly used by military ATC)

Word/Phrase	Meaning
HOLD SHORT **	Stop before reaching the specified location NOTE: Only used in limited circumstances where no defined point exists (e.g. where there is no suitably located holding point), or to reinforce a clearance limit
HOW DO YOU READ	What is the readability of my transmission?
I SAY AGAIN	I repeat for clarity or emphasis
MAINTAIN ‡	Continue in accordance with the condition(s) specified or in its literal sense, e.g. "Maintain VFR"
MONITOR	Listen out on (frequency)
NEGATIVE	No; or Permission not granted; or That is not correct; or Not capable
NEGATIVE I SAY AGAIN	May be used if repeated incorrect readbacks are given by the pilot and additional emphasis is required
OUT *	This exchange of transmissions is ended, and no response is expected
OVER *	My transmission is ended, and I expect a response from you
PASS YOUR MESSAGE	Proceed with your message
READ BACK	Repeat all, or the specified part, of this message back to me exactly as received
RECLEARED	To be used only in relation to routings and NOT for instructions to climb or descend
REPORT **	Pass me the following information
REQUEST	I should like to know ...or I wish to obtain...
ROGER	I have received your last transmission
SAY AGAIN	Repeat all, or the following part of your last transmission
SPEAK SLOWER	Reduce your rate of speech
STANDBY	Wait and I will call you NOTE: No onward clearance to be assumed. The caller would normally re-establish contact if the delay is lengthy. STANDBY is not an approval or denial
UNABLE	I cannot comply with your request, instruction, or clearance <i>(Unable is normally followed by a reason)</i>
WILCO	I understand your message and will comply with it (abbreviation for will comply)

Word/Phrase	Meaning
WORDS TWICE	<i>As a request:</i> Communication is difficult. Please send every word twice <i>As information:</i> Since communication is difficult, every word in this message will be sent twice

* Not normally used in U/VHF Communications.

** Not used by Air/Ground Communication Service Operators (c/s "Radio").

‡ Not used by Air/Ground Communication Service Operators (c/s "Radio") or Flight Information Service Officers (c/s "Information").

Callsigns for Aeronautical Stations

2.19 Aeronautical stations are identified by the name of the location followed by a suffix except that the name of the rig/platform/vessel is normally used by offshore mineral extraction agencies. The suffix indicates the type of service being provided.

Table 9

Service	Suffix
Area Control	CONTROL
Radar (in general)	RADAR
Approach Control	APPROACH
Aerodrome Control	TOWER
Approach Control Radar Arrival/Departure	DIRECTOR/DEPARTURE (RADAR - when tasks combined) /ARRIVAL – (when approved)
Ground Movement Control	GROUND
Military Aerodrome Traffic Zone (MATZ) Crossing	ZONE
Precision Approach Radar	TALKDOWN
Flight Information	INFORMATION
Air/Ground Communication Service	RADIO
Clearance Delivery *	DELIVERY

* Clearance Delivery Officer (CDO) positions may be established at aerodromes to relay ATC departure clearances. Standard phraseology for CDO departure clearance is referenced in Chapter 11, under ATC Clearance heading. A CDO shall not relay start, pushback, taxi, or take-off instructions. NOTE: Lower Airspace Radar Service (LARS) is available from participating Air Traffic Service Units (ATSU) as described in UK AIP ENR 1.6.

- 2.20 There are three main categories of aeronautical telecommunications service.
1. Air Traffic Control Service (ATC) which can only be provided by licensed Air Traffic Control Officers who are closely regulated by the relevant regulatory authority.
 2. Flight Information Service can be provided only by licensed Flight Information Service Officers (FISOs), who are also regulated by the CAA.
 3. Aerodrome Air/Ground Communication Service (AGCS) which can be provided by Radio Operators who are not licensed but have obtained a certificate of competency to operate radio equipment on aviation frequencies from the CAA signed by the Wireless Telegraphy (WT) act licence holder. These operations come under the jurisdiction of the radio licence holder but are not regulated in any other way.

Other categories of aeronautical communications service include VOLMET, SIGMET, Automatic Terminal Information Service (ATIS) or Aeronautical Information Services (AIS).

- 2.21 It is an offence to use a callsign for a purpose other than that for which it has been notified.
- 2.22 The use of the calling aeronautical station's callsign followed by the answering aeronautical station's callsign shall be considered the invitation to proceed with transmission by the station calling. The use of the phrase 'Pass your message' may be used when considered appropriate.
- 2.23 When satisfactory communication has been established, and provided that it will not be confusing, the name of the location or the callsign suffix may be omitted.
- 2.24 Telephone procedures to be applied by civil controllers are published in CAP 493 (Manual of Air Traffic Services Part 1).

Callsigns for Aircraft

- 2.25 When establishing communication, an aircraft shall use the full callsigns of both stations.



Borton Tower, G-ABCD



G-ABCD, Borton
Tower, pass your
message

- 2.26 After satisfactory communication has been established, and provided that no confusion is likely to occur, the ground station may abbreviate callsigns (see table below). A pilot may **only** abbreviate the callsign of their aircraft if it has **first** been abbreviated by the aeronautical station.

Table 10

Full callsign	Abbreviation
GBFRM	G-RM
Speedbird GBGDC	Speedbird DC
N31029	N029
N753DA	N3DA
* Midland 640	No abbreviation
** Piper GBSZT	Piper ZT
** Helicopter GABCD	Helicopter CD
*** PHABC	P-BC

* Represents a Type C callsign.

** The name of either the aircraft manufacturer, or name of aircraft model, or name of the aircraft category (e.g. helicopter or gyrocopter) may be used as a prefix to the callsign.

***ICAO Type 'a' callsign as described in ICAO 9432, Manual of Radiotelephony at paragraph 2.7.2.1. - "Type a) the first and at least the last two characters of the aircraft registration;"

2.27 An aircraft should request the service required on initial contact when freecalling a ground station.



Westbury Approach, G-ABCD, request Basic Service



G-ABCD, Westbury Approach, pass your message

2.28 An aircraft shall not change its callsign type during a flight. **However**, where there is a likelihood that confusion may occur because of similar callsigns, an aircraft may be instructed by an air traffic service unit (ATSU) to change the type of its callsign temporarily.

2.29 The similarity of some aircraft callsigns on the same frequency can cause confusion which may lead to an incident. The following are particularly liable to be confused:

1. Callsigns which have three or more digits in common, especially when the flight numbers are the same, e.g. AIC 515 and SAS 515.
2. Aircraft with similar registrations, e.g. G-ASSB and G-ATSB or HB-SSB. Controllers are to warn the pilots concerned and, if necessary, instruct one or both aircraft to use alternative or full callsigns while they remain on the frequency.

2.30 For aircraft in the SUPER or HEAVY wake turbulence category, the word 'Super' or 'Heavy' shall be included, as appropriate, immediately after the

aircraft callsign in the initial RTF contact between such aircraft and ATSU's. The purpose of this call is to confirm the aircraft type and/or wake turbulence category is the same as that stated on the flight progress strip. Types assigned to the SUPER category by the CAA are the Airbus A380-800 and Antonov AN-124 Ruslan.

Police Flights

2.31 A Police flight is defined as a flight by an aircraft operating under a Police Air Operator's Certificate, the purpose of which is to facilitate police operations, which includes the following:

1. Responding to a 'Police Emergency'. The pilot of a police aircraft is likely to declare a 'Police Emergency' in situations where an immediate response is required when life is at immediate risk, or a serious crime or major incident is in progress.
2. Supporting ground personnel in often sensitive and serious operations.
3. Non-standard and other flights.

The callsign for a Police flight consists of three elements:

1. The radiotelephony callsign 'POLICE';
2. A two, or exceptionally three-digit individual aircraft identifier;
3. The two, or three-digit aircraft identifier may be suffixed with a flight category to indicate the priority required by the pilot. Suffix "Alpha" indicates a 'Police Emergency' is in progress, e.g., "POLICE 01 Alpha". The absence of a suffix indicates the flight is to be handled as flight category 'B'. Suffix "Zulu" indicates flight training, testing or other flights involving Police aircraft, e.g., "POLICE 01 Zulu".

The flight categories relevant to Police flying operations are:

1. Flight Category A: authorised for use by aircraft which have declared a 'Police Emergency'.
2. Flight Category B: normal operational priority.
3. Flight Category Z: used for training, test and other flights involving Police aircraft.

Helicopter Emergency Medical Service Flights

2.32 A HEMS flight is a flight by a helicopter operating under a HEMS approval, the purpose of which is to facilitate emergency medical assistance, where immediate and rapid transportation is essential.

The callsign for a HEMS flight consists of three elements:

1. The radiotelephony callsign 'HELIMED';
2. A two-digit individual aircraft identifier allocated to each HEMS aircraft by CAA;
3. The two-digit individual aircraft identifier may be suffixed with the flight category to indicate the priority required by the pilot. Suffix "Alpha", "Echo", or "Zulu" indicates the corresponding flight category. The absence of a suffix indicates the 'normal flight' category, e.g. "HELIMED 01".

The flight categories relevant to HEMS operations are:

1. Flight Category A: applies to all HEMS flights, as defined at above paragraph.
2. Flight Category E: is authorised for use by an aircraft positioning for the purpose of conducting HEMS duties, e.g., returning to base after delivering a casualty to hospital. It is afforded priority over normal flights.
3. Flight Category Z: is used for training flights.

Search And Rescue

2.33 SAR flights operate to and from incidents where a response is required for the safety of life, which might be time critical and may also involve the transportation of casualties to hospital.

The callsign for SAR flights consists of the following elements:

1. The radiotelephony callsign is task dependent and will be "COASTGUARD" or "BRITISH RESCUE". "COASTGUARD" callsigns can be re-tasked by the JRCC and such flights will adopt the "BRITISH RESCUE" callsign. In addition, SAR helicopters may on occasions be required to undertake HEMS tasks and will also use the "BRITISH RESCUE" callsign. The callsign "BRITISH RESCUE" may be abbreviated to "RESCUE", by an Air Traffic Services Unit within the UK FIR when appropriate after initial contact;
2. A three-digit individual aircraft callsign allocated to each SAR Base and aircraft by the Joint Rescue Coordination Centre (JRCC);
3. The three-digit individual aircraft identifier may be suffixed with the flight category to indicate the priority required by the pilot. Suffix "Alpha",

“Bravo”, “Echo”, or “Zulu” indicates the corresponding flight category. The absence of a suffix indicates the ‘normal flight’ category.

The flight categories relevant to SAR operations are:

1. Flight Category A: applies to SAR flights when the safety of life is involved, including HEMS tasks. Callsign “BRITISH RESCUE [XXX] Alpha”.
2. Flight Category B: applies to SAR or humanitarian flights when priority is required, including HEMS tasks. Callsign “BRITISH RESCUE [XXX] Bravo”.
3. Flight Category E: is authorised for use by SAR aircraft carrying out a positioning flight following a SAR or HEMS task, e.g., returning to its base after delivering a patient/casualty. Callsign “COASTGUARD [XXX] Echo”.
4. Normal Flight Category: applies to SAR aircraft in circumstance when additional priority is not required. Callsign “COASTGUARD [XXX]”.
5. Flight Category Z: used for training and testing flights in SAR aircraft. Callsign “COASTGUARD [XXX] Zulu”.

Prefixes

- 2.34 The use of a number of callsign prefix are detailed within CAP 413. In most cases it is indicated that prefixes such as this should be used on initial contact only; however, there may be circumstances where continued use of the prefix will help to enhance situational awareness, i.e. pilots of aircraft joining the aerodrome traffic circuit may not know that there are student pilots already operating within the traffic circuit. In such circumstances the continued use of the ‘STUDENT’ prefix could enhance the joining pilot’s situational awareness. In a similar manner, the use of other prefixes beyond the initial call may assist in developing and maintaining situational awareness. The following prefixes are known to be in common use:

Student

Helicopter

Glider

Microlight

Balloon

Fastjet

Fastprop

Flexwing

Gyro

ATS Providers/Flying Training Organisations/Aircraft Operators may use additional or alternative callsign prefix and/or suffix to aid situational awareness and these would normally be detailed in local instructions as appropriate.

Student Flights

- 2.35 On initial contact with an ATSU, student pilots who are flying solo shall use the callsign prefix 'STUDENT¹'. Once acknowledged, it will not normally be necessary for student pilots to use the prefix in subsequent transmissions unless they feel they are being instructed to do something with which they are unfamiliar.
- 2.36 Controllers will acknowledge the initial call, again using the prefix, and can be expected, as far as practicable, to make due allowance for the limited experience and ability of student pilots in determining the pace and complexity of instructions and/or information which are subsequently passed.



Walden Tower, STUDENT G-ABCD, on the apron, request taxi for local VFR flight



STUDENT G-ABCD, Walden Tower, taxi holding point Alpha, runway 24



Wrayton Information, STUDENT G- ABCD, request Basic Service



STUDENT G-ABCD, Wrayton Information, pass your message

- 2.37 Flight Instructors must brief students, specifically, on the use of this callsign prefix as part of their pre-solo briefing. The use of this callsign prefix is not intended to remove the additional requirement for flight instructors to notify ATSUs separately of 'first solo' flights where this is normal practice.

High Speed Flights

- 2.38 When receiving an ATS surveillance service, certain ex-military aircraft types have been granted a CAA exemption from the Air Navigation Order requirement to fly at an Indicated Airspeed (IAS) less than 250 kt below Flight Level 100. In order to alert the controller to this higher speed profile, pilots of exempted aircraft shall, on initial contact, prefix the aircraft callsign with 'FASTJET' or 'FASTPROP' (depending on propulsion type), e.g. "Kennington

¹ Although intended primarily for use by ab-initio students, the prefix shall also be used in other circumstances where, for example, the holder of a valid licence is returning to flying practice after a significant absence and is undergoing renewal training involving solo flight conducted as a student under the supervision of a flight instructor.

Radar, FASTJET G-ABCD request Deconfliction service". Use of this prefix shall be confined to initial contact with ATC agencies for periods of flight during which operations at airspeeds in excess of 250 kt are intended. Once acknowledged, it will not normally be necessary for pilots to use the prefix in subsequent transmissions until making initial contact with other ATSU's.

Unmanned Flights

- 2.39 All unmanned flight callsigns shall include the word 'UNMANNED', on first contact with the ATS provider, to ensure that air traffic controllers are fully aware that they are dealing with an unmanned flight.

Military Aircraft Callsigns

- 2.40 When establishing communication, an aircraft shall use the full callsigns of both stations.

Standard Callsigns

- 2.40 Most UK military flying units are assigned an ICAO registered callsign root, comprising a Three-Letter Designator (TLD) and associated RT designator, with a numerical suffix as the pilot or task number, e.g. CWL84 (Cranwell 84).

Some TLDs and corresponding RT designators are assigned to force elements, e.g. RRR (ASCOT) for Air Transport and Air-to-Air Refuelling fleet.

TLDs for units without an assigned RT designator are referred to phonetically, e.g. VYT - Victor Yankee Tango). Number suffixes may be assigned to a specific pilot; three figure pilot numbers are generally only used by Operational Conversation Unit pilots and unqualified student pilots. A task number may be used instead of a pilot number. Number suffixes added to the TLD will not exceed 7 characters to meet Flight Data Processing system requirements. All TLD and their associated RT designators are published in ICAO Document 8585; military policy for air/ground callsigns is contained within JSP 506.

Mission Callsigns

- 2.41 On some occasions, mission callsigns will be used. These will consist of a 3-character prefix of numbers and letters (trigraph) as the callsign root, with a numerical suffix as a mission identifier.

Formation Word Callsigns

- 2.42 Formation word callsigns facilitate control of multiple aircraft within one speaking unit, although they are not recognised by ICAO. These may be a single word, or a word and numerical suffix followed by 'flight', dependent on the communication standard used by that flying unit. Individual elements of a formation are identified by adding a numerical suffix to the formation word callsign.

Examples of formation word callsigns:

BLACKCAT – Formation
BLACKCAT 1 - Single aircraft
WARLORD 11 Flight - RAF Typhoon and USAF formation
WARLORD 11 - RAF Typhoon and USAF single aircraft

Collective Callsigns

- 2.43 Collective callsigns permit the control of multiple elements carrying out different functions, or flying as several formations, as a temporary measure. Each aircraft will be allocated its own callsign, but the collective callsign will use the term COMBINE as a suffix, e.g. LOS34, LOS65 and LOS45 becomes LOS34 COMBINE.

Transit Flights

- 2.44 Military aircraft will use either their ICAO approved unit TLD, or the single service designators:

Royal Air Force. TLD RFR, RT designator RAFAIR.
Royal Navy. TLD NVY, RT designator NAVY.
Army Air Corps. TLD AAC, RT designator ARMY AIR.

Callsign Abbreviation

- 2.45 Once positive contact has been established, and provided no possibility of confusion exists, callsigns may be abbreviated as follows (for examples, see Table 10):

1. Standard Callsigns. Where no RTF designator exists, the first letter of the TLD followed by the numerical suffix.
2. Mission Callsigns. As only the third element of the trigraph is always a letter, the abbreviated callsign will be the third element followed by the numerical suffix. Mission callsigns without a numerical suffix cannot be abbreviated.
3. Transit flights. A military identifier followed by whatever the air traffic controller specifies once the full callsign has been used to identify the aircraft.

However, in all cases the responsibility to shorten lies with ATC as they may be dealing with multiple aircraft with similar callsigns.

Flight Plan Entries

- 2.46 TLD RT designators and formation word callsigns are not abbreviated on RTF; however, most Flight Data Processing systems are unable to accept callsigns with greater than 7 characters. Consequently, aircraft identification on flight plans must be abbreviated, when necessary, e.g. BLKCAT4 (BLACKCAT 4). Only the approved abbreviations assigned to the military callsigns should be used, as found in JSP 506.

Mode S Aircraft Identification Setting

- 2.47 Mode S Aircraft Identification Settings for military aircraft should directly correlate with the flight plan entry. When no flight plan is filed, the JSP 506 abbreviation should still be used.

Continuation of Communications

- 2.48 The placement of the callsigns of both the aircraft and the ground station **within** an established RTF exchange should be as follows:

- 2.49 Ground to Air: Aircraft callsign – message or reply.

Air to Ground:

1. Initiation of new information/request etc. – Aircraft callsign then message;
2. Reply – Repeat of pertinent information/readback/acknowledgement then aircraft callsign.



G-ABCD, descend FL80



Descend FL80, G-ABCD



G-ABCD, maintaining FL80



G-CD



G-ABCD, request descent



G-CD, descend FL40



Descend FL40, G-CD

- 2.50 When it is considered that reception is likely to be difficult, important elements of the message should be spoken twice.
- 2.51 When a ground station wishes to broadcast information to all aircraft likely to receive it, the message should be prefaced by the call 'All stations'. No reply is expected to such general calls unless individual stations are subsequently called upon to acknowledge receipt.



All stations Wrayton Control,
Colinton VOR on test

- 2.52 If there is doubt that a message has been correctly received, a repetition of the message shall be requested either in full or in part.

Table 11

Phrase	Meaning
Say again	Repeat entire message
Say again...(item)	Repeat specific item
Say again all before...(the first word satisfactorily received)	
Say again all after... (the last word satisfactorily received)	
Say again... (word before missing portion) to... (word after missing portion)	

- 2.53 When a station is called but is uncertain of the identification of the calling station, the calling station should be requested to repeat its callsign until identification is established.



Stourton Ground,
BIGJET 347



Station calling Stourton
Ground say again your
callsign

Corrections and Repetitions

- 2.54 When an error is made in a transmission the word 'CORRECTION' shall be spoken, the last correct group or phrase repeated and then the correct version transmitted.



BIGJET 347, Wicken 47
FL280 Marlow 07 correction
Marlow 57



BIGJET 347, Roger

- 2.55 If a correction can best be made by repeating the entire message, the operator shall use the phrase 'CORRECTION I SAY AGAIN' before transmitting the message a second time.

Acknowledgement of Receipt

- 2.56 Acknowledgements of information should be signified by the use of the receiving stations' callsign or 'Roger callsign', and not by messages such as: 'callsign-copy the weather' or 'callsign-copy the traffic'.

Transfer of Communications

- 2.57 To transfer communications with an aircraft to another unit, controllers shall pass instructions giving:

1. the identity of the unit to be contacted;
 2. the frequency to be used for contact.
- 2.58 Transfer of communication instructions should be passed in a single message. Items which require a read-back should normally be passed in a separate transmission before transfer.
- 2.59 If no further communication is received from the pilot after an acknowledgement, satisfactory transfer of communication may be assumed.
- 2.60 An aircraft will normally be advised by the appropriate aeronautical station to change from one radio frequency to another in accordance with agreed procedures.



BIGJET 347, contact
Wrayton Control, 129.125



Wrayton Control
129.125, BIGJET 347

In the absence of such advice, the aircraft shall notify the aeronautical station before such a change takes place. Aircraft flying in controlled airspace must obtain permission from the controlling authority before changing frequency.

- 2.61 An aircraft may be instructed to 'standby' on a frequency when it is intended that the ATSU will initiate communications, and to monitor a frequency on which information is being broadcast.



BIGJET 347, standby for
Kennington Tower 118.950



Standby for Kennington
Tower 118.950, BIGJET 347



BIGJET 347, monitor ATIS
128.275



Monitor ATIS 128.275,
BIGJET 347

- 2.62 The controller may instruct the pilot to contact another agency on passing a specific point or when passing, leaving or reaching a specified level.



G-CD, at Littletown contact
Borton Approach 122.375



At Littletown contact Borton
Approach 122.375, G-CD



BIGJET 347, when passing
FL120 contact Wrayton
Control 119.725



When passing FL120
contact Wrayton Control
119.725, BIGJET 347

- 2.63 Where the aircraft is transferred to another agency whilst on a heading, the controller will instruct the pilot to report the heading to the next agency.



BIGJET 347, report
heading to Wrayton
Control, 129.125

- 2.64 If the airspace does not dictate that an aircraft must remain in contact with a specific ATSU, and the pilot wishes to freecall another agency they should request or notify such an intention.



Westbury, G-CD, request change to
Wrayton Information 125.750



Wrayton Information, G-CD,
changing to Wrayton Centre 121.5
for Practice Pan

Clearance Issue and Read-back Requirements

- 2.65 Provisions governing clearances are contained in SERA 8015. A clearance may vary in content from a detailed description of the route and levels to be flown to a brief standard instrument departure (SID) according to local procedures.
- 2.66 Controllers will pass a clearance slowly and clearly since the pilot needs to write it down, thereby avoiding wasteful repetition. Whenever possible, a route clearance should be passed to an aircraft before start-up and the aircraft's full callsign will always be used. A route clearance and local departure instructions shall not be passed in the same transmission. When a route clearance is passed after local departure instructions, or to an aircraft that is already airborne, tactical restrictions that remain in place shall be reiterated to ensure that the immediate profile to be flown by the pilot is unambiguous. **Generally, controllers will avoid passing a clearance to a pilot engaged in complicated taxiing manoeuvres and on no occasion when the pilot is engaged in line up or take-off manoeuvres.**
- 2.67 An ATC route clearance is **NOT** an instruction to take-off or enter an active runway. **The words 'TAKE-OFF' are used only when an aircraft is cleared for take-off (or if the take-off clearance is cancelled (see paragraph 4.41)). At all other times the word 'DEPARTURE' is used.**
- 2.68 The stringency of the read back requirement is directly related to the possible seriousness of a misunderstanding in the transmission and receipt of ATC clearance and instructions. **ATC route clearances shall always be read back unless otherwise authorised by the appropriate ATS authority** in which case they shall be acknowledged in a positive manner. Read backs shall always include the aircraft callsign.



BIGJET 347, cleared to Kennington via A1, at FL60, squawk 5501



Cleared to Kennington via A1, at FL60, squawk 5501, BIGJET 347



BIGJET 347, correct



BIGJET 347, cleared to Kennington via A1, Wicken 3 Delta departure, squawk 5501



Cleared to Kennington via A1, Wicken 3 Delta departure, squawk 5501, BIGJET 347



BIGJET 347, correct



G-ABCD, after departure cleared to zone boundary via route Echo. Climb to altitude 2000 feet QNH 1008, squawk 6522



After departure cleared to zone boundary via route Echo. Climb to altitude 2000 feet QNH 1008, squawk 6522, G-ABCD





G-CD, correct

2.69 The ATS messages listed below are to be read back in full by the pilot/ driver. If a readback is not received the pilot/driver will be instructed to do so. Similarly, the pilot/ driver is expected to request that instructions are repeated or clarified if any are not fully understood.

1. Taxi/Towing Instructions
2. Level Instructions
3. Heading Instructions
4. Speed Instructions
5. Airways or Route Clearances
6. Approach Clearances
7. Runway-in-Use
8. Clearance to Enter, Land On, Take-Off On, Backtrack, Cross, or Hold Short of any Active Runway

9. SSR Operating Instructions
10. Altimeter Settings, including units when value is below 1000 hectopascals
11. VDF Information
12. Frequency Changes
13. Type of ATS Service
14. Transition Levels

	G-ABCD, cleared to cross A1 at Wicken, maintain FL70 whilst in controlled airspace. Report entering the airway		Cleared to cross A1 at Wicken, maintain FL70 in controlled airspace, Wilco, G-ABCD
---	--	---	--


	G-CD, hold position		Holding, G-CD
---	---------------------	---	---------------


	G-CD, contact Ground 118.050		Ground 118.050, G-CD
---	------------------------------	---	----------------------


	BIGJET 347, Squawk 6402		6402, BIGJET 347
---	-------------------------	---	------------------

2.70 Items which do not appear in the above list may be acknowledged with an abbreviated read back.

2.71 If an aircraft read back of a clearance or instruction is incorrect, the controller shall transmit the word 'NEGATIVE' followed by the correct version.

	G-CD, QNH 1003		QNH 1013, G-CD
---	----------------	--	----------------

	G-CD, Negative, QNH 1003
--	--------------------------

	QNH 1003, G-CD
--	----------------

- 2.72 If at any time a pilot receives a clearance or instruction with which they cannot comply, they should advise the controller using the phrase 'UNABLE' (COMPLY) and give the reason(s).



BIGJET 347, Wrayton climb
FL280, cross Wicken FL150
or above



Wrayton, BIGJET 347,
unable cross Wicken
FL150 due weight

- 2.73 When an amendment is made to a clearance the new clearance shall be read in full to the pilot and shall automatically cancel any previous clearance. Controllers must be aware, therefore, that if the original clearance included a restriction, e.g. "cross KTN FL150 or below" then the issue of a revised clearance automatically cancels the earlier restriction, unless it is reiterated with the revised clearance.
- 2.74 When any doubt exists as to whether a message containing critical information has been passed by the controller or received and understood by the pilot, the message must be repeated. Critical information is information, other than that required to enable routine flight, which must be received by pilots to ensure the safety and effective operation of their aircraft.
- 2.75 The following can be considered as examples of critical information:
1. Low Visibility Procedures.
 2. Windshear Warnings.
 3. Essential Aerodrome Information.
 4. Equipment serviceability (i.e. ILS/navigational aids).
 5. Weather hazards (thunderstorms, hail, icing, etc.).

Withholding Clearances

- 2.76 It may be considered expedient by UK Government to withhold an ATC clearance to aircraft. This may include an aircraft that is planning to enter, land or depart UK airspace or is already in UK airspace in breach of UK sanctions.

When authorised by the UK Government through the parent ACC unit or Airport Authority, the following phraseology is to be used.



BIGJET 347, I am instructed by His
Majesty's Government to refuse entry
into United Kingdom airspace. What are
your intentions?



BIGJET 347, I am instructed by His Majesty's Government to inform you that landing clearance has been refused for any airfield within the United Kingdom. What are your intentions?



BIGJET 347, I am instructed by His Majesty's Government that you are to hold at (e.g. exact reporting point, airfield position or latitude/longitude) at (level). Acknowledge.

NOTE: If the aircraft is on the ground the Airport Authority will be the coordinating authority with UK Government.

- 2.77 The Aerodrome Operator and certain other persons are empowered to prohibit flight, and they may instruct a controller to withhold a clearance. If a controller has not been instructed to withhold clearance but has reason to believe that a planned flight is liable to endanger life or involve a breach of legislation, the controller is to warn the pilot of the hazardous condition or apparent infringement and obtain an acknowledgement of the message. The hazardous condition may be reported by an outside agency or observed by the controller. Because of possible legal action when pilots disregard the warnings described above, it is essential that clear and precise messages are passed to the pilots concerned and acknowledgements obtained. Further transmissions may be necessary to ascertain the intentions of the pilot.



BIGJET 347, I am informed that there may be damage to the port wing tip of your aircraft. It appears that your planned flight is liable to endanger life. Acknowledge



G-ABCD, you are advised surface wind 280 degrees 37 knots gusting 50. It appears that your planned flight is liable to endanger life. Acknowledge

- 2.78 In the case of an anticipated infringement of legislation the controller is to warn the pilot that if they do take-off the facts will be reported to the appropriate authority.



G-ABCD, your planned flight appears to contravene legislation because the required minima for VFR flight are not present. If you depart, I shall be required to report the facts. Acknowledge

Simultaneous Transmissions

2.79 Direct communications between pilots and ATSU's can be adversely affected by simultaneous transmissions which effectively block all or part of intended messages. Moreover, whilst the situation may be apparent to the controller or another pilot, the individuals who inadvertently make such transmissions may be unaware. On hearing a simultaneous transmission, it can be helpful for the controller (or another pilot if it is the controller's transmission which has been blocked) to draw attention to the situation using the word 'blocked'.

2.80 Controller Example (where pilots have transmitted simultaneously).



Transmission Blocked, (callsign if known)
say again

2.81 Pilot Example (where another pilot has blocked a controller's transmission).



Transmission Blocked, Wrayton say
again, BIGJET 345

Complying with Clearances and Instructions

2.82 Pilots are expected to comply with clearances and instructions promptly, commensurate with normal aircraft operations. If, for any reason, a pilot does not wish to comply with an instruction promptly, the pilot should advise the ATSU and give an indication of when they intend to comply.

2.83 If an ATSU wishes to indicate that time of compliance is at the pilot's discretion, the ATS message will include the phrase 'when ready'.

2.84 If an ATSU wishes to indicate that the clearance or instruction is required to be complied with at a particular point in the flight, the message will include the phrase 'after passing'.

2.85 If an ATSU wishes to indicate that the instruction or clearance must be complied with at once, the controller's message will include the word 'now' or 'immediately'. Use of the word 'now' indicates that the instruction should be complied with in accordance with normal aircraft operating procedures, but without delay. Use of the word 'immediately' indicates a further degree of urgency exists (e.g. to avoid flight into terrain or restricted airspace, or for the provision of collision avoidance). In such circumstances, the pilot should take

action to comply with the instruction as soon as practicable, subject to the safety of the aircraft.

- 2.86 In order to ensure any restriction is not blocked by a pilot acknowledgement, the phrase or word, indicating when a clearance or instruction should be complied with, will normally be placed before the executive instruction, but in certain cases the phrase or word may be placed between the instruction and the value of the instruction.
- 2.87 The phrases and words described in this section are most commonly used in association with level instructions but may be used in other circumstances if appropriate. Examples are shown below:



BIGJET 347, *after passing* North Cross, descend FL80



After passing North Cross, descend FL80, BIGJET 347



BIGJET 347, *when ready* descend FL170, Report leaving FL210



When ready descend FL170. Report leaving FL210, BIGJET 347



BIGJET 347, reduce speed *now* 210 kt



Reducing speed *now* 210 kt, BIGJET 347



BIGJET 347, climb *immediately* FL50



Climbing *immediately* FL50, BIGJET 347

Communication Failure

Air – Ground

- 2.88 Check the following points:
1. The correct frequency has been selected for the route being flown.
 2. The Aeronautical Station being called is open for watch.
 3. The aircraft is not out of radio range.
 4. Receiver volume correctly set.
 5. If the previous points are in order, it may be that the aircraft equipment is not functioning correctly. Complete the checks of headset and radio installation appropriate to the aircraft.
 6. When an aircraft station is unable to establish contact with the aeronautical station on the designated frequency it shall attempt to establish contact on another frequency appropriate to the route being

flown. If this attempt fails, the aircraft station shall attempt to establish communication with other aircraft or other aeronautical stations on frequencies appropriate to the route.

7. The pilot may still be unable to establish communication on any designated aeronautical station frequency, or with any other aircraft. The pilot is then to transmit their message twice on the designated frequency, including the addressee for whom the message is intended, preceded by the phrase 'TRANSMITTING BLIND' in case the transmitter is still functioning.
8. Where a transmitter failure is suspected, check or change the microphone. Listen out on the designated frequency for instructions. It should be possible to answer questions by use of the carrier wave if the microphone is not functioning (see Chapter 8 - Speechless Code).
9. In the case of a receiver failure transmit reports twice at the scheduled times or positions on the designated frequency preceded by the phrase 'TRANSMITTING BLIND DUE TO RECEIVER FAILURE'.
10. An aircraft which is being provided with air traffic control service, advisory service or aerodrome flight information service is to transmit information regarding the intention of the pilot in command with respect to the continuation of the flight. Specific procedures for the action to be taken by pilots of IFR and Special VFR flights are contained in the appropriate AIP ENR and/or AD sections.

Ground – Air

- 2.89 After completing checks of ground equipment (most airports have standby and emergency communications equipment) the ground station will request other aeronautical stations and aircraft to attempt to communicate with the aircraft which has failed to maintain contact.
- 2.90 If still unable to establish communication the aeronautical station will transmit messages addressed to the aircraft by blind transmission on the frequency on which the aircraft is believed to be listening.
- 2.91 These will consist of:
 1. the level, route and EAT (or ETA) to which it is assumed the aircraft is adhering;
 2. the weather conditions at the destination aerodrome and suitable alternate and, if practicable, the weather conditions in an area or areas suitable for descent through cloud procedure to be effected. (See AIP ENR Section).

Test Transmissions

- 2.92 All radio transmissions for test purposes shall be of the minimum duration necessary for the test and shall not continue for more than 10 seconds. The recurrence of such transmissions shall be kept to the minimum necessary for the test.
- 2.93 The nature of the test shall be such that it is identifiable as a test transmission and cannot be confused with other communications. To achieve this the following format shall be used:
1. the callsign of the aeronautical station being called;
 2. 'the aircraft identification';
 3. the words 'RADIO CHECK';
 4. 'the frequency' being used.
- 2.94 The operator of the aeronautical radio station being called will assess the transmission and will advise the aircraft making the test transmission in terms of the readability scale (Table 12), together with a comment on the nature of any abnormality noted (i.e. excessive noise) using the following format:
1. 'the aircraft identification';
 2. 'the callsign' of the aeronautical station replying;
 3. 'READABILITY x' (where 'x' is a number taken from Table 12);
 4. 'additional information' with respect to any noted abnormality.

NOTE: For practical reasons it may be necessary for the operator of an aeronautical station to reply with 'STATION CALLING (frequency or 8.33 channel) UNREADABLE'.

Table 12

Readability Scale	Meaning
1	Unreadable
2	Readable now and then
3	Readable but with difficulty
4	Readable
5	Perfectly readable



Borton Tower, G-
ABCD, radio check
118.725



G-ABCD, Borton Tower,
readability 5

or,



G-CD, Borton Tower,
readability 3 with a loud
background whistle

or,



Station calling Borton
Tower readability 1

Pilot Complaints Concerning Aeronautical Telecommunications

- 2.95 Pilots should report faults concerning services and facilities in the Aeronautical Mobile Broadcast and Navigation Services to the Briefing Officer, Senior Telecommunications Officer or Senior Controller at the destination or airport of first landing in order that remedial action can be taken. Reports of local unserviceabilities will be forwarded to the Telecommunications staff if received on RTF by the ATSU.

Air Traffic Service Complaints Concerning Aircraft Communications

- 2.96 Aircraft radio faults including technical failure, incorrect operating procedures and misuse of specific radio channels may result in the aircraft operator receiving a communication from the CAA detailing the fault condition inviting the operator to explain and/or state what corrective action has been taken.

Hours of Service and Communications Watch

- 2.97 The hours of service of the radio facilities available in the United Kingdom are published in the UK AIP (ENR and AD) which also details those periods set aside for maintenance.
- 2.98 Aircraft stations shall, if possible, communicate directly with the ATSU appropriate to the area in which the aircraft are flying. If unable to do so, aircraft stations shall use any relay means available and appropriate to transmit messages to the ATSU.
- 2.99 When normal communications from an aeronautical station to an aircraft station cannot be established, the aeronautical station shall use any relay means available and appropriate to transmit messages to the aircraft station.
- 2.100 When an aircraft has established communication with an ATSU it is required to maintain a listening watch with that ATSU and advise the ATSU when the listening watch is about to cease. Aircraft should not cease to maintain a listening watch, except for reasons of safety, without informing the ATSU concerned. A time at which it is expected that the watch will be resumed must be stated.

Record of Communications

2.101 All ATC units have automatic equipment to record air-ground communications and some other ATSU's (e.g. AFIS) also have such equipment.

Categories of Message

2.102 The categories of messages handled by the aeronautical mobile service are in the following order of priority:

1. Distress messages.
2. Urgency messages, including } See Chapter 8 – Emergency
messages preceded by the } Phraseology.
medical transports signal.
3. Communications relating to } See Chapter 6.
direction finding.
4. Flight safety messages. } See Chapter 9.
5. Meteorological messages. } See Chapter 4 – Aerodrome
Information.
6. Flight Regularity messages. } See Chapter 9.
7. Messages relating to the application of the United Nations Charter.
8. Government messages for which priority has been expressly
requested.
9. Service Communications relating to the working of the
telecommunication service or to communications previously
exchanged.
10. Other aeronautical communications.

Chapter 3: General Phraseology

General

Introduction

- 3.1 The phraseology detailed in this manual has been established for the purpose of ensuring uniformity in RTF communications. Communications shall be concise and unambiguous, using standard phraseology for all situations for which it is specified. It is not practicable to detail phraseology examples suitable for every situation. However, if standard phrases are adhered to when composing a message, any possible ambiguity will be reduced to a minimum. Only when standard phraseology cannot serve an intended transmission, shall plain language be used.
- 3.2 Some abbreviations, which by their common usage have become part of aviation terminology, may be spoken using their constituent letters rather than the spelling alphabet, for example, ILS, QNH, RVR, etc., (see Chapter 1, Abbreviations).
- 3.3 For all transmissions, with the exception of those used for surveillance radar approaches or precision radar approaches, the word 'degrees' shall be appended to heading figures where the heading ends in zero, or in cases where confusion or ambiguity may result.
- 3.4 For all transmissions, the word 'hectopascal' shall be appended to figures when transmitting a pressure setting below 1000 hPa, or in cases where confusion or ambiguity may result.
- 3.5 The following words may be omitted from transmissions provided that no confusion or ambiguity may result:
1. 'Surface' and 'knots' in relation to surface wind direction and speed.
 2. 'Degrees' in relation to surface wind direction.
 3. 'Visibility', 'cloud' and 'height' in meteorological reports.
 4. 'Over', 'Roger' and 'out'.
- 3.6 The excessive use of courtesies should be avoided.

Level Reporting

- 3.7 Only basic level instructions are detailed in this Chapter. More comprehensive phrases are contained in subsequent Chapters in the context in which they are most commonly used.

3.8 The precise phraseology used in the transmission and acknowledgement of climb and descent clearances will vary, depending upon the circumstances, traffic density and nature of the flight operations.

3.9 However, care must be taken to ensure that misunderstandings are not generated as a consequence of the phraseology employed during these phases of flight. For example, levels may be reported as altitude, height or flight levels according to the phase of flight and the altimeter setting. Therefore, when passing level messages, the following conventions apply:

1. The word 'TO' is to be omitted from messages relating to FLIGHT LEVELS.
2. All messages relating to an aircraft's climb or descent to a HEIGHT or ALTITUDE employ the word 'TO' followed immediately by the word HEIGHT or ALTITUDE. Furthermore, the initial message in any such RTF exchange will also include the appropriate QFE or QNH.
3. The phrase 're-cleared' should not be employed.
4. When transmitting messages containing flight levels each digit shall be transmitted separately. However, in an endeavour to reduce 'level busts' caused by the confusion between some levels (100/110, 200/220 etc.), levels which are whole hundreds e.g. FL100, 200, 300 shall be spoken as "Flight level (number) HUN DRED". The word hundred must not be used for headings.



G-CD, report your level



G-CD, maintaining FL70



G-CD, descend FL50



Descend FL50, G-CD




G-CD, report your level





G-CD, maintaining altitude
2500 feet Wessex 998
hectopascals





G-CD, descend to altitude
2000 feet Borton QNH 1000

 Descend to altitude 2000 feet Borton QNH 1000, G-CD

 G-CD, descend to altitude 1500 feet


 Descend to altitude 1500 feet, G-CD

 G-CD, descend to height 1000 feet QFE 997 hectopascals


 Descend to height 1000 feet QFE 997 hectopascals, G-CD


NOTES:


1. Use of the word 'hectopascal' for pressures lower than 1000.
 2. Transmission of Regional Pressure Setting (Wessex) limited to regional name and pressure.
- 3.10 In the following examples the operations of climbing and descending are interchangeable, and examples of only one form are given.


 G-CD, report passing FL80


 Wilco. G-CD















 G-CD, passing FL80

 G-CD, maintain altitude 2500 feet




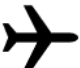
 Maintaining altitude 2500 feet, G-CD

 G-CD, climb FL70

 Climb FL70, G-CD

			G-CD, reaching FL70
	G-CD, request descent		G-CD, descend FL60
			Descend FL60, G-CD
	G-CD, not below FL60		Not below FL60, G-CD
	BIGJET 347, after passing North Cross, descend FL80		After passing North Cross descend FL80, BIGJET 347
	BIGJET 347, stop descent FL210		Stop descent FL210, BIGJET 347
	BIGJET 347, descend FL150, level by South Cross		Descend FL150 level by South Cross, BIGJET 347
	BIGJET 347, climb FL290, level at time 55		Climb FL290, level at time 55, BIGJET 347

3.11 Where the controller requires the aircraft to achieve a specific rate of climb or descent, the controller shall use the phraseology shown below.

	BIGJET 347, climb at 1000 feet per minute or greater		Climb at 1000 feet per minute or greater, BIGJET 347
	BIGJET 347, descend at 500 feet per minute or less		Descend at 500 feet per minute or less, BIGJET 347

3.12 Exceptionally, a best rate of climb or descent may be required. Pilots of aircraft operating within controlled airspace in the London and Scottish FIRs

have been instructed not to operate with a climb or descent rate in excess of 8000 ft/min. Aircraft in an emergency and certain military activities are exempt from this restriction.



BIGJET 347, expedite descent FL180



Expedite descent FL180, BIGJET 347



BIGJET 347, climb FL280 expedite until passing FL180



Climb FL280 expedite until passing FL180, BIGJET 347

or,



BIGJET 347, unable expedite climb due weight

- 3.13 Where the controller requires the aircraft to increase the rate of descent/climb, but a best rate is not required, the controller shall use the phraseology shown below.



BIGJET 347, increase rate of climb



Increase rate of climb, BIGJET 347



BIGJET 347, decrease rate of climb



Decrease rate of climb, BIGJET 347

- 3.14 Under exceptional circumstances, if instant descent/climb is required, the word 'immediately' shall be used.
- 3.15 **Pilots are expected to comply with ATC instructions as soon as they are issued.** However, when a climb/descent is left to the discretion of the pilot, the words 'when ready' shall be used.
- 3.16 Except as described in Chapter 3 - Initial Call - IFR Flights, a pilot receiving a Radar Control Service is not required to report leaving a level, passing a level, or reaching a level, unless specifically requested to do so.



BIGJET 347, when ready climb FL280, report leaving FL200



When ready climb FL280, wilco, BIGJET 347



BIGJET 347, leaving FL200 climbing FL280



BIGJET 347, Roger

- 3.17 When pilots are instructed to report leaving a level, they should advise ATC that they have left an assigned level only when the aircraft's altimeter indicates that the aircraft has actually departed from that level and is maintaining a positive rate of climb or descent, in accordance with published procedures.
- 3.18 To avoid excessive delays to traffic when ATS surveillance systems are not available, controllers may authorise an aircraft to climb or descend in VMC, subject to a number of safeguards, including the pilot agreeing to maintain their own separation from other aircraft.



BIGJET 347,
maintaining own
separation and VMC
descend FL50

Speed Control

- 3.19 Controllers may instruct pilots to increase/decrease speed in order to maintain the appropriate separation.



BIGJET 347, reduce
speed to Mach 0.7



Reduce speed to Mach 0.7,
BIGJET 347



BIGJET 347, maintain
present speed



Maintain present speed,
BIGJET 347



BIGJET 347, maintain
250 knots or greater



Maintain 250 knots or
greater, BIGJET 347



BIGJET 347, not above
250 knots



Not above 250 knots,
BIGJET 347



BIGJET 347, reduce to
minimum clean speed



Reduce to minimum clean
speed, BIGJET 347



BIGJET 347, reduce to minimum approach speed



Reduce to minimum approach speed, BIGJET 347



BIGJET 347, maintain 160 knots until 4 miles final



Maintain 160 knots until 4 miles final, BIGJET 347



BIGJET 347, maintain 160 knots until outer marker



Maintain 160 knots until outer marker, BIGJET 347

3.20 The following phraseology shall be used by controllers when providing speed control to aircraft at or above FL280 that have been cleared to levels below FL280.

3.21 Where the controller only requires speed control to apply following the point at which the aircraft changes over from Mach number to IAS, the phraseology to be used by the controller is:



BIGJET 347, descend FL120, on speed conversion, 250 knots



Descend FL120, on speed conversion, 250 knots, BIGJET 347

3.22 Where the controller requires the aircraft to fly at a specific Mach number until the changeover to IAS and then fly a specified IAS, the phraseology to be used by the controller is:



BIGJET 347, Mach .78, on speed conversion, 250 knots

3.23 Where the controller requires the aircraft to fly the specified IAS as soon as practicable, the phraseology to be used by the controller is:



BIGJET 347, when able, speed 250 knots

3.24 The procedures above may be used in reverse for the application of speed control to aircraft currently below FL280 but climbing to a level above FL280.



BIGJET 347, on speed conversion, Mach .7



BIGJET 347, 250 knots,
on speed conversion,
Mach .7

Initial Call – IFR Flights

Format of Initial Calls

3.25 Pilots of aircraft flying Instrument Departures (including those outside controlled airspace) shall include the following information on initial contact with Approach Control (see also Chapter 6 Approach Phraseology paragraph 6.2):

1. callsign;
2. SID or Standard Departure Route Designator (where appropriate);
3. current or passing level; **PLUS**
4. initial climb level (i.e. the first level at which the aircraft will level off unless otherwise cleared. For example, on a Standard Instrument Departure that involves a stepped climb profile, the initial climb level will be the first level specified in the profile).



Westbury Departure,
BIGJET 347, BIGRO
5D, Passing Altitude
2300 feet climbing FL80



BIGJET 347, Westbury
Departure, Roger

Subsequent Frequency Changes

3.26 Unless otherwise instructed or paragraph 3.25 applies, when changing communication channel to an ATC unit (including changes within the same ATS unit), the initial call on the new channel shall include **aircraft identification and level only**.




Westbury Control,
BIGJET 347, FL350




BIGJET 347, Westbury
Control, Roger

3.27 Level information should be included in the report as follows:

1. If the aircraft is in level flight but cleared to another level, the call shall include the aircraft identification followed by the **current level and the cleared level**.

 Westbury Approach,
BIGJET 347,
Maintaining FL350
cleared FL250

 BIGJET 347, Westbury
Approach, Roger

2. If the aircraft is not in level flight, the call shall include the aircraft identification followed by **cleared level only**.

 Westbury Approach,
BIGJET 347,
descending FL90

 BIGJET 347, Westbury
Approach, Roger

3. If the aircraft has been assigned a speed or a heading, the initial call shall also include the assigned speed or heading.


 Westbury Control,
BIGJET 347, FL 90,
Maintaining 250 knots


 BIGJET 347, Westbury
Control, Roger


Initial Call – VFR Flight


3.28 Normally, the initial call to an ATS unit should only include the minimum information needed to establish:

1. The service that an en-route flight requires; or
2. The clearance/information that a joining or departing flight requires.

 Westbury Approach, G-ABCD, Request
(type of service)

 Westbury Tower, G-ABCD, Request
join

 Westbury Tower, G-ABCD, Request
taxi for departure to Borton

 Westbury Tower, G-ABCD, Request
taxi for the south side maintenance area

 Westbury Tower, G-ABCD, Request
zone transit

The ATS unit will then respond with their callsign and 'Pass Your Message' (optional).

Passing Message Details

Flights on or in the vicinity of an aerodrome

3.29 Pilots of aircraft inbound or outbound to an aerodrome, or wishing to manoeuvre on an aerodrome, when instructed to pass their message details, should respond in the manner described as follows below.





En-route flights

3.30 Generally, the format of this call is applicable to aircraft operating under Visual Flight Rules (VFR). However, aircraft operating under Instrument Flight Rules (IFR), when contacting an ATS unit that does not hold details of the flight, may use the format described as follows below.

3.31 When instructed by the ATS Unit to pass your message details, the reply should contain the following information, whenever possible in the order specified:


1. aircraft callsign/type;
2. departure point and destination;
3. present position;
4. level;
5. additional details/Intention (e.g. flight rules, next route point).


Reply Example 1:


	Westbury Approach, G-ABCD, request Basic Service		G-ABCD, Westbury Approach
			G-ABCD, Cessna 172, from Borton to Walden, 15NM South of Westbury, altitude 2500 feet Wessex 1008, VFR, tracking to Wells
			G-CD Roger, Basic Service, Report Wells


 Basic Service, Wilco, G-CD

Reply Example 2: An aircraft returning to the aerodrome of departure.

 Westbury Approach,
G-ABCD, request Basic
Service

 G-ABCD, Westbury
Approach, pass your
message

 G-ABCD, PA28 local flight
from Borton, Wells altitude
3500 feet Wessex 1008,
VFR, tracking to Salisbury


 G-CD Roger, Basic Service,
traffic is a Cessna 172,
15NW South of Westbury
VFR, tracking to Wells at
2500 feet, Report Salisbury

 Basic Service, Wilco, G-CD


Position Reporting

3.32 Position reports shall contain the following elements of information:



1. aircraft identification;
2. position;
3. time;
4. level; and
5. next position and ETA.

 BIGJET 347, Wicken 47
FL280 Marlow 57

 BIGJET 347

 G-ABCD, Wrayton
Information report mid-
channel



 Wilco, G-ABCD



	G-ABCD, mid-channel 25 Altitude 3500 Greenpoint 40		G-ABCD
---	--	---	--------

- 3.33 Where adequate flight progress data is available from other sources, such as ground surveillance systems, aircraft may be exempted from the requirement to make compulsory position reports.

	BIGJET 347, next report at Colinton		Wilco, BIGJET 347
---	--	---	-------------------

	BIGJET 347, omit position reports		Wilco, BIGJET 347
---	--------------------------------------	---	-------------------

	BIGJET 347, omit position reports this frequency		Wilco, BIGJET 347
---	--	---	-------------------

	BIGJET 347, resume position reporting		Wilco, BIGJET 347
---	--	---	-------------------

Flight Plans

- 3.34 A pilot may file a flight plan with an ATSU during flight, although the use of busy RTF channels should be avoided; normally the FIS frequency should be used.

	Wrayton Control, G- ABCD, I wish to file an airborne flight plan		G-ABCD, Wrayton Control, pass your message
---	--	---	---

- 3.35 The format for an airborne flight plan is as follows:

1. aircraft identification and type;
2. position and heading;
3. level and flight conditions;
4. departure aerodrome;
5. estimated time at entry point;
6. route and point of first intended landing;
7. true airspeed;

8. desired level on airway or advisory route.

3.36 Where the aircraft pilot is responsible for activating a flight plan, this may be done by asking an ATSU by radio to activate the flight plan.



G-CD, departed Seton at 38, request activate flight plan



G-CD, departure time 38 will activate flight plan

3.37 During a flight a pilot may elect to cancel an IFR flight plan.



Wrayton Control, G-CD, cancelling my IFR flight



G-CD, Roger, IFR flight cancelled at (time)

3.38 When a pilot has expressed their intention to cancel an IFR flight plan, the ATSU will pass the pilot any available meteorological information which makes it likely that flight in VMC cannot be maintained.



G-CD, IMC reported in the vicinity of Kennington



G-CD, Roger, remaining IFR

Low Visibility Procedures

3.39 Aerodromes that wish to continue operating in poor visibility or are available for instrument approaches in conditions of low cloud are required to develop and maintain Low Visibility Procedures (LVP). Controllers shall advise pilots of the implementation and subsequent cancellation of LVP at an aerodrome.



BIGJET 347, LVPs in force



Roger, BIGJET 347



All stations, LVPs cancelled

Delays

3.40 Where an aircraft is required to hold before making an approach the expected delay shall be passed to the pilot.



BIGJET 347, delay less than 10 minutes. Expect two holding patterns

- 3.41 Expected Approach Time (EAT) is the time that Approach Control estimate that an aircraft will be able to leave the holding facility, following a delay, to commence its approach to land.



BIGJET 347, expected approach time 44

- 3.42 If for reasons other than weather, e.g. an obstruction on the runway, the extent of the delay is not known, aircraft are to be advised “delay not determined” followed by the reason for the delay.



BIGJET 347, delay not determined, runway obstructed

- 3.43 If aircraft elect to hold for the weather to improve at the landing aerodrome, the controller shall inform the first aircraft entering the holding pattern that “no traffic delay expected”. Subsequent aircraft will be passed “delay not determined” followed by an indication of the number of aircraft holding.



BIGJET 347, no traffic delay expected



BIGJET 347, delay not determined, 2 aircraft holding for weather improvement

Transmission of Surface Wind

- 3.44 Surface wind should be passed in the following circumstances:

1. When the pilot of an aircraft requests start-up or prior to taxiing for take-off².
2. As early as practicable after an arriving aircraft has established communication with the unit providing approach control service.^{3*}
3. Prior to entering the traffic circuit or commencing an approach to land.

² CAP 493 11.1

³ CAP 493 9E.1 and 11.7

3.45 When there is any significant change in the mean direction or speed, surface wind should also be passed in the following circumstances:

1. At the commencement of final approach.
2. During final approach, transmitted without delay.
3. Prior to take-off.

* Except where an ATIS is employed, and pilots have acknowledged receipt of the ATIS message on initial contact with Approach Control using the correct code letter allocated to the message.

3.46 Local procedures may state other situations when surface wind should be passed.


Chapter 4: Aerodrome Phraseology

Introduction

- 4.1 Concise and unambiguous phraseology used at the correct time is vital to the smooth, safe and expeditious running of an aerodrome and associated ATZ. It is not only the means by which instructions and information are passed but it also assists pilots in maintaining an awareness of other traffic in their vicinity, particularly in poor visibility conditions.
- 4.2 Messages will not be transmitted to an aircraft during take-off, the last part of final approach or the landing roll, unless it is necessary for safety reasons, because it will be distracting to the pilot at a time when the cockpit workload is often at its highest.
- 4.3 Local procedures vary from aerodrome to aerodrome, and it is impossible to give examples to cover every situation which may arise at the multiplicity of different types of aerodrome. Information in addition to that shown in the examples, e.g. time checks, etc. may be provided as necessary.
- 4.4 As described in Chapter 2, the type of service provided at an aerodrome falls into one of three categories. In this section the examples are confined to those used by air traffic controllers.
- 4.5 Whilst the RTF procedures used by air traffic controllers form the main content of this publication, it should be noted that the phraseology used by FISOs, and Air/Ground Communication Service operators is different from that used by controllers. Examples of phraseology for Flight Information Service Officers and Air/Ground Communication Service operators may be found in Chapter 4.
- 4.6 Designated positions in the traffic circuit are as shown in Figure 1 below.

Designated Positions in the Traffic Circuit, applicable to ATC, AFIS and AGCS

Figure 1 Designated positions in the traffic circuit

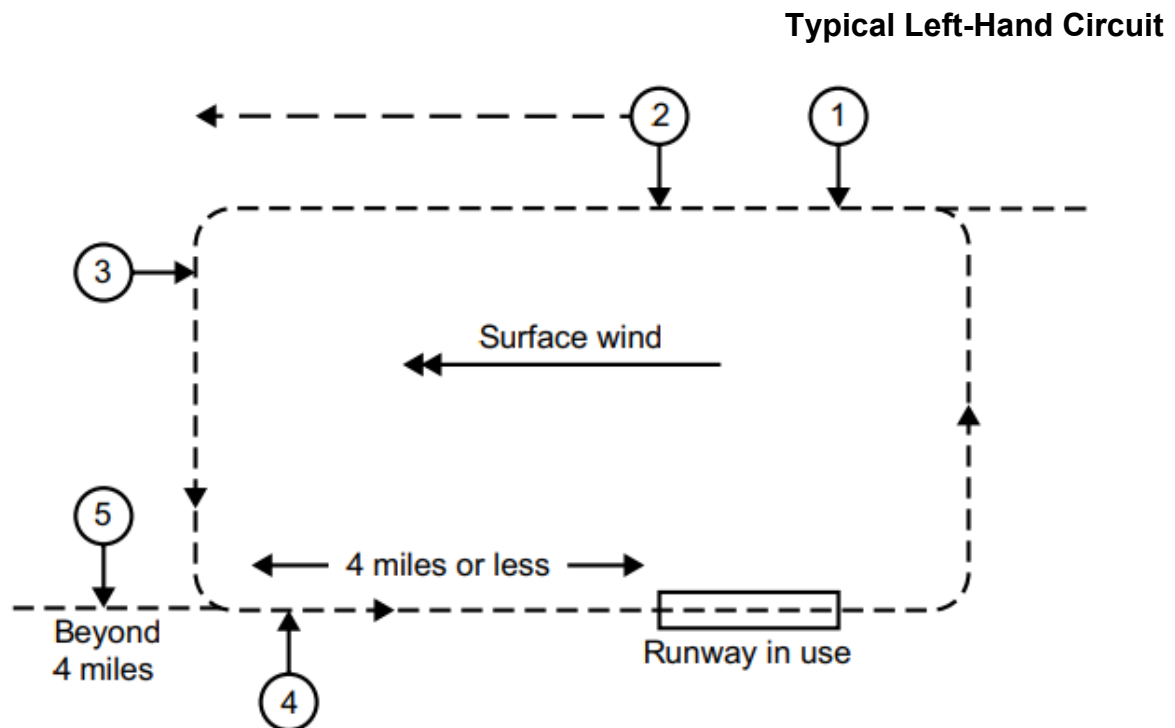

Position 1 Aircraft reports on 'Downwind' leg.

Position 2 Aircraft reports 'Late downwind' if it is on the downwind leg, has been unable to report 'Downwind' and has passed the downwind end of the runway.

Position 3 Aircraft reports 'Base' leg (if required by ATS provider or aerodrome operator).

Position 4 Aircraft reports '**Final**'. Clearance to land issued here.

Position 5 Aircraft reports '**Long final**' (between 8 and 4 miles) when aircraft is on a straight in approach.

NOTES:

1. For light aircraft operations, circuit dimensions may be reduced but the relative RTF reporting points are maintained.
2. For details of military visual circuit patterns see Chapters 10 and 11


4.7 The standard overhead join comprises the following:

1. overfly at 2000 ft above aerodrome elevation;
2. if not already known, determine the circuit direction from the signals square, other traffic or windsock;
3. descend on the 'dead side' to circuit height;

4. join the circuit by crossing the upwind end of the runway at circuit height;
5. position downwind.

NOTE: Pilots should ensure they have checked beforehand whether specific joining procedures apply; otherwise, an 'overhead join' (which actually takes a joining aircraft around the aerodrome) is the preferred method of joining the circuit pattern. Aerodromes where specific procedures apply will notify such differences in the UK AIP.

Figure 2 Standard Overhead Join Procedure

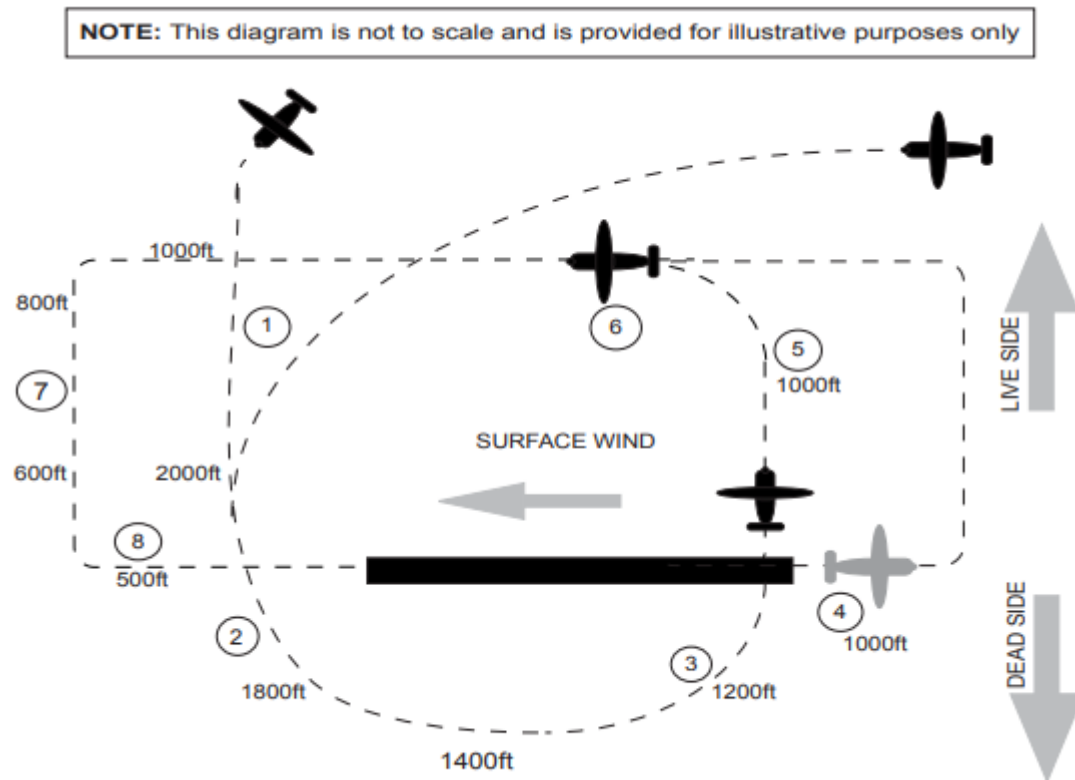




First radio call should be made 5 - 10 miles from the aerodrome and joining checks completed.

- 1 Maintain 2000ft above aerodrome elevation or 1000ft above promulgated circuit level (based on QNH from the nearest available source), and observe windsock and traffic. Keep aerodrome a suitable distance on the left of the aircraft. Report OVERHEAD. Include the appropriate runway if determined. If unable to ascertain the runway in use continue circling overhead.
- 2 When runway and circuit direction are ascertained begin letting down on the dead side. If required, report DEAD SIDE DESCENDING (Note: Once the circuit direction has been established, all turns must be in the circuit direction).
- 3 Position to cross within the upwind threshold at circuit height.
- 4 Watch for aircraft taking off, as they could pose a hazard.
- 5 Watch for existing circuit traffic and adjust your path to sequence safely.
- 6 Call downwind.
- 7 Make optional call BASE LEG if required.
- 8 Report FINAL.

Aerodrome Control Service Phraseology

Departure Information and Engine Starting Procedures

- 4.8 Where no ATIS is provided the pilot may ask for current aerodrome information before requesting start up.

	Stourton Ground, BIGJET 347, request departure information		BIGJET 347, Stourton Ground, departure runway 32 wind 290 4, QNH 1008, temperature -2, dewpoint -3, RVR 550 550 600 metres
			Runway 32, QNH 1008, BIGJET 347


- 4.9 Requests to start engines are normally made to facilitate ATC planning and to avoid excessive fuel wastage by aircraft delayed on the ground. At certain aerodromes, along with the request, the pilot will state the location of the aircraft and acknowledge receipt of the departure ATIS broadcast identifying letter together with the QNH.

	Stourton Ground, BIGJET 347, stand 24 information Bravo, QNH 1022 request start up		BIGJET 347, Stourton Ground, start up at time 35
---	---	---	---

- 4.10 When there will be a delay to the departure of the aircraft the controller will normally indicate a time to start up or expect to start up.

	Stourton Ground, BIGJET 347, information Charlie QNH 1022, request start up		BIGJET 347, Stourton Ground, start up approved
---	---	---	---

or,

	BIGJET 347, Stourton Ground, expect start up at time 35
---	---

or,



BIGJET 347, Stourton
Ground, expect departure at
time 49 start up at own
discretion

Pushback and Powerback

- 4.11 At many aerodromes at which large aircraft operate, the aircraft are parked nose-in to the terminal in order to save parking space. Aircraft have to be pushed backwards by tugs before they can taxi for departure. Some aircraft also have the capability to reverse from a nose-in position to the terminal under their own power. This procedure is known as powerback. Requests for pushback or powerback are made to ATC depending on the local procedures.



BIGJET 347, stand 27
request pushback/
powerback



BIGJET 347, stand 27
pushback/powerback
approved

or,



BIGJET 347, negative.
Expect one minute delay due
B747 taxiing behind

Taxi Instructions⁴

- 4.12 Taxi instructions issued by a controller will always contain a clearance limit, which is the point at which the aircraft must stop, unless further permission to proceed is given. For departing aircraft, the clearance limit will normally be the holding point of the runway in use, but it may be any other position on the aerodrome depending on the prevailing traffic. Taxi clearances should, wherever possible, be noted down by pilots.













Borton Tower, G-
ABCD, T67 by the
south side hangars
request taxi for VFR
flight to Walden, 2
POB



G-ABCD, taxi holding point
G2 runway 24 via taxiway
Charlie, QNH 967
hectopascals

⁴ As per guidance in SERA.14001, standardised phraseology shall be used in all situations for which it has been specified. Only when standardised phraseology cannot serve an intended transmission, plain language shall be used. Therefore, where plain language would provide clarity for complex taxi patterns, it may be used.

NOTE: POB (total persons on board) may be added, e.g. where a flight plan is not required and has not been filed.

		G-ABCD, taxi holding point G2 runway 24 via taxiway Charlie, QNH 967 hectopascals
		G-ABCD, request surface wind
		G-CD, surface wind 220 6
		G-CD, request runway 14
		G-CD, after the Seneca coming from your left, taxi holding point B1 runway 14
		After the Seneca from my left, taxi holding point B1 runway 14, G-CD
	Borton Tower, G-ABCD, T67 at the fuel station VFR to Walden request taxi	
		QNH 1008, G-CD, request taxiway Bravo, and backtrack runway 06
		G-CD, taxi holding point H1 runway 06 via taxiway Bravo



Borton Tower, G-ABCD,
at the fuel station
request taxi to flying
club



Taxi holding point H1 runway
06 via taxiway Bravo, G-CD



G-CD, taxi holding point A1
runway 24 via Charlie



Taxi holding point A1 runway
24 via Charlie, G-CD



G-CD, holding point A1
runway 24 request cross



G-CD, negative. Hold
position.



Holding, G-CD



G-CD, taxi to the flying club,
via A1 cross runway 24
report vacated



Taxi to the flying club, via A1
cross runway 24, Wilco, G-
CD





G-CD, runway vacated



G-CD



NOTES:

1. Instruction to report vacated may be omitted when aerodrome control has continuous sight of the aircraft crossing.
 2. For helicopters the phrase "Air-taxi...." may be used in place of "Taxi....".
- 4.13 Controllers are not to instruct aircraft or vehicles to cross illuminated red stop-bars used at runway and intermediate taxiway holding positions. The aerodrome operator may decide, on the grounds of safety, that inoperable stop-bars and associated taxiways be withdrawn from service and alternative routes used where practicable. On the occasions when the withdrawal of inoperable stop-bars is not possible and the stop-bars cannot be readily suppressed, under exceptional circumstances, an aircraft may be instructed to cross such an illuminated stop-bar.

	G-CD stop-bar unserviceable, cross red stop-bar at A1		Cross red stop-bar at A1, G-CD
---	---	---	--------------------------------

	G-CD stop-bar unserviceable, cross red stop-bar, via A1 line up runway 24		Cross red stop-bar, via A1 line up runway 24, G-CD
---	---	---	--

- 4.14 If the instructions given to surface traffic involve crossing a runway in use, clearance to cross should normally be withheld until no conflict exists. However, to achieve greater efficiency of operation, clearance to cross may be given subject to aircraft, which are landing or taking off. The conditional clearance shall contain sufficient information to enable the pilot of the taxiing aircraft or vehicle driver to identify the other traffic and should be related to one movement only.

	BIGJET 347, behind the landing A320, via Bravo 1 cross runway 26 behind, report vacated		Behind the landing A320, via Bravo 1 cross runway 26 behind, wilco, BIGJET 347
---	---	---	--

	G-CD behind the landing PA28, cross runway 28 behind, report vacated		Behind the landing PA 28, cross runway 28 behind, wilco, G-CD
---	--	---	---

- 4.15 When a clearance to cross a runway in use is issued, a report vacated instruction shall be included. However, this instruction may be omitted when the controller has continuous sight of the aircraft or vehicle crossing.



G-CD, behind the departing Seneca, via Kilo 4 cross runway 02 behind



Behind the departing Seneca, via Kilo 4 cross runway 02 behind, G-CD

- 4.16 Where an ATIS broadcast is established the controller does not need to pass departure information to the pilot when giving taxi instructions. They will, however, check that the aircraft is in possession of the latest QNH.



BIGJET 347, information Bravo, QNH 1020 request taxi



BIGJET 347, now information Charlie, new QNH 1021, after the B747 passing left to right taxi holding point A1 runway 28



QNH 1021, after B747 left to right taxi holding point A1 runway 28, BIGJET 347

Pre-Departure Manoeuvring

- 4.17 Meticulous care has been taken to ensure that the phraseology which is to be employed during the pre-departure manoeuvres cannot be interpreted as a take-off clearance or instruction to enter the runway. This is to avoid any misunderstanding in the granting or acknowledgement of take-off clearances and indeed any instruction to use the runway, e.g. Line-up, and the serious consequences that could result. In addition, any instruction to use a runway shall include the designator of the runway. When passing the clearance, the runway designator should be stated before the clearance, e.g. (Callsign) Runway 06, cleared for take-off.
- 4.18 At busy aerodromes with a separate ground and tower function, aircraft are usually transferred to the tower frequency at or approaching the holding point.



BIGJET 347, contact Tower 118.9



Tower 118.9, BIGJET 347

- 4.19 It may be necessary for the controller to instruct the pilot to hold at a specified holding point. Where appropriate the controller should include the reason for the instruction.



BIGJET 347, hold at Bravo 2



Hold at Bravo 2, BIGJET 347



BIGJET 347, hold at
Bravo 1, 2 aircraft to
depart before you from
runway 20

Hold at Bravo 1, BIGJET 347

- 4.20 Many types of aircraft carry out engine checks prior to departure and are not always ready for take-off when they reach the holding point.



G-CD, report ready for
departure



Wilco, G-CD



G-CD, ready for
departure



G-CD, runway 28, line-up



Runway 28 line up, G-CD

- 4.21 Air Traffic controllers may ask if a pilot can accept an intersection departure.



G-CD advise able to
depart from runway 28
intersection C2

- 4.22 A pilot may request an intersection departure.



G-ABCD, request
departure from runway
28, intersection C2

- 4.23 When line-up will take place at a position other than for a full-length runway departure the intermediate 'Holding Point' designator shall be included in the line-up instruction. Controllers may include the runway 'Holding Point' designator in any other line-up instruction when considered necessary.



G-CD, ready for
departure



G-CD, via C2 line-up runway
28



Via C2 line-up runway 28, G-
CD

- 4.24 Information on the Take-Off Run Available (TORA) (pronounced TOR-AH) from the intersection shall be issued when requested by a pilot or whenever deemed necessary by the controller.



G-CD TORA runway 28
from intersection C2
1800 metres

- 4.25 For reason of expedition, a controller may wish to line-up an aircraft for departure before conditions allow take-off.





BIGJET 347, via
holding point A1 line-up
and wait runway 26,
one aircraft to depart
before you from holding
point A2



Via holding point A1 line-up
and wait runway 26, number
two for departure, BIGJET
347

Take-Off Clearance

- 4.26 Except in cases of emergency, messages will not be transmitted to an aircraft in the process of taking off or in the final stages of an approach and landing.
- 4.27 Controllers will use the following phraseology for take-off.



	G-CD, (Runway/departure point) cleared for take- off		(Runway/departure point) cleared for take-off, G-CD
---	---	---	--



NOTE: The surface wind will be passed if there is a significant difference to that already passed.

- 4.28 The averaging period for wind observations is two minutes for reports used at an aerodrome for take-off and landing and for wind indicators in air traffic service units. The instantaneous surface wind should be available to be given to pilots on request particularly at aerodromes supporting primarily the operations of aircraft whose maximum total weight authorised is 5,700 kg or less. When a pilot requests the instantaneous surface wind, the word “instant” is to be inserted to indicate that the wind being reported is not the two-minute average.

	G-CD, request instant wind		G-CD, instant wind 270 7
---	-------------------------------	---	--------------------------



- 4.29 A take-off clearance shall be issued separately from any other clearance message.
- 4.30 For traffic reasons a controller may consider it necessary for an aircraft to take-off without any delay. Therefore, when given the instruction ‘cleared for immediate take-off’, the pilot is expected to act as follows:
1. At the holding point: taxi immediately on to the runway and commence take-off without stopping the aircraft.
 2. If already lined up on the runway: take-off without delay. Should an immediate take-off not be possible, the pilot is to advise the controller.

	BIGJET 347, runway 28 cleared for immediate take-off		Runway 28 cleared for immediate take-off, BIGJET 347
---	--	---	--



	G-CD, Piper Cub 2 miles on final approach. Runway 28 cleared for immediate take-off wind 240 8 knots		Runway 28 cleared for immediate take-off, G-CD
---	--	---	---

- 4.31 For reason of expedition a controller may wish to line-up an aircraft for departure before conditions allow take-off.


	BIGJET 347, line-up and wait Runway 26 – vehicle crossing upwind end of runway		Line-up and wait Runway 26, BIGJET 347
---	--	---	--


	BIGJET 347, runway 26 cleared for take-off		Runway 26 cleared for take-off, BIGJET 347
---	--	---	--

4.32 In poor visibility the controller may prefix the clearance with the runway designator and request the pilot to report when airborne.

	BIGJET 347, runway 28 cleared for take-off report airborne		Runway 28 cleared for take-off. Wilco, BIGJET 347
---	--	---	---

	BIGJET 347, airborne
---	----------------------

	BIGJET 347, contact Westbury Radar 121.750
---	--

	Westbury Radar 121.750, BIGJET 347
---	------------------------------------

4.33 Conditional clearances are only to be provided subject to conditions specified by the relevant authority. Military controllers/civil controllers at military aerodromes do not apply conditional clearances. Conditional phrases will not be used for movements affecting the active runway(s), except when the aircraft or vehicles concerned are seen by the controller and pilot. Conditional clearances are to relate to one movement only and, in the case of landing traffic, this must be the first aircraft on approach. A conditional instruction shall be given as follows:

1. callsign;
2. the condition;
3. identification of subject of the condition;
4. the clearance;
5. reiteration of the condition.



BIGJET 347, behind the landing DC9, line up Runway 26 behind



Behind the landing DC9, line up Runway 26 behind, BIGJET 347



BIGJET 347, behind the departing DC9, line up Runway 26 behind

- 4.34 If a conditional clearance has been issued in respect of a landing aircraft the stop-bar must not be deselected until the landing aircraft has passed the position at which the vehicle or aircraft will enter the runway. For aircraft departing from the same runway holding position, when a conditional line-up clearance has been issued to a succeeding departing aircraft, the illuminated red stop-bar may remain deselected provided that it will be the next movement on that runway.
- 4.35 In addition, any instruction to use a runway shall include the designator of the runway. When passing the clearance, the runway designator should be stated before the clearance, i.e. (Callsign) runway 06, cleared for take-off. See also 10.13.



BIGJET 347, runway 09 left cleared for take-off



Runway 09 left cleared for take-off, BIGJET 347

- 4.36 An Omnidirectional Departure procedure is designed on the basis that an aircraft maintains runway direction until it reaches such a height that it can make a turn in any direction and maintain the prescribed obstacle clearance.



BIGJET 347
Omnidirectional
Departure runway 27 on track REVTU climb Flight Level 80



Omnidirectional Departure
runway 27 on track REVTU
climb Flight Level 80 BIGJET
347









- 4.37 Local departure instructions may be given prior to the take-off clearance. Such instructions are normally given to ensure separation between aircraft operating in the vicinity of the aerodrome.










BIGJET 347, after departure track extended centre line



After departure track extended centre line, BIGJET 347

	BIGJET 347, after departure climb straight ahead		After departure climb straight ahead, BIGJET 347
	BIGJET 347, after departure fly heading 240 degrees, climb to altitude 6000 feet		After departure fly heading 240 degrees, climb to altitude 6000 feet, BIGJET 347
	G-CD, after departure right hand circuit		After departure right hand circuit, G-CD
	G-CD, after departure track 270 degrees from Borton until reaching altitude 3000 feet before setting course		After departure track 270 degrees from Borton until reaching altitude 3000 feet before setting course, G-CD

4.38 Revised clearances and post departure instructions for aircraft on the runway or at the holding position shall be prefixed with an instruction to hold position.

	BIGJET 347, Hold position, after departure climb straight ahead to altitude 2500 feet QNH 1014 before turning right		BIGJET 347, Holding, after departure climb straight ahead to altitude 2500 feet, QNH 1014 before turning right.
			BIGJET 347, runway 26 cleared for take-off
			Runway 26 cleared for take-off, BIGJET 347
	G-CD, after departure request right turn		G-CD, Hold position, right turn approved
			G-CD, Holding, right turn approved



G-CD, runway 26 cleared for take-off



Runway 26 cleared for take-off, G-CD

- 4.39 Due to unexpected traffic developments or a departing aircraft taking longer to take-off than anticipated, it is occasionally necessary to rescind the take-off clearance or quickly free the runway for landing traffic.



BIGJET 347, runway 26 take-off immediately or vacate runway



Taking-off, runway 26
BIGJET 347



BIGJET 347, runway 26 take-off immediately or hold short of runway



Holding short, BIGJET 347

- 4.40 When an aircraft is about to take-off or has commenced the take-off roll, and it is necessary that the aircraft should abandon take-off, the aircraft will be instructed to cancel take-off or stop immediately; these instructions will be repeated.



G-CD, hold position, cancel take-off I say again cancel take-off, acknowledge



Holding, G-CD



BIGJET 347, stop immediately I say again, BIGJET 347, stop immediately, acknowledge



Stopping, BIGJET 347

NOTE: Military procedures for cancelled take-offs appear in Chapter 10.

- 4.41 When a pilot abandons take-off they should, as soon as practicable, inform the tower that they are doing so. Likewise, as soon as practicable, they should inform the tower of the reasons for abandoning take-off if applicable and request further manoeuvring instructions.



BIGJET 347, stopping



BIGJET 347

BIGJET 347, request
backtrack for another
departureBIGJET 347, runway 26
backtrack approved

- 4.42 Requests for circuit-joining instructions should be made in sufficient time for a planned entry into the circuit taking other traffic into account. Where ATIS is established, receipt of the broadcast should be acknowledged in the initial call to an aerodrome. When the traffic circuit is a right-hand pattern, it shall be specified. A left-hand pattern **need not** be specified although it is **essential** to do so when the circuit direction is variable.

Walden Tower, G-
ABCD, request joinG-ABCD, Walden Tower,
pass your messageG-ABCD, T67 10 miles
south altitude 2500 feet
Wessex 1008G-CD, join righthand
downwind runway 27 height
1000 feet QFE 1006Join righthand downwind
runway 27 height 1000 feet
QFE 1006, G-CD

- 4.43 In some circumstances, an aircraft may be instructed to complete a standard overhead join.

G-CD, join overhead
runway 20 height 2000
feet QFE 997
hectopascals, report
aerodrome in sightJoin overhead runway 20
height 2000 feet QFE 997
hectopascals, wilco, G-CD

- 4.44 Depending on prevailing traffic conditions and the direction from which an aircraft is arriving, it may be possible to make a straight-in approach.



Walden Tower, G-ABCD, request join



G-ABCD, Walden Tower, pass your message



G-ABCD, T67 10 miles south altitude 2500 feet Wessex 1008 request straight in approach runway 34



G-CD, make straight in approach runway 34 wind 260 degrees 5 knots QFE 1006 report final



Make straight in approach runway 34 QFE 1006. Wilco, G-CD

- 4.45 Pilots will receive traffic information prior to joining the traffic circuit. ATS personnel will, as a minimum, take into consideration the prevailing visibility, traffic situation, local procedures and the type of join being conducted to determine the timing and content of such traffic information.



G-CD, traffic is a Cherokee upwind and a Tomahawk late downwind



Roger, G-CD



Traffic in sight, G-CD



G-CD, you are number 3, number 2 is a Cherokee upwind



Roger, G-CD



G-CD, circuit clear



G-CD


- 4.46 The pilot having joined the traffic circuit makes routine reports as required by local procedures.



G-CD, downwind





Roger, G-CD, number 2 follow the Cherokee on base,


 Number 2, Cherokee in sight, G-CD

 G-CD, base

 G-CD



 G-CD, final



 G-CD, runway 34 cleared to land, wind 270 7


 Runway 34 cleared to land, G-CD

4.47 Where necessary the controller may instruct the pilot to report at a specified position.



 G-CD, report overhead  Wilco, G-CD



 G-CD, report downwind  Wilco, G-CD



 G-CD, report long final  Wilco, G-CD

 G-CD, report base  Wilco, G-CD



4.48 It may be necessary in order to coordinate traffic in the circuit, to issue a pilot their number in the sequence along with the position of the preceding aircraft and delaying action if necessary.


 G-CD, extend downwind number 2, number 1 is a Cherokee left-hand downwind  Extend downwind, number 2, G-CD


 G-CD, number 2, follow the Cherokee ahead  Follow Cherokee ahead, G-CD


	G-CD, for spacing orbit right number 2, number 1 is a Cherokee on final, report again on base		Orbit right, wilco, G-CD
---	---	---	--------------------------

4.49 In order to save taxiing time when flying training in the traffic circuit pilots may wish to carry out a 'touch and go', i.e. the aircraft lands, continues rolling and takes-off, without stopping.


	G-CD, downwind touch and go		G-CD, report final
---	-----------------------------	---	--------------------


	G-CD, final
---	-------------

	G-CD, runway 34, cleared touch and go, surface wind calm
--	--



	Runway 34 cleared touch and go, G-CD
---	--------------------------------------

or,

	G-CD, unable to approve due traffic, make full stop landing runway 34, cleared to land, surface wind calm
---	---


	Runway 34 cleared to land, G-CD
---	---------------------------------

4.50 It is helpful for circuit management purposes if a controller is informed when an aircraft which has been engaged in multiple approaches is on their last circuit.

	G-CD, downwind to land		G-CD, report final
---	------------------------	---	--------------------

Final Approach and Landing

- 4.51 A 'final' report is made when an aircraft has turned onto final approach. If the turn on is made at a distance greater than 4 NM from touchdown a 'long final' report is made. The landing/touch and go/low approach clearance will include the runway designation.

	G-CD, final		G-CD, runway 34, cleared to land, surface wind 270 7
			Runway 34 cleared to land, G-CD
	BIGJET 347, long final		BIGJET 347, report final surface wind 260 18
			Wilco, BIGJET 347
			BIGJET 347, final
			BIGJET 347, runway 28 cleared to land, wind 270 20
			Runway 28 cleared to land, BIGJET 347

NOTES:

1. Military phraseology for a gear check appears in Chapter 10.
 2. Where established, an 'outer marker' instead of a 'final' report may be made.
- 4.52 Where a controller cancels a landing clearance but feels that a landing clearance will be re-issued in good time for the aircraft to make a safe landing, they should, if time permits, give the reason for cancelling the landing clearance.

	BIGJET 347, continue approach, cancel		Landing clearance cancelled, continuing approach, BIGJET 347
---	---------------------------------------	---	--

landing clearance
(reason), acknowledge

- 4.53 If available, the instantaneous surface wind should be provided to the pilot on request.



G-CD, runway 13,
cleared to land, instant
surface wind 270 15,

- 4.54 The runway may be obstructed when the aircraft makes its 'final' report at 4 NM or less from touchdown but is expected to be available in good time for the aircraft to make a safe landing. On these occasions, the controller will delay landing clearance.



G-CD, final



G-CD, continue approach,
wind 270 5



Continue approach, G-CD

- 4.55 The controller may or may not explain why the landing clearance has been delayed but the instruction to 'continue' **IS NOT** an invitation to land and the pilot must wait for landing clearance or initiate a missed approach.
- 4.56 A landing aircraft may be permitted to touch down before a preceding landing aircraft has vacated the runway provided that:
1. the runway is long enough to allow safe separation between the two aircraft and there is no evidence to indicate that braking may be adversely affected;
 2. it is during daylight hours;
 3. the preceding landing aircraft is not required to backtrack in order to vacate the runway;
 4. the controller is satisfied that the landing aircraft will be able to see the preceding aircraft which has landed, clearly and continuously, until it has vacated the runway; **and**
 5. the pilot of the following aircraft is warned. Responsibility for ensuring adequate separation rests with the pilot of the following aircraft.



BIGJET 347, runway 28,
land after the B737,
wind calm



Runway 28 land after the
B737, BIGJET 347

- 4.57 Military phraseology for clearances with an occupied runway is shown in Chapter 10.
- 4.58 A pilot may request to fly past the control tower or other observation point for the purpose of visual inspection from the ground.



G-CD, request low pass



G-CD, runway 34 cleared low
pass

- 4.59 If the low pass is made for the purpose of observing the undercarriage, one of the following replies could be used to describe its condition but these examples are not exhaustive:

1. Landing gear appears down.
2. Right (or left, or nose) wheel appears up (or down).
3. Wheels appear up.
4. Right (or left, or nose) wheel does not appear up (or down).

- 4.60 A pilot may request permission to make a low approach along the runway, without intending to land.



G-CD, request low
approach



G-CD, runway 34 cleared low
approach

- 4.61 If the runway in use is occupied by aircraft or vehicles, an approaching aircraft may be cleared to carry out a low approach which includes a descent not below a specified height or altitude. The minimum height or altitude is defined in regulatory documentation and/or local instructions as appropriate. In such circumstances, the pilot is to be informed of the aircraft or vehicles on the runway.

- 4.62 The following example assumes an aircraft operating on QNH.



BIGJET 347, request
low approach



BIGJET 347, runway 05, not
below altitude (number) feet,
vehicle on runway, cleared
low approach



Runway 05 not below altitude (number) feet, BIGJET 347 cleared low approach

- 4.63 Where the aircraft is known to be operating on QFE, the instruction is as follows.



BIGJET 347, request low approach



BIGJET 347, runway 05 not below height (number) feet, vehicle on runway, cleared low approach



Runway 05 not below height (number) feet, cleared low approach BIGJET 347

Missed Approach

- 4.64 Instructions to carry out a missed approach may be given to avert an unsafe situation. When a missed approach is initiated cockpit workload is inevitably high. Any transmissions to aircraft going around shall be brief and kept to a minimum.



BIGJET 347, go around, I say again, go around, acknowledge



Going around, BIGJET 347

- 4.65 An aircraft on an instrument approach is to carry out the published missed approach procedure and an aircraft operating VFR is to continue into the normal traffic circuit unless instructions are issued to the contrary.

- 4.66 In the event of missed approach being initiated by the pilot, the phrase 'going around' shall be used.



G-CD, going around















G-CD, Roger

- 4.67 Missed Approach Phraseology used by military controllers is shown in Chapter 10.

Runway Vacating and Communicating after Landing

- 4.68 Unless absolutely necessary, controllers will not give taxi instructions to pilots until the landing roll is complete. Unless otherwise advised, pilots should remain on tower frequency until the runway is vacated.

	BIGJET 347, vacate left		Vacate left, BIGJET 347
	BIGJET 347, when vacated contact Ground 118.350		When vacated Ground 118.350, BIGJET 347
			Kennington Ground, BIGJET 347, runway vacated
			BIGJET 347, Kennington Ground, taxi to Stand 27 via taxiway Alpha
			Taxi to Stand 27 via taxiway Alpha, BIGJET 347
	G-CD, taxi to the end, report runway vacated		Taxi to the end, Wilco, G-CD
			G-CD, runway vacated
			G-CD, give way to the Cherokee on taxiway Alpha, taxi to the flying club
			Give way to the Cherokee on taxiway Alpha, taxi to the flying club, G-CD

Essential Aerodrome Information

- 4.69 Essential Aerodrome Information is information regarding the manoeuvring area and its associated facilities which is necessary to ensure the safe operation of aircraft. Essential Aerodrome Information is passed to aircraft whenever possible prior to start-up or taxi and prior to the commencement of final approach.



BIGJET 347, caution construction work at the end of Stand 37



... caution work in progress ahead north side of taxiway Alpha



... caution centre line taxiway lighting unserviceable



... caution PAPIs runway 27 unserviceable



... caution large flock of birds north of runway 27 near centre taxiway



... Message from the aerodrome operator, rescue and firefighting reduced to category (number)

Arrestor Systems at Military Aerodromes

4.70 Phraseology describing arrestor systems at military aerodromes appears in Chapter 10.

Aerodrome Flight Information Service Phraseology

Introduction

- 4.71 Concise and unambiguous phraseology used at the correct time is vital to the smooth, safe and expeditious running of an aerodrome and associated ATZ. It is not only the means by which instructions and information are passed but it also assists pilots in maintaining an awareness of other traffic in their vicinity, particularly in poor visibility conditions.
- 4.72 Messages will not be transmitted to an aircraft during take-off, the last part of final approach or the landing roll, unless it is necessary for safety reasons, because it will be distracting to the pilot at a time when the cockpit workload is often at its highest.
- 4.73 Local procedures vary from aerodrome to aerodrome, and it is impossible to give examples to cover every situation which may arise at the multiplicity of different types of aerodrome. Information in addition to that shown in the examples, e.g. time checks, etc. may be provided as necessary.

Type of Service

- 4.74 As described in Chapter 2 the type of service provided at an aerodrome falls into one of three categories. In this section the examples are confined to those used by Flight Information Service Officers (FISOs).
- 4.75 Whilst the RTF procedures used by air traffic controllers form the main content of this publication it should be noted that the phraseology used by Aerodrome Flight Information Service Officers (AFISOs) is different from that used by controllers. An AFISO provides advice and information useful for the safe and efficient conduct of flights in the ATZ. From the information received pilots will be able to decide the appropriate course of action to be taken to ensure the safety of flight. Generally, the AFISO is not permitted to issue instructions or advice to pilots of their own volition. However, in granting or refusing permission under Rule 12 and 13 of the Rules of the Air, AFISOs are permitted to pass instructions to vehicles and personnel operating on the manoeuvring area and information and instructions to aircraft moving on the apron and specific parts of the manoeuvring area. Elsewhere on the manoeuvring area and at all times in the air, information only shall be passed to pilots. Further details on the passing of instructions by AFISOs are contained in CAP 797 Flight Information Service Officer Manual.
- 4.76 AFISOs are also permitted to pass messages on behalf of other agencies and instructions from the aerodrome operator. If they do so, they will include the name of the agency so that pilots will be aware that the message comes from a legitimate source, e.g. 'Wrayton Control clears you to join ...'.
- 4.77 With the exception of issuing instructions to aircraft on the ground, AFISOs are reminded that the service they provide is an information service relating

to the ATZ and aerodrome. They must ensure that the information given to pilots is distinct and unambiguous, as pilots will use this information for the safe and efficient conduct of their flights.

- 4.78 An AFISO may request pilots to make position reports, e.g. Downwind, final, etc. These requests do not have the status of instructions, although it is expected that most pilots will comply.
- 4.79 From the instructions and information provided by the AFISO to aircraft on the appropriate areas of the aerodrome, the pilot will be able to determine if it is safe to taxi. From the information provided by the AFISO, the pilot will determine if it is safe to land, take-off or transit the ATZ. AFISOs are not permitted to refuse entry into the ATZ when requested by a pilot. The aerodrome operator may decide that they will not permit an aircraft to land at their aerodrome and request that the AFISO pass this message on. Such a message must be prefixed: 'Message from the aerodrome operator...' AFISOs may not issue such messages of their own volition.

AFIS Phraseology for Ground Movement, Take-Off, Landing and Transit

- 4.80 RTF messages transmitted on aviation VHF frequencies should normally comprise callsign and text as described earlier in this document.
- 4.81 In order that the phraseology listed below should be readily discernible, callsigns have been omitted. All phraseology shall be used in conjunction with callsigns (aircraft, ground vehicle, FIS or other) as appropriate and provisions for the compilation of RTF messages, callsigns and procedures are contained Chapter 2 of this CAP.
- 4.82 Ground movement instructions are similar for aircraft, vehicles and tractors towing aircraft but the operative word in the message is 'taxi', 'proceed' and 'tow' respectively.
- 4.83 The text of messages should be composed from standard speech abbreviations and the standard phrases listed on the following pages. One or more phrases may be used but all items in a phrase are to be included. The list of phrases in Table 1 below is not intended to be exhaustive. Words in parentheses indicate that specific information, such as a level, a place, or a time, etc., must be inserted to complete the phrase, or alternatively that optional phrases may be used. Words in square parentheses indicate optional additional words or information that may be necessary in specific instances.

Table 1

	Phraseology
Traffic Information	<p>TRAFFIC (information); NO REPORTED TRAFFIC; [FURTHER] TRAFFIC (direction) BOUND (type of aircraft) (level) ESTIMATED (or OVER) (significant point) AT (time); TRAFFIC IS (classification) UNMANNED FREE BALLOON(S) WAS [or ESTIMATED] OVER (place) AT (time) REPORTED (level(s)) [or LEVEL UNKNOWN] MOVING (direction) (other pertinent information, if any)</p>
Meteorological conditions	<p>[SURFACE] or [INSTANT] WIND (direction and speed) [(units)]; WIND AT (level) (number) DEGREES (number) KNOTS; NOTE: Wind is always expressed by giving the mean direction and speed and any significant variations thereof VISIBILITY (distance) (units) [direction]; PRESENT WEATHER (details); CLOUD (amount, [(type)] and height of base) (units) (or <u>NO SIGNIFICANT CLOUD</u>); CAVOK; NOTE: CAVOK pronounced CAV-O-KAY TEMPERATURE [MINUS] (number) (and/or DEWPOINT [MINUS] (number)); QNH (number) [Hectopascals]; QFE (number) [Hectopascals]. NOTE: For all transmissions, the word 'hectopascal' shall be appended to figures when transmitting a pressure setting below 1000 hPa, or in cases where confusion or ambiguity may result AT (time) A DEPARTING/ARRIVING (a/c type) REPORTED WINDSHEAR AT (altitude). AIRSPEED LOSS/GAIN (number) KNOTS, STRONG LEFT/ RIGHT DRIFT</p>
Additional reports	
... to request a report at a specified place or distance	<p>REPORT PASSING (significant point); REPORT (distance) MILES (GNSS or DME) FROM (name of DME station) (or significant point); REPORT PASSING (three digits) RADIAL (name of VOR) VOR</p>

... to request a report of present position	REPORT (GNSS or DME) DISTANCE FROM (significant point) or (name of DME station); REPORT POSITION
Aerodrome information	[[location]] RUNWAY SURFACE CONDITION RUNWAY (designator) (condition); LANDING SURFACE (condition); CAUTION CONSTRUCTION WORK (location); CAUTION (specify reasons) RIGHT (or LEFT), (or BOTH SIDES) OF RUNWAY [designator]; CAUTION WORK IN PROGRESS (or OBSTRUCTION) (position and any necessary advice); UNOFFICIAL OBSERVATION FROM THE TOWER (weather information); UNOFFICIAL OBSERVATION FROM A PILOT'S REPORT (weather information)
Operational status of visual and non-visual aids	(specify visual or non-visual aid) RUNWAY (designator) (description of deficiency); (type) LIGHTING (unserviceability); TAXIWAY LIGHTING (description of deficiency); (type of visual approach slope indicator) RUNWAY (designator) (description of deficiency)
Identification of aircraft	SHOW LANDING LIGHTS
Acknowledgement by visual means	ACKNOWLEDGE BY MOVING AILERONS (or RUDDER); ACKNOWLEDGE BY ROCKING WINGS; ACKNOWLEDGE BY FLASHING LANDING LIGHTS
Starting procedures	
...at aerodrome where AFIS can issue start up	START UP APPROVED; START UP AT (time)
...at aerodrome where AFIS cannot issue start up, AFIS replies	START UP AT OWN DISCRETION (local information) EXPECT DEPARTURE (time). START UP AT OWN DISCRETION
Taxi	[[GIVE WAY TO] or [FOLLOW] (details)] TAXI HOLDING POINT [(name)] RUNWAY (designator) [VIA TAXIWAY (name)]; HOLD POSITION; CROSS RUNWAY (designator) [REPORT VACATED]; BACKTRACK RUNWAY (designator) [REPORT VACATED]
Relaying Clearance	(ATC unit) CLEARS (details of clearance)

Relaying advisory information	(ATC unit) ADVISES (details)
Confirmation or otherwise of the readback of clearance	[THAT IS CORRECT] or [I SAY AGAIN] or [NEGATIVE I SAY AGAIN] as appropriate
Relaying frequency instructions	[AFTER PASSING (level)] CONTACT/FREECALL (instructions)
Take-off	<p>REPORT READY; DO YOU REQUIRE TO BACKTRACK THE RUNWAY?; [Traffic (details)] [no reported traffic] BACKTRACK RUNWAY (designator) REPORT (LINED UP or LINING UP); [Traffic (details)] [no reported traffic] RUNWAY (designator); REPORT LINING UP; This is a request for a pilot to report the act of entering the runway for departure; [Traffic (details)] [no reported traffic] RUNWAY (designator) REPORT LINED UP; This is a request for a pilot to report when lined up on the runway in the take-off direction; HOLD POSITION; [Traffic (details)] [no reported traffic] RUNWAY (designator) TAKE-OFF AT YOUR DISCRETION, [SURFACE or INSTANT] WIND (direction and speed) [(units)]</p>
After take-off ... to request airborne time	REPORT AIRBORNE
Aircraft wishes to enter the ATZ for landing	RUNWAY (designator) LEFT/RIGHT HAND CIRCUIT, QFE or QNH (number) [hPa] [traffic information and essential aerodrome information as required]
Aircraft wishes to transit the ATZ	(traffic and aerodrome information), REPORT ENTERING/ OVERHEAD/ LEAVING THE ATZ
In the circuit	<p>REPORT (DOWNWIND/BASE/FINAL or LONG FINAL); NOTE: The report "Long Final" is made when aircraft turn on to final approach at a distance greater than 4nm from touchdown or when an aircraft on a straight in approach is 8nm from touchdown. In both cases a report "Final" is required at 4nm from touchdown; TRAFFIC (details);</p>

	<p>(Number ahead), [(Further information)], REPORT FINAL.</p> <p>NOTE: Examples of [(further information)] includes but is not limited to: (aircraft type); ON/TURNING BASE; ON/ TURNING FINAL; FINAL TO (Intentions). RUNWAY (designator) LAND/TOUCH AND GO AT YOUR DISCRETION, [SURFACE or INSTANT WIND] (direction and speed) [(units)]; RUNWAY (designator) OCCUPIED, TRAFFIC (details); LOW APPROACH AND GO AROUND AT YOUR DISCRETION, [SURFACE or INSTANT WIND] (direction and speed) [(units)]</p>
Formations	<p>*(Callsign) ONE FINAL RUNWAY (designator) LAND AT YOUR DISCRETION,</p> <p>*(Callsign) TWO FINAL RUNWAY (designator) LAND AT YOUR DISCRETION.</p> <p>* Denotes pilot transmission for context</p>
RNP Instrument Approach Procedure	<p>REPORT INITIAL APPROACH FIX (Waypoint identification) RUNWAY (designator). RNP APPROACHES AT (Unit) ARE ONLY AVAILABLE TO AUTHORISED OPERATORS. REQUEST INTENTIONS REPORT ESTABLISHED ON FINAL APPROACH TRACK. REPORT (number) MILES FROM FINAL APPROACH FIX. TRAFFIC IS A (Aircraft type) ([shortly going to commence] / [has commenced]) AN RNP APPROACH RUNWAY (designator). REPORT FINAL APPROACH FIX. HOLD POSITION, TRAFFIC IS A (aircraft type) ON AN RNP APPROACH RUNWAY (designator). [EXPECT DEPARTURE AFTER ([aircraft type] / [aircraft callsign])]</p>
...when pilot requests visual inspection of landing gear	<p>LANDING GEAR APPEARS DOWN; RIGHT (or LEFT, or NOSE) WHEEL APPEARS UP (or DOWN); WHEELS APPEAR UP; RIGHT (or LEFT, or NOSE) WHEEL DOES NOT APPEAR UP (or DOWN)</p>
...wake turbulence	<p>CAUTION WAKE TURBULENCE [FROM ARRIVING or DEPARTING (type of aircraft)]</p>
...jet blast on apron or taxiway	<p>CAUTION JET BLAST</p>

...propeller-driven aircraft slipstream	CAUTION SLIPSTREAM
Runway vacating and communications after landing	BACKTRACK RUNWAY (designator) [REPORT VACATED] TAXI [VIA (designator)] TO STAND (designator); TAXI [VIA (designator)] TO THE APRON
Helicopter operations	HOVER When necessary to instruct a helicopter to hold position whilst airborne in ground effect, waiting to proceed. HOLD POSITION When necessary to instruct a helicopter to hold position whilst ground taxiing. [GIVE WAY TO or FOLLOW (details)] AIR TAXI HOLDING POINT [(name)] RUNWAY (designator) [VIA TAXIWAY (name)]; [GIVE WAY TO or FOLLOW (details)] GROUND TAXI HOLDING POINT [(name)] RUNWAY (designator) [VIA TAXIWAY (name)]; RUNWAY (designator) TAKE-OFF AT YOUR DISCRETION, [SURFACE or INSTANT] WIND (direction and speed) [(units)]; (Designated point) TAKE-OFF AT YOUR DISCRETION, [SURFACE or INSTANT] WIND (direction and speed) [(units)]; INSTANT] WIND (direction and speed) [(units)]; RUNWAY (designator) LAND AT YOUR DISCRETION, [SURFACE or INSTANT] WIND (direction and speed) [(units)] (Designated point) LAND AT YOUR DISCRETION, [SURFACE or INSTANT] WIND (direction and speed) [(units)]
VEHICLE/TUG TRAFFIC	
Regards phraseology for the movement of vehicles and tugs towing aircraft on the manoeuvring area, the operative word in the messages shown is 'PROCEED' and 'TOW' respectively.	PROCEED/TOW APPROVED TO HOLDING POINT [designator] VIA [specific route to be followed] RUNWAY [(designator)] or; PROCEED/TOW APPROVED HOLD SHORT OF RUNWAY (designator) or; PROCEED/TOW APPROVED CROSS RUNWAY [(designator)]; TAKE (or TURN) FIRST (or SECOND etc.) LEFT (or RIGHT); PROCEED/TOW APPROVED VIA (identification of taxiway);

	<p>PROCEED/TOW APPROVED VIA RUNWAY (designator);</p> <p>PROCEED/TOW APPROVED TO TERMINAL (or other location, e.g. General Aviation Area);</p> <p>PROCEED/TOW APPROVED STRAIGHT AHEAD;</p> <p>PROCEED/TOW APPROVED WITH CAUTION;</p> <p>GIVE WAY TO (description of traffic);</p> <p>FOLLOW (description of traffic);</p> <p>VACATE RUNWAY (designator);</p> <p>EXPEDITE [reason];</p> <p>[Caution] PROCEED SLOWER [reason]</p>
<p>Regards phraseology for the movement of vehicles and tugs towing aircraft on the manoeuvring area, the operative word in the messages shown is 'PROCEED' and 'TOW' respectively.</p>	<p>HOLD POSITION;</p> <p>HOLD (distance) FROM (position);</p> <p>HOLD SHORT OF (position).</p> <p>NOTE: The procedure words ROGER and WILCO are insufficient acknowledgement of the instructions HOLD, HOLD POSITION and HOLD SHORT OF (position). In each case the acknowledgement shall be by the phraseology HOLDING or HOLDING SHORT, as appropriate</p>
<p>To cross a runway – vehicles</p>	<p>CROSS RUNWAY (designator) [REPORT VACATED];</p> <p>EXPEDITE CROSS RUNWAY (designator) TRAFFIC (aircraft type) (distance) MILES FINAL;</p> <p>NOTE 1: If the AFIS unit is unable to see the crossing vehicle/ person (e.g. night, low visibility), the instruction should always be accompanied by a request to report when the runway has been vacated.</p> <p>NOTE 2: The driver will, when requested, report "RUNWAY VACATED" when the vehicle is beyond the relevant runway holding position</p>

4.84 Examples of typical FISO/Pilot RTF exchanges are detailed below.



G-ABCD, request taxi



G-CD, taxi holding point C2, runway 06 via taxiway C, surface wind 060 10 knots, QNH 998 hectopascals, left hand circuit



Taxi holding point C2, runway 06 via taxiway C, QNH 998 hectopascals, G-CD

At the holding point.



G-CD, C2 Ready for departure



G-CD, Hold position



Holding, G-CD



G-CD, runway 06, take-off at your discretion, surface wind 080 15 knots



Runway 06 taking off, G-CD



G-CD, Traffic is a Cessna 172 base leg, runway 06, take-off at your discretion, surface wind 080 15 knots



Runway 06 taking off, G-CD



G-CD, Via C2 runway 06, take-off at your discretion, surface wind 080 15 knots



Via C2 runway 06 taking off, G-CD



G-CD, do you require to backtrack the runway?



Affirm, G-CD



G-CD, Traffic is a Cessna 172 base leg, via C2 back track runway 06 report lined up



Via C2 back track runway 06 report lined up, G-CD



G-CD lined up



G-CD, runway 06, take-off at your discretion, surface wind 080 15 knots



Runway 06 taking off, G-CD



G-CD, Report downwind

In the circuit.



G-CD, Downwind to land



G-CD, Roger, one ahead is a C172 right base, report final



Wilco, G-CD



G-CD, Final



G-CD, Roger, Cessna 172 ahead on final



Continuing, G-CD

When the runway is available.



G-CD, runway 06. land at your discretion wind 250, 8 knots



G-CD Roger runway 06, (Landing/Going Around)



G-CD runway occupied*, (State reason)



G-CD Roger, (Continuing/Going Around),

* Aircraft are not permitted to land on an occupied runway (Rules of the Air 2015 Rule 10(1)) Landing and take-off.



G-CD, runway 06, touch and go at your discretion, wind 250, 8 knots



G-CD Roger runway 06, touch and go

After landing.



G-CD, after the Cessna 172 taxiing right to left, taxi to the aero club, via taxiway Charlie



After the Cessna 172, taxi to the aero club, via taxiway Charlie, G-CD

RNP Instrument Approach Procedures

- 4.85 Pilot interpreted RNP instrument approach procedures (IAP) are available for use by suitably equipped aircraft and approved operators at certain aerodromes. The phraseology to be used is illustrated in the following examples.

Initial Call

- 4.86 Requests to fly the RNP IAP should be made using the initial approach fix and runway designator.



G-ABCD, request RNP approach [via BEMBO], Runway 27



G -ABCD, Walden Information roger, report Initial Approach Fix (Waypoint identification) Runway 27

- 4.87 In circumstances where an operator is not approved to conduct RNP IAPs, the AFISO will request the pilot's intentions.



G-ABCD, request RNP approach [via BEMBO], Runway 27



G -ABCD, Walden Information RNP approaches at Walden are only available to authorised operators. Request your intentions

Position Reporting

- 4.88 For traffic sequencing and to aid situational awareness, AFISOs may request the pilot to report when established on final approach track or to report at any other relevant point in the procedure, as shown below.



G-CD, report established on final approach track



G-CD, report 2 miles from final approach fix

Traffic Information

- 4.89 AFISOs will provide traffic information on approved aircraft conducting an RNP IAP.



G-EFGH, Walden Information, traffic is a Cherokee ([shortly going to commence] / [has commenced]) an RNP approach Runway 27

Final Approach Fix

- 4.90 AFISOs will request the pilot to report at the final approach fix.



G--CD, report final approach fix



G-CD, wilco



G-CD, final approach fix [Runway 27]



G-CD, final [Runway 27]

Inbound / Outbound Aircraft interaction

- 4.91 In certain circumstances, the AFISO may be required to hold the departing aircraft on the ground to enable the aircraft conducting the RNP IAP to complete the approach safely. In these circumstances, the AFISO may advise the aircraft intending to depart when they can expect to depart.



G-EFGH, Walden
Information, hold position,
traffic is a Cherokee on an
RNP approach Runway 27.
Expect departure after
([aircraft type] / [aircraft
callsign])

Reporting Equipment Problems

- 4.92 Phraseology related to problems with equipment is contained in paragraphs 6.53 and 6.54.

Aerodrome Phraseology for Helicopters

Introduction

- 4.93 Rotary-wing flight characteristics mean that helicopter operations at aerodromes can differ significantly from fixed-wing operations. This section describes standard phraseology and procedures to address the different requirements for helicopter lifting, taxiing, taking-off and landing (including the approach and departure phases), particularly at aerodromes where rotary-wing and fixed-wing operations are integrated.
- 4.94 Standard phraseology should be used in all situations for which it is specified. When standardised phraseology cannot serve an intended transmission, plain language should be used. The use of plain language may further assist when describing rotary-wing aircraft manoeuvres. Care should be exercised to ensure that all parties involved achieve clear understanding.
- 4.95 The phraseology described in this section is intended for general use. However, the examples of taxiing phraseology describe communications specific to aerodromes at which ATC or AFIS is provided. Phraseology examples for take-off and landing are specific to communications at aerodromes with ATC.

Helicopter Callsigns

- 4.96 Aircraft callsigns to be used are described in Chapter 2. Provision is made for the name of the aircraft manufacturer, or the aircraft model, to be used before the aircraft registration (in full or abbreviated form). If considered appropriate, the pilot or ATSU may replace manufacturer's name or aircraft model with the term 'Helicopter' where this may benefit the ATSU or other aircraft.

Table 2

Full callsign	Abbreviation
Helicopter G-ABCD	Helicopter CD

Helicopter Phraseology for Taxiing

- 4.97 These procedures are for helicopters taxiing for departure, or after landing, or for general manoeuvring on the aerodrome. Phraseology and procedures for specific manoeuvring on the aerodrome, for example for training purposes, should be described in local procedures.
- 4.98 The term 'LIFT' shall describe a manoeuvre where the helicopter gets airborne and enters a 'HOVER'.
- 4.99 'HOVER' describes a manoeuvre where the helicopter holds position whilst airborne in ground effect, waiting to proceed. Hover allows spot/ axial turns (i.e. about the central axis of the helicopter). When required, further

instructions should subsequently be transmitted to permit the helicopter to proceed.

- 4.100 The term 'AIR TAXI' shall be used when it is necessary for a helicopter to proceed at a slow speed above the surface, normally below 20 knots and in ground effect (ICAO).
- 4.101 The instruction 'GROUND TAXI' shall be used for the movement of a helicopter, in contact with the surface of the aerodrome, under its own power. This could be required for a helicopter fitted with wheels, to reduce rotor downwash (ICAO).
- 4.102 An instruction to 'TAXI' leaves the pilot free to select the most appropriate method, either ground taxi or air taxi. Pilots and controllers should use the term AIR TAXI or GROUND TAXI when required to differentiate between air taxiing and ground taxiing (for helicopters equipped with wheels).

NOTES:

1. Air taxiing helicopters at aerodromes where ATC and AFIS are provided will be issued with detailed taxi routes and instructions as appropriate to prevent collisions with other aircraft and vehicles. Helicopters are expected to follow procedures/routes on aerodromes appropriate to aeroplanes unless otherwise authorised.
 2. ATC and AFIS units will normally avoid issuing instructions that result in taxiing helicopters coming into close proximity with small aircraft or helicopters and will normally give consideration to the effect of turbulence from taxiing helicopters on arriving and departing light aircraft (ICAO).
- 4.103 For a helicopter taxiing, the instruction 'HOLD' shall indicate a requirement to come to a standstill.
- 4.104 A helicopter air taxiing and instructed to 'HOLD', may hold in the hover or may touch down and hold on the ground at the pilot's discretion. If touch down is not authorised, a helicopter may be instructed by the ATSU to 'HOLD IN THE HOVER'.
- 4.105 A helicopter ground taxiing and instructed to 'HOLD' shall hold on the ground, unless a hover manoeuvre is specifically authorised or requested by the ATS unit.
- 4.106 ATC and AFIS will normally avoid issuing a frequency change instruction to a single-pilot helicopter hovering or air taxiing. If required and whenever possible, control instructions from the next ATS unit will be relayed until the pilot is able to change frequency (ICAO).

Helicopter Phraseology for Take-Off and Landing (ATC only)

- 4.107 At aerodromes, helicopter take-offs and landings may not be restricted to designated runways or landing areas. With appropriate permission helicopters may take-off and land at any location on the aerodrome. At aerodromes with an air traffic control service, all movements are subject to the permission of the ATC unit.
- 4.108 At aerodromes with air traffic control service, when helicopters land or take-off on the manoeuvring area, and within sight of the VCR the terms 'CLEARED TO LAND' and 'CLEARED FOR TAKE-OFF' followed by the position from where they are authorised to take-off from (ICAO PANS ATM 12.3.4.11 i), i.e. 'CLEARED TO LAND AT...' 'CLEARED FOR TAKE-OFF FROM...', shall be used to authorise the manoeuvres.
- 4.109 At aerodromes with air traffic control service, when helicopters land or take-off at locations not on the manoeuvring area (e.g. apron, maintenance area, sites adjacent the aerodrome), or locations not in sight of the VCR, or unlit locations at night, the appropriate phrase 'LAND AT YOUR DISCRETION' or 'TAKE-OFF AT YOUR DISCRETION' shall be used to authorise the manoeuvres. Relevant traffic information on other aircraft (airborne or on the ground) shall also be passed, and the name of the designated landing/departure point/area should be stated.
- 4.110 The term 'TOUCH DOWN' shall be used to describe an aircraft (helicopter or fixed-wing) coming into contact with the surface in accordance with normal operation. A clearance to land leaves the pilot of a helicopter free to either enter a low hover, or to touch down, as appropriate.

Helicopter Hover Phraseology Examples (ATC and AFIS only)



Borton Tower, G-ABCD,
request lift



G-ABCD, Borton Tower,
lift and hover, surface
wind 040, 6 knots,

Helicopter Taxiing Phraseology Examples (ATC and AFIS only)

4.111 Taxi Instruction



Borton Tower, G-ABCD,
request TAXI for
departure runway 06



G-ABCD, Borton Tower,
TAXI holding point H1,
runway 06, via taxiway
Golf, QNH 997
hectopascals



Taxi holding point H1
runway 06 via taxiway
Golf, QNH 997
hectopascals G-ABCD

NOTE: The use of 'taxi' indicates the pilot is free to air taxi or ground taxi at their discretion.

4.112 Air Taxi Instruction (if required).



Borton Tower, G-ABCD,
request Air Taxi for
departure runway 06



G-ABCD, Borton Tower,
Air Taxi holding point
H1, runway 06, via
taxiway Golf, QNH 997
hectopascals



Air Taxi holding point
H1 runway 06 via
taxiway Golf, QNH 997
hectopascals, G-ABCD

Ground Taxi Instruction (if required)



Borton Tower, G-ABCD,
request ground taxi for
departure runway 06



G-ABCD, Borton
Tower, ground taxi
holding point H1
runway 06 via taxiway
Golf

Helicopter Take-Off and Landing Phraseology Examples (ATC only)

4.113 Take-off on the Runway.



G-CD, ready for
departure



G-CD, Runway 06,
Cleared for take-off



Cleared for take-off, G-
CD

4.114 Landing on the Runway.



G-CD, final runway 06

G-CD, Runway 06,
cleared to land, surface
wind 060 10Runway 06 cleared to
land, G-CD

4.115 Take-off from a designated Helicopter Landing Area on the Manoeuvring Area.








G-CD, 'Area Whiskey'
ready for departureG-CD, 'Area Whiskey'
Cleared for take-off'Area Whiskey' cleared
for take-off, G-CD

4.116 Landing at a designated Helicopter Landing Area on the Manoeuvring Area.

Borton Tower G-ABCD,
at the Power Station to
land 'Area Whiskey'Helicopter G-CD,
Borton Tower, runway
06 in use, QNH 997
hectopascals, 'Area
Whiskey' surface wind
060 10, cleared to landRunway 06 in use,
QNH 997
hectopascals. 'Area
Whiskey' cleared to
land, G-CD

4.117 Take-off from the Apron (or location not on the Manoeuvring Area) for a Direct Departure (i.e. not following the visual circuit for departure).

Borton Tower, Helicopter
G-ABCD, beside the
south side hangars ready
for direct departure to
WaldenHelicopter G-ABCD,
Borton Tower, direct
departure, surface wind
060 10, QNH 997
hectopascals, no
reported traffic, Take-off
at your discretion

			Taking-off, departing direct, QNH 997 hectopascals, Helicopter G-ABCD
4.118	Direct Arrival to the Apron (or location not on the Manoeuvring Area) for Landing.		
		Borton Tower, Helicopter G-ABCD, 5 miles east inbound to land Eastern Apron	 Helicopter G-ABCD, Borton Tower, route to the eastern apron via the Power Station, report at the Power Station wind 060 10 QNH 997 hectopascals, runway 06 in use
			Route to Eastern Apron via the Power Station, wilco, QNH 997 hectopascals, runway 06 in use, Helicopter G-ABCD
		Helicopter G-ABCD, at the Power Station	 Helicopter CD, traffic is a C172 taxiing from Stand 8 for taxiway B, eastern apron, surface wind 060 10, land at your discretion
			Roger, Landing Eastern Apron, Helicopter CD

Aerodrome Phraseology for Vehicles (ATC and AFIS only)

Introduction

- 4.119 The expeditious movement of vehicles plays an essential supporting role in the operation of an aerodrome. Whenever possible the areas in which vehicles and aircraft operate are segregated. However, there are many occasions when vehicles need to move on the manoeuvring area either for maintenance purposes or in direct support of aircraft operations.
- 4.120 Procedures governing the movement of vehicles vary widely from aerodrome to aerodrome, but certain factors to be taken into account when driving on an aerodrome are common to all.
1. In general, aircraft are by no means as manoeuvrable as ground vehicles;
 2. The visibility from an aircraft cockpit for ground movement purposes is often restricted compared with a vehicle.
- 4.121 Therefore, when vehicles are operating in close proximity to aircraft, drivers should be extremely vigilant and comply with Rule 12/13 of the Rules of the Air and, if applicable, ATC instructions.
- 4.122 Correct RTF operating technique must be observed by all users. For all vehicles on the movement area, it is important that a continuous listening watch is maintained, not only in case of further instructions or information from the tower, but also so that drivers can be aware of the movements, and intended movements, of other traffic thereby reducing the risk of conflict.
- 4.123 Ground movement instructions are similar for aircraft, vehicles and tractors towing aircraft but the operative word in the message is 'taxi', 'proceed' and 'tow' respectively.
- 4.124 **The examples that follow are applicable to air traffic controllers and FISOs at aerodromes only. Air/Ground Communication Service operators are not to pass instructions and must use the phraseology they would use for the movement of aircraft on the aerodrome.**

Movement Instructions

- 4.125 Drivers on first call should state the ground station they are calling, identify themselves by their vehicle callsign and state their position and intended destination. Where the planned route includes crossing a runway, this should be included in the initial call.

	Metro Ground Works 21, stand 27 request proceed to work in progress taxiway Hotel		Works 21, proceed to taxiway Hotel via Kilo and Alpha
			Proceed to taxiway Hotel via Kilo and Alpha, Works 21
	Metro Ground, Works 3, stand 27 request proceed to work in progress on taxiway Hotel, via runway 34		Works 3, via Alpha 1 and Charlie 1 cross runway 34, proceed to taxiway Hotel
			Via Alpha 1 and Charlie 1 cross runway 34, proceed to taxiway Hotel, Works 3

- 4.126 If the controller is too busy, they will reply 'standby'. This means that the driver should wait until the controller calls back. The driver shall **not** proceed until permission is given.
- 4.127 When there is conflicting traffic the controller may reply 'hold position'. This means that the driver shall not proceed until the controller calls back with permission. All other replies should contain a clearly defined point to which the driver may proceed; this may or may not be the intended destination. If it is not the intended destination drivers must stop at this point and further permission shall be requested.

	Tels 5, by the control tower request proceed to hangar 3		Tels 5, hold position
			Holding, Tels 5
	Tels 5, at Charlie 8 request proceed to hangar 3		Tels 5, proceed holding point Charlie 1 runway 14, via Alpha and Bravo



Proceed holding point
Charlie 1 runway 14,
Tels 5, via Alpha and
Bravo

NOTE: The vehicle has only been cleared as far as the holding position to await runway crossing clearance and permission to proceed to hangar 3.

- 4.128 The controller/FISO may include the instruction 'hold short' to reinforce the point beyond which the vehicle may not proceed.
- 4.129 Permission to proceed on the apron may include instructions to ensure safe operations.



Tug 5, stand 21 request
proceed to stand 26



Tug 5, after the
BIGJET BAe 146 on
your right has
passed, proceed to
stand 26, caution jet
blast



After the BAe 146
has passed proceed
stand 26, Tug 5



Checker 1, caution work in
progress north side of
taxiway Hotel



Roger, Checker 1



Fire 1, report your position



Fire 1, taxiway Bravo
by the maintenance
hangar

To Cross a Runway

- 4.130 Drivers should note carefully the position to which they may proceed, particularly where the intended route involves crossing a runway. Some aerodromes may have procedures that will allow vehicles to proceed to a holding point on the movement area and then request runway crossing instructions. Under no circumstances shall a driver cross a runway unless **positive permission has been given and acknowledged**. A runway vacated report should not be made until the vehicle (and tow) is clear of the designated runway area.
- 4.131 In order to prevent runway incursions, when an ATS Unit issues an instruction to cross a runway, the appropriate holding point designator shall be included in the instruction. A vehicle driver should query any instruction that identifies a holding point designator inconsistent with the vehicle location, or the driver's request, before proceeding onto the runway.



Ops 1, on the Southern Apron request proceed to Northern Apron, via runway 27



Ops 1, proceed holding point Alpha 2 via Alpha and Bravo hold short of runway 27



Proceed holding point Alpha 2 via Alpha and Bravo hold short of runway 27, Ops 1



Ops 1, holding point Alpha 2 runway 27 request cross



Ops 1, via Alpha 2 and Charlie 2 cross runway 27, report vacated



Via Alpha 2 and Charlie 2, cross runway 27, wilco, Ops 1



Ops 1, runway 27 vacated



Ops 1, proceed to Northern Apron



Proceed to Northern Apron, Ops 1

- 4.132 Where it is not possible for the controller to issue permission to cross the runway, alternative instructions may be given.



Ops 1, on the Southern Apron request proceed to Northern Apron via runway 27



Ops 1, negative, proceed to Northern Apron via Perimeter Road



Proceed to Northern Apron via Perimeter Road, Ops 1

- 4.133 Positive permission must be given and acknowledged before a vehicle driver enters a runway to carry out a specialised task.



Checker 1, holding point Charlie 1 request enter runway 05 for surface inspection



Checker 1, via holding point Charlie 1 enter runway 05, report vacated



Via holding point Charlie 1 enter runway 05, wilco, Checker 1

- 4.134 If a vehicle is operating on the runway, it will be instructed to vacate the runway when it is expected that an aircraft will be landing or taking off.



Works 21, vacate runway 27 at Alpha 1, report vacated



Vacate runway 27 at Alpha 1, wilco, Works 21



Works 21, runway 27 vacated



Works 21

- 4.135 When a vehicle is moving on the movement area it may be necessary to inform the vehicle of a potentially dangerous situation and to tell it to stop.



Works 21, stop immediately
aircraft crossing ahead



Stopping, Works 21

Vehicles Towing Aircraft

- 4.136 Drivers of vehicles required to tow aircraft should not assume that the receiving station is aware that an aircraft is to be towed. The performance and manoeuvrability of ground vehicles is obviously considerably reduced when towing aircraft and this is taken into account when instructions to such vehicles are issued. Therefore, in order to avoid any confusion and as an aid to identification, drivers should state the type, and where applicable the operator, of the aircraft to be towed in the first call.



Ground Tug 9, request tow
BIGJET BAe 146 from stand
25 to maintenance hangar 3



Tug 9 Ground, tow
approved from stand
25 to maintenance
hangar 3 via taxiway
Echo



Tow approved from
stand 25 to
maintenance hangar
3 via taxiway Echo,
Tug 9

- 4.137 Where it is necessary for the tug to push an aircraft back from a parking standing before towing, this should be included.



Tug 9, request push back and
tow Blue Skies Boeing 737
from stand 25 to maintenance
hangar

Low Visibility Procedures

- 4.138 Arrangements for notifying low visibility procedures vary between aerodromes and may include a broadcast by the controller.



All stations, Metro Tower, low
visibility procedures in force

Messages Regarding Safety of an Aircraft

- 4.139 Information regarding the safety of a specific aircraft should be transmitted to the controller/FISO.



Ops 1, open ventilation panel
starboard side BIGJET
Boeing 737 passing on
taxiway Delta



Ops 1, roger

Messages Regarding Wildlife

- 4.140 Drivers should follow the procedures for their particular aerodrome when reporting sightings of wildlife.



Fire 3, large flock of birds on
grass north of taxiway Bravo

Driver Unsure of Position

- 4.141 If a driver is lost or unsure of the vehicle's location, they should inform the controller/ FISO immediately and follow instructions.



Tug 8, unsure of position



Tug 8, hold position I
will call for assistance



Holding, Tug 8

Broken-down Vehicle

- 4.142 The driver of a broken-down vehicle should inform the controller/FISO immediately, including precise information regarding the vehicle's location and follow the aerodrome's procedures for broken-down vehicles.



Leader 2, holding point
Charlie 1, broken-down
unable to move

Radio Failure

- 4.143 In the event of a radio failure, drivers should follow the procedures for their aerodrome and comply with any light signals by the controller/ FISO.

Aerodrome Air/Ground Communication Service

Phraseology

Introduction

- 4.144 Concise and unambiguous phraseology used at the correct time is vital to the smooth, safe and expeditious running of an aerodrome and associated ATZ. It is not only the means by which information is passed but it also assists pilots in maintaining an awareness of other traffic in their vicinity, particularly in poor visibility conditions.
- 4.145 Messages will not be transmitted to an aircraft during take-off, the last part of final approach or the landing roll, unless it is necessary for safety reasons, because it will be distracting to the pilot at a time when the cockpit workload is often at its highest.
- 4.146 Local procedures vary from aerodrome to aerodrome, and it is impossible to give examples to cover every situation which may arise at the multiplicity of different types of aerodrome. Information in addition to that shown in the examples, e.g. time checks, etc. may be provided as necessary.

Type of Service

- 4.147 As described in Chapter 2, where an aeronautical station exists at an aerodrome, the type of service provided falls into one of three categories. In this section the examples are confined to those used by Air/Ground Communication Service operators.
- 4.148 Whilst the RTF procedures used by air traffic controllers and FISOs form the main content of this publication it should be noted that the phraseology used by Air/Ground Communication Service operators is different from that used by controllers and FISOs. This section describes only the phraseology provided by AGCS operators and details of the service itself may be found in CAP 452 Aeronautical Radio Station Operator's Guide on the CAA web site or from the CAA's printers (Details can be found on the inside cover of this publication).
- 4.149 An AGCS radio station operator is not necessarily able to view any part of the aerodrome or surrounding airspace. Traffic information provided by an AGCS radio station operator is therefore based primarily on reports made by other pilots. Information provided by an AGCS radio station operator may be used to assist a pilot in making decisions, however, the safe conduct of the flight remains the pilot's responsibility.

Air/Ground Station Identification

- 4.150 Radio operators must ensure that the full callsign, including the suffix 'RADIO', is used in response to the initial call from an aircraft and on any other occasion that there is doubt.

Phraseology and Examples

- 4.151 From time-to-time air traffic controllers and flight information service officers are invited by aerodrome authorities to provide an Air/Ground Communication Service. They are permitted to do so in certain circumstances provided they hold a valid Certificate of Competence (CA 1308). However, air traffic controllers, in particular, must appreciate that there is a considerable difference between the service they normally provide and the Air/Ground Communication Service. Therefore, they must be careful not to lapse into providing an air traffic control service.
- 4.152 Personnel providing an Air/Ground Communication Service must ensure that they do not pass a message which could be construed to be either an air traffic control instruction or an instruction issued by FISOs for specific situations. Clearances initiated by an air traffic control unit may be relayed but the name of the authority must be included in the message, e.g.: 'G-ABCD London Control clears you to join controlled airspace'

NOTE: Air Traffic Control clearances passed to radio operators to be issued on behalf of the ATC unit are to be read back in full to the issuing authority. The pilot is to readback, in full, the clearance relayed by the Air/Ground Communication Service operator.










Table 3

Event	Response
A/C requests taxi information	(Aircraft callsign) runway (designation) [right hand circuit] wind number (degrees) number (knots) QFE/QNH (pressure) hectopascals
A/C reports wishing to cross a runway	(Aircraft callsign) (traffic information e.g. no reported traffic or, after the (aircraft type) has landed no reported traffic)
A/C reports ready to take-off	(Aircraft callsign) no reported traffic (or traffic is...) surface wind (number) degrees (number) knots
A/C reports airborne	(Aircraft callsign) roger
A/C overflying reports entering ATZ or asks for traffic information.	(Aircraft callsign) (traffic information) (aerodrome information)
A/C requests joining information for a landing	(Aircraft callsign) runway (designation) right hand circuit surface wind (number) degrees (number) knots, QFE/QNH (pressure) hectopascals (traffic information)

A/C reports joining circuit	(Aircraft callsign) roger, (plus, when applicable, updated traffic information and any changes to aerodrome information)
A/C reports landed and/ or runway vacated	(Aircraft callsign) (any appropriate aerodrome information)

NOTE: AGCS operators must not use the expression ‘at your discretion’ as this is associated with the service provided by FISOs and is likely to cause confusion to pilots.

4.153 An example of a typical RTF exchange is detailed below:

	Seaton Radio, G-ABCD, radio check 123.0 and request taxi information		G-ABCD, Seaton Radio, readability 5 runway 23 QNH 1022
			G-ABCD, readability 5 also, taxiing for runway 23 QNH 1022
			G-CD, Roger
	G-CD, ready for departure		G-CD, Roger. No reported traffic, surface wind 230 degrees 10 knots
			Roger, taking off, G-CD
or,			
	G-CD, traffic is a Cherokee reported final, surface wind 230 degrees 10 knots		Roger, taking off, G-CD
or,			
			Roger, holding position, G-CD

Once Cherokee has landed and vacated:



G-CD, lining-up and taking off



G-CD, Roger, surface wind 230 degrees 10 knots



G-CD, leaving the circuit to the west.



G-CD, Roger two other aircraft reported operating VFR to the west



Roger, G-CD



Seaton Radio, G-BCDA, request traffic information



G-BCDA, Seaton Radio, pass your message



G-BCDA, PA28 from Westbury to Millom position overhead Marlow, 1800 feet on QNH 1021, estimate Seaton at 15



G-DA, Roger. Runway 23 is active left hand with a Cessna 172 reported downwind QNH 1022

















Runway 23 left hand circuit. QNH 1022 will report overhead, G-DA



G-DA, overhead at 15 will report leaving the frequency



G-DA, Roger

			G-DA, now leaving the ATZ changing to Wrayton Information 124.750
			G-DA, Roger
	Seaton Radio, G-ABCD, 6 miles west of Seaton request join		G-CD, Seaton, runway 23 left hand, QFE 1021. Traffic is a Cessna 172 reported left base
			Roger. Runway 23 left hand circuit, QFE 1021, G-CD
	G-CD, overhead joining for runway 23		G-CD, Roger no reported traffic
or,			
	G-CD, downwind		G-CD, Roger no reported traffic
	G-CD, final		G-CD, Roger surface wind 220 15. Traffic is a Cessna 172 reported lining up to depart
			Roger, G-CD
	G-CD, vacated left and returning to the club		G-CD, Roger



G-CD, ready to cross runway
15



G-CD, Roger no
reported traffic



Roger, G-CD. Is there
a convenient parking
space



G-CD, parking
available next to the
blue Cessna 152

AGCS RNP Initial Call

4.154 Pilots should advise of their intention to fly the RNP IAP specifying the initial approach fix and runway designator.

(position) FOR RNP APPROACH [VIA (waypoint identification)], RUNWAY (number)



Seaton Radio, G-ABCD, 12 miles south of Seaton, for RNP approach via INJUN, Runway 27

AGCS PPR Management

4.155 The aircraft has PPR, is within slot tolerance and aerodrome suspension procedures have been completed.

ROGER, RUNWAY (designator), QNH (or QFE) (number) [units], TRAFFIC IS (information)



G-CD, Seaton Radio roger, Runway 27, QNH 998 hectopascals, no reported traffic



G-CD, Seaton Radio roger, Runway 27, QNH 1022, traffic is a Cherokee departing the circuit to the West

AGCS Position Information

4.156 Where position reports are required by the aerodrome operator for the safe conduct of the procedure(s), pilots will be required to broadcast such position reports at pre-determined points as published for that specific procedure in the AIP.

4.157 In exceptional circumstances, where it is known or suspected that a pilot has failed to make the required position report(s) and/or it is suspected that there may be circumstances which may affect the safety of that flight, AGCS radio station operators can seek to prompt pilots to confirm their position or to confirm their position in relation to a published point on the procedure.



G-CD, Seaton Radio, confirm your position



G-CD, Seaton Radio, confirm GNSS distance from INJUN

4.158 Before the pilot reports commencing the RNP IAP, where aerodrome circuit suspension procedures have been completed, the pilot must be advised.



G-CD, no known traffic in the ATZ, air ground communications only

NOTE: AGCS radio station operators are not permitted to sequence aircraft. Where aerodrome operators have approved PPR and aerodrome traffic circuit management procedures that are designed to support the safe transition of IAP traffic into the aerodrome traffic circuit, the RTF transmission 'no known traffic in the ATZ' indicates that, to the knowledge of the 'air-ground operator', the procedures have been completed.

4.159 The aircraft has PPR and is within slot tolerance, aerodrome circuit suspension procedures have not been completed.



G-CD, Seaton Radio, roger, Runway 27, QNH 1-0-2-2, aerodrome circuit ACTIVE. Traffic is a Cherokee 3 miles west of Seaton, Request intentions?

4.160 The aircraft does not have PPR.

G-CD, Seaton Radio, RNP approaches are only available with prior permission, Request intentions?

4.161 The aircraft has PPR but is outside of slot tolerance.

G-CD, Seaton Radio, Prior permission expired/expires at 1000z, (traffic information). Request intentions?

AGCS Information on Aerodrome Traffic4.162 AGCS radio station operators will relay information on the reported position of aircraft operating in the vicinity of the aerodrome, including those conducting RNP IAP.

G-CD, Seaton Radio, traffic is a Cherokee ([reported on] / [shortly going to commence] / [has commenced]) RNP approach [via INJUN] Runway 27

AGCS RAIM Failure4.163 Pilot reports RAIM failure.

UNABLE RNP, LOSS OF RAIM, (intentions)



RAIM ALERT, (intentions)



Seaton Radio, G-CD unable RNP, loss of RAIM, continuing for a visual approach



Seaton Radio, G-CD, unable RNP, loss of RAIM



Seaton Radio, G-CD RAIM alert, going around



G-CD, Seaton Radio, roger, request your intentions?

4.164 AGCS reports RAIM failure.



G-CD, GNSS reported unreliable

AGCS Unexpected Go-around

4.165 Pilot reports an unexpected go-around.



G-CD, Seaton Radio, request your intentions

ATZ / Aerodrome Traffic Circuit Management (AGCS)

4.166 A pilot requests to join the aerodrome traffic circuit while aerodrome traffic circuit suspension procedures are in force.



G-ABCD, Seaton Radio, aerodrome traffic circuit ([is closed] / [will close at (time)]. Traffic is a Cherokee ([shortly going to commence] / [has commenced]) RNP approach Runway 27. Request your intentions?

4.167 A pilot request to transit the ATZ while an aircraft is flying an RNP IAP. AGCS radio station operators are not permitted to restrict access to an ATZ and must provide sufficient information for the flight to be conducted safely.



G-ABCD, Seaton Radio, traffic is a Cherokee on RNP approach Runway 27, request your intentions?

4.168 The AGCS radio station operator needs to advise aerodrome traffic of the opening/closure of the aerodrome traffic circuit.



All stations, Seaton
Radio, aerodrome traffic
circuit will close at (time)
due to RNP approach
Runway 27



All stations, Seaton
Radio, aerodrome traffic
circuit closed. Traffic is a
Cherokee reported on
RNP approach Runway
27



All stations, Seaton
Radio, aerodrome traffic
circuit closed, Departure
not permitted until (time)



All stations, Seaton
Radio, aerodrome traffic
circuit open

ATZ / Aerodrome Traffic Circuit Management (AFIS)

4.169 A pilot requests to join the aerodrome traffic circuit while aerodrome traffic circuit suspension procedures are in force.



G-WXYZ, Walden Information,
aerodrome traffic circuit [is
closed] / [will close at (time)].
Traffic is a Cherokee ([shortly
going to commence] / [has
commenced])



RNP approach Runway 27,
request your intentions?

4.170 A pilot requests to transit the ATZ while an aircraft is flying a RNP IAP.
Aerodrome FISOs are not permitted to restrict access to an ATZ and must
provide sufficient information for the flight to be conducted safely.



G-WXYZ, Walden Information, traffic is a Cherokee on RNP approach Runway 27, request your intentions?

4.171 The Aerodrome FISO needs to advise aerodrome traffic of the opening/closure of the aerodrome traffic circuit.



All stations, Walden Information, aerodrome traffic circuit will close at (time) due to RNP approach Runway 27



All stations, Walden Information, aerodrome traffic circuit closed. Traffic is a Cherokee reported on RNP approach Runway 27



All stations, Walden Information, aerodrome traffic circuit closed, Departure not permitted until (time)



All stations, Walden Information, aerodrome traffic circuit open

Offshore Communication Service

Introduction

4.172 Aeronautical radio stations located offshore on rigs, platforms and vessels provide an air-ground service to helicopters operating in the vicinity.

Offshore Station Identification

4.173 Offshore radio stations must identify themselves using the callsign specified by the CAA in the approval document. No suffix will be added to the CAA approved callsign when traffic information is to be passed by the operator of the aeronautical radio station. When logistics information is to be passed the suffix 'LOG' shall be added to the approved callsign.

Offshore Phraseology

4.174 Actual communications will follow a pattern dictated by the individual circumstances. However, in the interests of conformity and to avoid misunderstandings, a selection is given of the types of messages a helicopter pilot may pass, their meaning where necessary and the response which should be made.

Table 4

Helicopter	Response
(Offshore station callsign) (Aircraft callsign) Take the Flight Watch (You are requested to maintain radio watch until watch is taken by another station).	(Aircraft callsign) (Offshore station callsign) I have the Flight Watch
(Offshore station callsign) (Aircraft callsign) position ...	(Aircraft callsign) (Offshore station callsign) Roger
(Offshore station callsign) (Aircraft callsign) Report your weather.	(Aircraft callsign) (Offshore station callsign) Weather (State the following information as appropriate) Surface Wind (number) degrees (number) knots, Visibility (distance) kilometres/ metres, Weather (rain, snow, showers, etc.), Cloud few/scattered etc., (number) feet estimated, Ambient temperature (number), Helideck temperature (number), (Name of Area) QNH (pressure) (hectopascals), QFE (pressure) (hectopascals), Pitch (number) degrees: Roll (number) degrees: Heave (number) metres (as appropriate)
(Offshore station callsign) (Aircraft callsign) Switch on the NDB.	(Aircraft callsign) (Offshore station callsign) Wilco NDB frequency (number) kHz ident (letters) (if requested)
(Offshore station callsign) (Aircraft callsign) ETA is (time).	(Aircraft callsign) (Offshore station callsign) Roger
(Offshore station callsign) (Aircraft callsign) Landing in (number) minutes.	(Aircraft callsign) (Offshore station callsign) Roger
(Offshore station callsign) (Aircraft callsign) overhead	(Aircraft callsign) (Offshore station callsign) Roger

Helicopter	Response
(Offshore station callsign) (Aircraft callsign) (navigation aid designator) outbound (this indicates the pilot is using the NDB as a navigational aid to take them from overhead to a point where they can safely descend below cloud and return under visual conditions to the helideck)	(Aircraft callsign) (Offshore station callsign) Roger
(Offshore station callsign) (Aircraft callsign) Is the deck available for landing?	(Aircraft callsign) (Offshore station callsign) Affirm Deck available (for landing) or Deck obstructed, expect (number) minutes delay, or Deck closed due to (reason), expect (number) minutes delay NOTE: Transmission of 'for landing' is optional
(Offshore station callsign) (Aircraft callsign) Ready for departure	(Aircraft callsign) (Offshore station callsign) Roger (or pass relevant information)
(Offshore station callsign) (Aircraft callsign) Departing	(Aircraft callsign) (Offshore station callsign) Roger
(Offshore station callsign) (Aircraft callsign) Switch off the NDB	(Aircraft callsign) (Offshore station callsign) Wilco
(Offshore station callsign) (Aircraft callsign) Radio contact with (ATS Unit), close down the Flight Watch	(Aircraft callsign) (Offshore station callsign) Closing down Flight Watch
Additionally, the following are applicable to vessels:	
(Vessel callsign) (Aircraft callsign) Report position	(Aircraft callsign) (Vessel callsign) Position (lat/long)
(Vessel callsign) (Aircraft callsign) Report course and speed	(Aircraft callsign) (Vessel callsign) Course and speed (number) degrees (number) knots
(Vessel callsign) (Aircraft callsign) Report relative wind (Relative to the ship's heading)	(Aircraft callsign) (Vessel callsign) Relative wind Port/Starboard (number) degrees (number) knots
(Vessel callsign) (Aircraft callsign) Maintain course and speed	(Aircraft callsign) (Vessel callsign) Roger

(Vessel callsign) (Aircraft callsign) Alter course Port/Starboard (number) degrees	(Aircraft callsign) (Vessel callsign) Standby. Course now (number) degrees
(Vessel callsign) (Aircraft callsign) Change speed to (number) knots	(Aircraft callsign) (Vessel callsign) Standby. Speed now (number) knots

NOTES:

1. The phrase 'Deck available (for landing)' replaces the previously used phrase, 'Deck is clear for landing', in order to avoid any possible confusion with a landing clearance that may be issued by an Air Traffic Control unit. For operational purposes, the two terms should be considered to have the same meaning.
2. Procedures for certain messages (e.g. when following the requirements for notification of the flight when there is no ATSU at the destination – see AIP ENR 1.10), including the phraseology to be used, should be contained in the aircraft operator's standard operating procedures and local operating procedures. These messages are not air traffic service messages and are not reproduced in this document.

Helideck Movement

- 4.175 Helicopter crews must be provided with accurate information regarding the pitch, roll and heave of the helideck. Reports on pitch and roll should include values, in degrees, about both axes of the true vertical datum (i.e. relative to the true horizon) and be expressed in relation to the vessel's heading.
- 4.176 Pitch should be expressed in terms of 'up' and 'down' and roll should be expressed in terms of 'left' and 'right'. Heave should be reported in a single figure, being the total heave motion of the helideck rounded up to the nearest metre. Heave is taken to be the vertical difference between the highest and lowest points of the helideck movement.
- 4.177 A standard radio message should be passed to the pilot containing the information on the helideck movement in an unambiguous format. Should the crew require other motion information or amplification of the standard message, they will request it.
- 4.178 An example of the 'standard message' would be: '(Pitch, roll and heave). Roll one degree left and three degrees right; pitch two degrees up and two degrees down; heave two metres.'

Radiotelephony Reports at Unattended Aerodromes

Introduction

- 4.179 Where an aeronautical communications frequency is allocated for use at a United Kingdom aerodrome, all RTF communications are to be conducted on the allocated frequency. For licensed aerodromes, allocated frequencies are promulgated in the UK AIP. A common frequency (135.480 MHz) known as 'SAFETYCOM' is made available for use at aerodromes where no other frequency is allocated (UK AIP GEN 3.4 refers) to enable pilots to broadcast their intentions to other aircraft that may be operating on, or in the vicinity of, the aerodrome.
- 4.180 At some UK aerodromes, air traffic movements may occur outside the promulgated hours of watch of Air Traffic Services (ATS). In order to improve the safety of these aerodrome operations, pilots should broadcast information on their intentions to other aircraft that may be operating on, or in the vicinity, of the aerodrome.
- 4.181 The phraseology to be used at an unattended aerodrome, as described in this section, is not to be used at aerodromes with ATS in attendance. Where ATS is provided, the relevant ATS unit will issue appropriate instructions.
- 4.182 All transmissions at unattended aerodromes shall be addressed to '(Aerodrome name) Traffic'. No reply to an unattended aerodrome report needs to be transmitted.
- 4.183 Pilot reports are described for a Standard Overhead Join. This procedure will allow pilots to determine the runway in use and to orientate themselves with the circuit direction and other traffic. As specific joining and circuit procedures exist for some aerodromes, pilots should refer to the UK AIP to establish the procedure to be followed.
- 4.184 Unattended aerodrome reports are made at the discretion of the pilot. However, to ensure the traffic awareness of other pilots is correctly maintained, if a pilot elects to make reports, all those reports not listed as 'optional' should be included. Optional calls may be included if additional traffic information is likely to assist traffic organisation or to enhance safety.
- 4.185 Monitoring of unattended aerodrome reports is not a substitute for visual observation and pilots must maintain traffic awareness and lookout even when making such calls, as not all aircraft may be monitoring radio broadcasts.
- 4.186 Transmission of unattended aerodrome reports does not confer any right-of-way.
- 4.187 Pilots shall comply at all times with the Rules of the Air Regulations, in particular the rules for avoiding aerial collisions.

Additional Procedures for the Use of SAFETYCOM

- 4.188 SAFETYCOM is not an Air Traffic Service, and no aeronautical ground station is associated with SAFETYCOM.
- 4.189 SAFETYCOM is a single common frequency, and pilots should be aware of the possibility of congestion and breakthrough. It is particularly important when using SAFETYCOM that RTF transmissions identify the aerodrome name (suffixed 'traffic') in order to indicate the relevance of the report to other aircraft. Transmissions must be correct and concise.
- 4.190 SAFETYCOM transmissions shall only be made when aircraft are not more than 2000 ft above aerodrome level, or not more than 1000 ft above promulgated circuit height (if applicable) and within 10 NM of the aerodrome of intended landing.
- 4.191 Where an aerodrome lies within controlled airspace, pilots are to call the appropriate ATSU and ensure that they obtain clearance to enter the airspace.

Unattended Aerodrome Phraseology Examples

- 4.192 Taxiing Phraseology Example.



Borton Traffic, G-ABCD, taxiing for Runway 09, Borton

This transmission is optional and may be advisable at airfields where the view from an aircraft either in the air or on the ground may be restricted

- 4.193 Departure Phraseology Example.



Borton Traffic, G-ABCD, lining up for departure Runway 09, Borton

- 4.194 Joining the Circuit Phraseology Examples.



Borton Traffic, G-ABCD, 10 miles southwest joining overhead, Borton



Borton Traffic, G-ABCD, overhead, joining for Runway 09, Borton (if determined)

This transmission is optional and may be advisable depending on other traffic in the vicinity



Borton Traffic, G-ABCD, Dead
side descending Runway 09,
Borton

*This transmission is optional and
may be advisable depending on
other traffic in the vicinity*

4.195 Reporting in the Circuit Phraseology Examples.



Borton Traffic, G-ABCD, (right-
hand if applicable) downwind
Runway 09 (Intentions if
applicable), Borton



Borton Traffic, G-ABCD, base
leg Runway 09, Borton

*This transmission is optional and
may be advisable depending on
other traffic in the vicinity*



Borton Traffic, G-ABCD, final
Runway 09, Borton

Aerodrome Information

Meteorological Conditions

4.196 Meteorological information in the form of reports, forecasts or warnings is made available to pilots using the aeronautical mobile service either by broadcast (e.g. VOLMET) or by means of specific transmissions from ground personnel to pilots. Standard meteorological abbreviations and terms should be used, and the information should be transmitted slowly and enunciated clearly in order that the recipient may record such data as is necessary.



G-CD, 0950 weather surface
wind 360 degrees 5 knots
visibility 30 km. Nil weather, 2
oktas 2500 feet, temperature
plus 10, dew point plus 3,
QNH 1010



QNH 1010, G-CD

NOTE: Cloud may also be reported as follows:

‘Scattered at five hundred feet, scattered cumulonimbus at one thousand feet, broken at two thousand five hundred feet.’

In the above example ‘scattered’ equates to 3 or 4 Oktas and ‘broken’ equates to 5–7 Oktas.

Full details of meteorological information are contained in UK AIP GEN section [3.5](#) and [CAP 746](#). Information on military aerodromes and weather information is in Chapter 10.

Voice Weather Broadcast (VOLMET) UK

- 4.197 Meteorological aerodrome reports for certain aerodromes are broadcast on specified frequencies. The callsign of the VOLMET, frequency, operating hours, aerodromes contained within the group, and contents are published in the UK AIP.
- 4.198 The content of a VOLMET broadcast is as follows:
1. aerodrome identification (e.g. Stourton);
 2. surface wind;
 3. visibility (Note 1);
 4. RVR (if applicable) (Note 1);
 5. weather;
 6. cloud (Note 1);
 7. temperature;
 8. dewpoint;
 9. QNH;
 10. trend (if applicable).

NOTES:

1. Non-essential words such as 'surface wind', 'visibility' etc. are not spoken.
2. All broadcasts are in English.

Runway Visual Range (RVR)/Visibility

- 4.199 When transmitting the runway visual range, the abbreviation RVR will be used without using the phonetic word for each letter, e.g. RVR runway 27, 800 metres. The runway designator may be omitted if there is no possibility of confusion.
- 4.200 Where instrumented RVR (IRVR) is not available, RVR for the purposes of Category 1 and non-precision instrument approach operations may be assessed by human observer and transmitted by the controller to the pilot.



BIGJET 347, RVR 400 metres

- 4.201 If the assessed value is more than the maximum reportable value, controllers are to advise the pilot.



BIGJET 347, RVR is greater than 1200 metres

- 4.202 If no lights are visible controllers are to state “RVR less than (number) metres, inserting the value corresponding to one light.



BIGJET 347, RVR less than 60 metres

- 4.203 Occasionally pilots of aircraft may report, or observations from the control tower may indicate, that the visibility conditions on the runway are significantly different to those being reported. Under no circumstances is a controller to pass a pilot information which suggests that the visibility is better than the RVR reported. However, when a pilot’s report or an observation from the tower indicates a worse condition on the runway this information is to be passed to the pilot with subsequent RVR reports for as long as the condition is considered to exist.



BIGJET 347, RVR 400 metres.
Thicker patches reported further along the runway by the pilot of a landing aircraft



BIGJET 347, RVR 400 metres,
thicker patches observed further along the runway from the control tower

- 4.204 Where RVR is not available the pilot is to be advised.



BIGJET 347, RVR runway 27 not available



BIGJET 347, RVR runway 27 not reported

- 4.205 Where instrumented runway visual range (IRVR) observations are available, more than one reading may be transmitted.



BIGJET 347, RVR runway
27, 650 600 600 metres



BIGJET 347



BIGJET 347, RVR runway
27, touchdown not available,
mid-point 650, stop end 550
metres



BIGJET 347

Runway Surface Conditions

4.206 When the presence of water or water-based contaminants is brought to the attention of an ATS unit, the information will be passed to aircraft based on the following five elements:

1. Runway Condition Report (RCR);
2. Runway Condition Assessment Matrix (RCAM);
3. Runway Condition Code (RWYCC);
4. Runway Surface Conditions (Reporting term); and
5. Runway Surface Condition Descriptors.

Note: GRF is applicable to paved runways alone. For surface condition reporting of grass runways, see paragraph 4.210 below.

4.207 The presence or otherwise of surface contaminants on each third of a runway surface, together with any other related information, is to be reported on the ATIS. If ATIS is not available or significant changes occur, this information must be reported on the RTF to aircraft concerned in plain language either:

1. individually, or;
2. via the use of an all-stations broadcast, obtaining acknowledgement from each of the aircraft concerned.

4.208 It is important to consider the sequence in which the information should be transmitted, using the following reporting terms (see Table 5), runway surface condition descriptors (see Table 6), other related information (see Table 7) and runway condition codes (see Table 8):

Table 5

Reporting Term	Runway Surface Conditions
DRY	<u>The runway surface is considered dry if it is free of visible moisture and not contaminated within the area intended to be used</u>
WET	<u>The runway surface is covered by any visible dampness or water up to and including 3 mm depth within the intended area of use.</u> Note: <u>If the surface shows a change of colour due to moisture, the runway will be reported as wet</u>
<u>SLIPPERY WET</u>	<u>A wet runway where the surface friction characteristics of a significant portion of the runway have been determined to be degraded</u>
<u>CONTAMINATED</u>	<u>A runway is contaminated when a significant portion of the runway surface area (whether in isolated areas or not) within the length and width being used is covered by one or more of the substances listed in the runway surface condition descriptors. The term 'CONTAMINATED' is not to be used in RTF phraseology, the runway surface condition descriptors in Table 6 are to be used</u>

Table 6

<u>Runway Surface Condition Descriptor</u>	
<u>COMPACTED SNOW</u>	<u>Snow that has been compacted into a solid mass such that aircraft tyres, at operational pressure and loadings, will run on the surface without significant further compaction or rutting of the surface</u>
<u>DRY SNOW</u>	<u>Snow from which a snowball cannot readily be made</u>
<u>FROST</u>	<u>Frost consists of ice crystals formed from airborne moisture on a surface whose temperature is below freezing. Frost differs from ice in that the frost crystals grow independently and therefore have a more granular texture</u> Note 1: <u>Below freezing refers to air temperature equal to or less than the freezing point of water (0°C).</u> Note 2: <u>Under certain conditions frost can cause the surface to become very slippery and it is then reported appropriately as reduced braking action</u>
<u>ICE</u>	<u>Water that has frozen or compacted snow that has transitioned into ice, in cold and dry conditions</u>
<u>SLUSH</u>	<u>Snow that is so water-saturated that water will drain from it when a handful is picked up or will splatter if stepped on forcefully</u>

<u>STANDING WATER</u>	<u>Water of depth greater than 3 mm</u>
<u>WET ICE</u>	<u>Ice with water on top of it or ice that is melting</u> Note 1: <u>Freezing precipitation can lead to runway conditions associated with wet ice from an aircraft performance point of view. Wet ice can cause the surface to become very slippery. It is then reported appropriately as reduced braking action in line with procedures in the CAP 168 / PANS-Aerodromes (ICAO Doc 9981)</u>
<u>WET SNOW</u>	<u>Snow that contains enough water content to be able to make a well-compacted, solid snowball, but water will not be squeezed out</u>

Notes:

1. In providing information on runway surface conditions, many of the terms described in Table 6 may be used in combination as follows: DRY SNOW ON TOP OF COMPACTED SNOW, DRY SNOW ON TOP OF ICE, WATER ON TOP OF COMPACTED SNOW, WET SNOW ON TOP OF COMPACTED SNOW and WET SNOW ON TOP OF ICE.
2. Descriptions of surface contamination will include, where applicable, the depth of deposit.

Table 7

<u>Other related information</u>
<u>For example, provide details of any:</u> <ul style="list-style-type: none"> • <u>runway de-icing activity that has taken place, such as chemical treatment or sanding;</u> • <u>provide details of any snowbanks on the runway giving the distance left/right from the runway centreline;</u> • <u>frozen ruts and ridges</u>

Table 8

<u>Runway Condition Assessment Matrix (RCAM)</u>			
<u>Assessment criteria</u>		<u>Downgrade assessment criteria</u>	
<u>Runway Condition code</u>	<u>Runway surface description</u>	<u>Aircraft deceleration or direction control observation</u>	<u>Pilot report of runway braking action</u>
<u>6</u>	<ul style="list-style-type: none"> <u>DRY</u> 	<u>---</u>	<u>---</u>
<u>5</u>	<ul style="list-style-type: none"> <u>FROST</u> <u>WET</u> (The runway surface is covered by any visible dampness or water up to and including 3 mm depth) <p><u>Up to and including 3 mm depth:</u></p> <ul style="list-style-type: none"> <u>SLUSH</u> <u>DRY SNOW</u> <u>WET SNOW</u> 	Braking deceleration is normal for the wheel braking effort applied and direction control is normal	<u>GOOD</u>
<u>4</u>	<p><u>-15°C and colder outside air temperature:</u></p> <ul style="list-style-type: none"> <u>COMPACTED SNOW</u> 	Braking deceleration OR Directional control is between Good and Medium	<u>GOOD to MEDIUM</u>
<u>3</u>	<ul style="list-style-type: none"> <u>WET</u> ("slippery wet" runway) <u>DRY SNOW or WET SNOW</u> (any depth) ON TOP OF COMPACTED SNOW <p><u>More than 3 mm depth:</u></p> <ul style="list-style-type: none"> <u>DRY SNOW</u> <u>WET SNOW</u> <p><u>Warmer than -15°C outside air temperature:</u></p> <ul style="list-style-type: none"> <u>COMPACTED SNOW</u> 	Braking deceleration is noticeably reduced for the wheel braking effort applied OR Directional control is noticeably reduced	<u>MEDIUM</u>
<u>2</u>	<p><u>More than 3 mm depth of water or slush:</u></p> <ul style="list-style-type: none"> <u>STANDING WATER</u> <u>SLUSH</u> 	Braking deceleration OR Directional control is between Medium and Poor	<u>MEDIUM to POOR</u>

<u>Runway Condition Assessment Matrix (RCAM)</u>			
<u>Assessment criteria</u>		<u>Downgrade assessment criteria</u>	
<u>Runway Condition code</u>	<u>Runway surface description</u>	<u>Aircraft deceleration or direction control observation</u>	<u>Pilot report of runway braking action</u>
1	<ul style="list-style-type: none"> <u>ICE</u> 	<u>Braking deceleration is significantly reduced for the wheel braking effort applied</u> OR <u>Directional control is significantly reduced</u>	<u>POOR</u>
0	<ul style="list-style-type: none"> <u>WET ICE</u> <u>WATER ON TOP OF COMPACTED SNOW</u> <u>DRY SNOW or WET SNOW ON TOP OF ICE</u> 	<u>Braking deceleration is minimal to non-existent for the wheel braking effort applied</u> OR <u>Directional control is uncertain</u>	<u>LESS THAN POOR</u>

NOTES:

- Descriptions of surface contamination will include, where applicable, the depth of deposit.
 - Runway surface temperature should preferably be used where available.
 - The aerodrome operator may assign a higher RWYCC (but not greater than RWYCC 3) for each third of the runway, provided the specific procedure is followed.
- 4.209 Reports of the runway condition, to be used on ATIS or RTF for each third shall be given in the direction of take-off or landing.



BIGJET 347, Runway 34 surface condition [CODE] 6, 5, 2. Dry; wet; standing water, depth 6 millimetres

A broadcast on change of conditions (ATIS or plain language transmission) would be transmitted as:



All stations Walden Tower issued at (date and time UTC). Runway 34 surface condition [CODE] 6, 5, 5. Dry; wet; wet

A more complex report may include the type of contamination, its depth and/or other essential information such as Work in Progress (WIP).



BIGJET 347, Runway 34 surface condition [CODE] 6, 5, 2. Dry; wet snow patches, depth 20 millimetres; standing water, depth 5 millimetres. Caution construction work taxiway alpha

Grass Runways

- 4.210 In reporting the surface condition of a grass runway, the report relates to the whole of the surface, and not to individual thirds. When the grass runway's surface condition is assessed as being WET or CONTAMINATED, then its condition, together with any other related information, is to be reported as detailed in paragraph 4.192, using the descriptions contained in Tables 5, 6 and 7 above. A RWYCC is not to be passed.



G-CD Runway 34 surface is covered with wet snow on top of compacted snow

Automatic Terminal Information Service (ATIS) UK

- 4.211 To alleviate RTF loading at some busy airports, Automatic Terminal Information Service (ATIS) messages are broadcast to pass routine arrival/departure information on a discrete RTF frequency or on an appropriate VOR. Pilots inbound to these airports are normally required, on first contact with the aerodrome ATSU, to acknowledge receipt of current information by quoting the code letter of the broadcast. Pilots of outbound aircraft are not normally required to acknowledge receipt of departure ATIS except when requested on the actual ATIS broadcast.
- 4.212 Aerodromes possessing ATIS, the hours of ATIS operation and the frequency employed are published in the UK AIP.
- 4.213 ATIS broadcasts will include all or part of the elements of the information shown in CAP 670, Appendix A to COM05: ICAO Annex 11 ATIS message elements.
- 4.214 Example of ATIS broadcast: 'Stourton Approach Information Alpha. 0850 hours weather. Runway 28. 240 degrees 12 kt. 10 km. Intermittent slight rain. Scattered at 1000 ft, overcast at 1800 ft. Temperature +12. Dew point +7.

QNH 1011. Acknowledge receipt of information Alpha on first contact with Stourton.'

NOTES:

1. A Trend may be included in an ATIS broadcast.
 2. Rapidly changing meteorological situations sometimes make it impractical to include weather reports in the broadcast. In these circumstances, ATIS messages will indicate that weather information will be passed on RTF.
 3. Any significant change to the content of a current ATIS message will be passed to pilots by RTF until such time as a new message is broadcast.
- 4.215 Military Weather and Aerodrome Information appear in Chapter 10.

Chapter 5: Phraseology associated with the use of ATS Surveillance Systems

General

Introduction

- 5.1 This Chapter contains general phraseology associated with the use of ATS surveillance systems which is commonly used in communications between aircraft and all types of units using ATS surveillance systems. Phraseology which is more applicable to approach control or area control is to be found in Chapters 6 and 7 as appropriate.
- 5.2 The phrase 'radar control' shall only be used when a radar control service is being provided. Normally however, the callsign suffix used by the unit providing the ATS surveillance service is sufficient to indicate its function.
- 5.3 In a surveillance system environment heading information given by the pilot and heading instructions given by controllers are normally in degrees magnetic.

Identification of Aircraft using ATS Surveillance Systems

- 5.4 An aircraft must be identified before it can be provided with an ATS surveillance service. However, the act of identifying aircraft is not a service in itself and pilots should **not** assume that they are receiving an ATS surveillance service, particularly when they are flying outside controlled airspace.



G-CD, report heading



G-CD, heading 350



G-CD, for identification
turn left heading 320
degrees



Left heading 320 degrees,
G-CD



G-CD, identified 18 miles
north-west of Borton,
Deconfliction Service

or,



Deconfliction Service, G-CD



G-CD, not identified.
Resume own navigation



Wilco, G-CD

5.5 The instruction to report heading may be expanded to “report heading and level”.



G-CD, report heading and level



G-CD, heading 350
altitude 2400 feet

5.6 When a controller has identified an aircraft they will inform the pilot, according to the circumstances, of the following:

1. that the aircraft is identified, and;
2. the position of the aircraft.

The occasions when the above information will be passed are summarised in Table 1 below. Additionally, controllers may pass position information to aircraft whenever they consider it necessary.




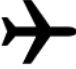

Table 1

Method of Identification	Aircraft flying inside controlled airspace		Aircraft flying outside controlled airspace*	
	Inform Identified	Pass Position	Inform Identified	Pass Position
SSR	No	No	Yes	No
Turn	Yes	Yes	Yes	Yes
Departing aircraft	No	No	Yes	No
Position Report	No	No	Yes	No

*When providing a Basic Service, a controller may identify an aircraft to facilitate coordination or to assist in the provision of generic navigational assistance but is not required to inform the pilot that identification has taken place or to pass a position report.

Loss of Identification of Aircraft using ATS Surveillance Systems

- 5.7 The pilot will be warned if identification is lost, or about to be lost, and appropriate instructions given. This may occur either due to limitations of radar cover or failure of the radar being used.

	G-CD, radar service terminated due radar failure. Resume own navigation. Basic service available from Wrayton Information on 125.750		Changing to Wrayton Information 125.750, G-CD
	G-CD, will shortly be leaving radar cover, radar service terminated. Basic service available from Wrayton Information on 125.750		G-CD, changing to Wrayton Information 125.750
			G-CD, Roger

Secondary Surveillance Systems Phraseology

- 5.8 The following phrases are instructions which may be given by controllers to pilots regarding the operation of SSR transponders. The phrases used by controllers are given together with their meanings; assignment of a code **does not** constitute the provision of ATS surveillance service.

Table 2

Phrase	Meaning
Squawk (code)	Set the code as instructed. Unless instructed otherwise, pilots should always also select 'Altitude' on, even if only provided with a code instruction from ATC
Squawk (code) with Altitude	Set the code as instructed and select 'Altitude' on
Confirm Squawk	Confirm the code set on the transponder
Squawk conspicuity	With regards to flight rules, pilot to select conspicuity code appropriate to VFR or IFR
Reset squawk (code)	Reselect assigned code
Squawk Ident	Operate the special position identification feature
Squawk Mayday	Select Emergency
Squawk Standby	Select the standby feature
Squawk Altitude	Select altitude reporting feature

Phrase	Meaning
Check altimeter setting and confirm (level)	Check pressure setting and confirm your level
Stop squawk Altitude	Deselect altitude reporting
Stop squawk Altitude, wrong indication	Stop altitude report, incorrect level readout
* Confirm (level)	Check and confirm your level
** Check selected level. Cleared level is (correct cleared level)	Check and confirm your cleared level
Confirm you are squawking assigned code (code assigned to the aircraft by ATC)	To verify that 7500 has been set intentionally
*** Check altimeter setting (correct altimeter setting)	Check and confirm your altimeter setting
**** Re-enter Mode S Aircraft Identification	Check and re-enter the Aircraft Identification Feature

* Used to verify the accuracy of the Mode C derived level information displayed to the controller.

** Where selected flight level is seen to be at variance with an ATC clearance, controllers shall not state on the frequency the incorrect SFL as observed on the situation display. However, controllers may query the discrepancy using this phraseology. For ATC purposes, the generic phrase 'selected level' is used to encompass both altitude and flight level.

*** Downlinked Mode S Barometric Pressure Setting data has the potential to assist in the prevention of level busts. Where such information is available to a controller and a discrepancy is observed between the QNH passed and that selected, a controller should query the discrepancy.

**** Where the down-linked Mode S Aircraft Identification Feature is different from that expected from the aircraft.

5.9 The pilot must respond to SSR instructions, reading back specific settings.



BIGJET 347, squawk 6411



6411, BIGJET 347



BIGJET 347, squawk ident



Squawk ident, BIGJET 347



BIGJET 347, squawk 6411 and ident











6411 and ident, BIGJET 347



BIGJET 347, confirm squawk



6411, BIGJET 347



	BIGJET 347, reset squawk 6411		Resetting 6411, BIGJET 347
	BIGJET 347, check altimeter setting		1013 set, BIGJET 347
	BIGJET 347, confirm transponder operating		BIGJET 347, negative, transponder unserviceable
	BIGJET 347, squawk conspicuity		Squawk conspicuity, BIGJET 347

Note: Conspicuity codes are listed in the UK AIP ENR 1.6 paragraph 2.2.2.1.3.



Minimum Safe Altitude Warning (MSAW) Phraseology

5.10 On receipt of a valid minimum safe altitude warning (MSAW), the air traffic controller will inform the aircraft and issue appropriate instructions as follows:

1. To aircraft operating IFR inside controlled airspace and aircraft in receipt of an ATS outside controlled air space and known to be operating in accordance with the IFR.

	BIGJET 347, Terrain Alert, climb to altitude 2000 feet QNH 1006.		Climb to altitude 2 000 feet QNH 1006, BIGJET 347.
---	--	---	--

2. All other circumstances.

	G-CD terrain alert, check your altitude, minimum safe altitude 2000 feet, QNH 1006.		G-CD, Roger
---	---	---	-------------

NOTE: Due to system limitations, not all MSAW alerts may be genuine, and the controller shall assess each alert to determine its validity, prior to issuing an appropriate warning.

ATS Surveillance Service

5.11 Where it is not self-evident the controller will normally advise the pilot of the service being provided.



BIGJET 347, Radar Control



Radar Control, BIGJET 347



G-CD, Deconfliction Service



Deconfliction Service, G-CD



G-CD, Traffic Service



Traffic Service, G-CD



BIGJET 347, radar service terminated



BIGJET 347, Roger

5.12 Pilots must be advised if a service commences, terminates or changes when:

1. outside controlled airspace.
2. entering controlled airspace.
3. leaving controlled airspace, unless pilots are provided with advance notice in accordance with the paragraph below.

For flights leaving controlled airspace controllers should provide pilots with advance notice of:

1. The lateral or vertical point at which the aircraft will leave controlled airspace. Such notice should be provided between 5-10 NM or 3,000-6,000 ft prior to the boundary of controlled airspace.
2. The type of ATS that will subsequently be provided, unless the aircraft is coordinated and transferred to another ATS unit before crossing the boundary of controlled airspace.



BIGJET 347, on passing (geographical position/ level) you will leave controlled airspace what service do you require?



BIGJET 347, on passing (geographical position/ level) you will leave controlled airspace (type of service)



BIGJET 347, in (number) miles, you will leave controlled airspace what service do you require



BIGJET 347, in (number) miles, you will leave controlled airspace (type of service)



BIGJET 347, leaving controlled airspace what service do you require



BIGJET 347, leaving controlled airspace (type of service)

Additionally, pilots of IFR flights will be advised when they enter or leave Class E airspace in the following circumstances:

1. When the flight is an unplanned diversion.
2. When no flight plan has been filed at the time a clearance to enter controlled airspace is requested.



BIGJET 347, (Entering / leaving) Class Echo airspace



(Entering / leaving) Class Echo airspace BIGJET 347

Vectoring using an ATS Surveillance System

- 5.13 Aircraft may be given specific vectors to fly in order to establish separation. Pilots may be informed of the reasons for vectoring.



BIGJET 347, for spacing turn left heading 050 degrees



Left heading 050 degrees, BIGJET 347

- 5.14 It may be necessary for a controller to know the heading of an aircraft as separation can often be established by instructing an aircraft to continue on its existing heading.



BIGJET 347, continue present heading



Continue heading, BIGJET 347



BIGJET 347, report heading





BIGJET 347, heading 050 degrees


	BIGJET 347, continue present heading and report that heading		Continue heading 050 degrees, BIGJET 347
---	--	---	--

	BIGJET 347, continue heading 050 degrees		Continue heading 050 degrees, BIGJET 347
---	--	---	--

5.15 Heading instructions may also be combined with a turn instruction.

	BIGJET 347, turn left 30 degrees and report heading		Turning left 30 degrees, wilco, BIGJET 347
---	---	---	--


	BIGJET 347, stop turn heading 240 degrees		Stop turn heading 240 degrees, BIGJET 347
---	---	---	---

	BIGJET 347, continue turn heading 240 degrees		Continue turn heading 240 degrees, BIGJET 347
--	---	--	---



5.16 A controller may not know the aircraft's heading but does require the aircraft to fly a particular heading.

	G-CD, fly heading 275		Turning left heading 275, G-CD
---	-----------------------	---	--------------------------------

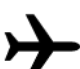or,

	Turning right 20 degrees heading 275, G-CD
---	--

5.17 The controller may instruct the aircraft to fly a particular heading after passing a specific point.

	BIGJET 347, leave Wicken heading 245		Leave Wicken heading 245, BIGJET 347
---	--------------------------------------	---	--------------------------------------

5.18 When vectoring is complete, pilots will be instructed to resume their own navigation, given position information if considered necessary by the controller and appropriate instructions, including direction of turn, as necessary. Where a direct route is required, the controller shall specify this in the instructions.



BIGJET 347, turn left resume own navigation direct Wicken



Wilco, turn left direct Wicken BIGJET 347



G-CD, resume own navigation Walden, position is 15 miles southeast of Westbury



Wilco, G-CD

NOTE: 'Own navigation' is an instruction to manoeuvre in only the lateral plane and does not imply a permission to climb or descend.

- 5.19 Occasionally an aircraft may be instructed to make a complete turn (known as an orbit or a 360-degree turn), for delaying purposes or to achieve a required spacing behind preceding traffic.



G-CD, for spacing orbit left



Orbit left, G-CD



BIGJET 347, for spacing make a 360 turn left



360 turn left, BIGJET 347

NOTE: 360 turn spoken as "TREE SIXTY TURN".

Essential Traffic Information

- 5.20 Essential traffic is traffic which is separated for any period by less than the specified standard separation. Essential traffic information passed to an aircraft shall include:

1. direction of flight of conflicting aircraft;
2. type of conflicting aircraft;
3. cruising level of conflicting aircraft and ETA for the named reporting point, or for aircraft passing through the level of another with less than the normal separation; the ETA for the reporting point nearest to where the aircraft will cross levels; **and**
4. any alternative clearance.



BIGJET 347, essential traffic information, a westbound B737 maintaining FL80 estimating KTN at time 50, descend FL90

- 5.21 The controller will also advise the pilot when there is no reported traffic and may provide a time check as required.



BIGJET 347, no reported traffic



BIGJET 347, time check 45


Traffic Information and Avoiding Action Phraseology

5.22 Whenever practicable, traffic information should be given in the following form:


1. relative bearing of the conflicting traffic in terms of the 12 hour clock (SERA 14035 (a) (4) - the information shall be given pronouncing the digits together such as 'TEN O'CLOCK' or 'ELEVEN O'CLOCK') with the optional prefix 'left or right' as appropriate; or, if the aircraft under service is established in a turn, the relative position of the conflicting traffic in relation to cardinal points i.e. northwest, south etc.;
2. distance from the conflicting traffic;
3. relative movement of the conflicting traffic; or, if the aircraft under service is established in a turn, the direction of flight of the conflicting traffic in relation to cardinal points;
4. level of aircraft, if known;
5. speed of the conflicting traffic, if considered relevant; **and**
6. type of aircraft, if considered relevant.

5.23 Relative movement should be described by using one of the following terms as applicable:

1. 'Crossing', including the relative direction of movement either 'left to right' or 'right to left', where there is relative movement, i.e. a change in the relative bearing between the conflicting traffic's flight path and that of the aircraft under service. Controllers should include the words 'ahead' or 'behind' where appropriate to assist the pilot in assessing the conflicting traffic's flight path.

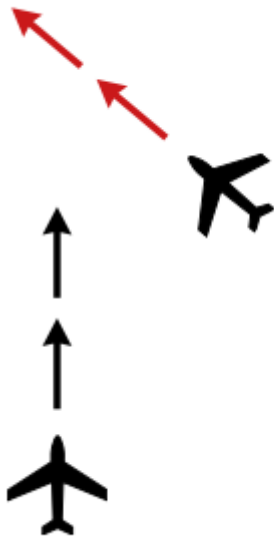
Traffic Crossing ahead

G-CD traffic one o'clock, 4 miles, crossing right-left ahead, indicating 3000 feet fast moving

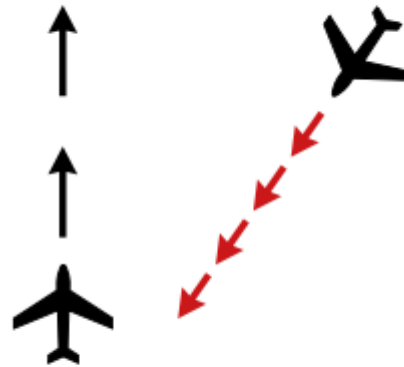Traffic Crossing behind

G-CD traffic two o'clock, 4 miles, crossing right-left behind, at 2500 feet slow moving


2. 'Converging', where there appears to be no change in relative bearing between the conflicting traffic's flight path and that of the aircraft under service and/or the controller perceives there to be a significant risk of mid-air collision.

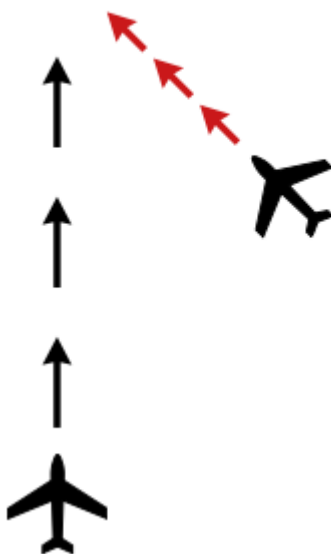Converging Traffic

G-CD avoiding action, turn left immediately heading 270 degrees traffic was right 2 o'clock 4 miles converging, indicating 100 feet below slow moving

3. 'Similar direction' where the conflicting traffic's flight path is the same as that of the aircraft under service.


Similar Direction Traffic

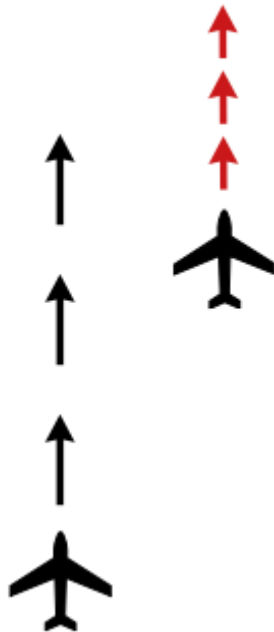

G-CD, traffic 1 o'clock 6 miles similar heading 2000 feet below slow-moving climbing

4. 'Opposite direction' where the conflicting traffic's flight path is approximately 180° opposed to that of the aircraft under service but the flight paths are not converging.

Opposite Direction Traffic

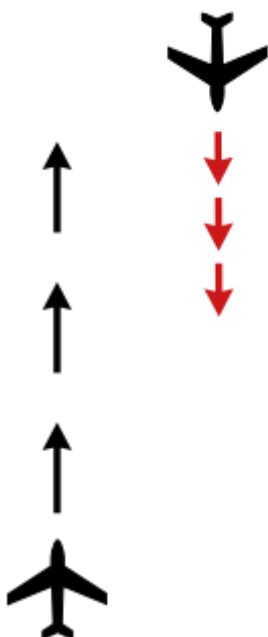

G-CD, traffic 1 o'clock 6 miles opposite direction indicating 2000 feet below cleared level slow moving climbing

5. 'Manoeuvring' where the conflicting traffic's flight path and/or level information is unpredictable and/or showing significant variation.

5.24 The level of the conflicting traffic, if known, should be described by using one of the following terms as applicable and most appropriate for the particular circumstances (the terms 'climbing' or 'descending' may be added as required).

Phraseology	Circumstances
a. '(number) feet above/below'	The aircraft receiving the traffic information is in level flight; and the intentions of the conflicting aircraft are known; and is used where the risk of inadvertent level bust as a result of stating the level of the conflicting traffic outweighs the benefits of providing specific level information
b. 'same level'	The aircraft receiving the traffic information is in level flight; and the conflicting aircraft is at the same level, and its intentions are known; and is used where the risk of inadvertent level bust as a result of stating the level of the conflicting traffic outweighs the benefits of providing specific level information
c. '(number) feet above/below cleared level'	The aircraft receiving the traffic information is climbing or descending; And the intentions of the conflicting aircraft are known; and is used where the risk of inadvertent level bust as a result of stating the level of the conflicting traffic outweighs the benefits of specific level information
d. 'indicating (number) feet above/below'	The aircraft receiving the traffic information is in level flight; and the intentions of the conflicting aircraft are unknown; and is used where the risk of inadvertent level bust as a result of stating the level of the conflicting traffic outweighs the benefits of providing specific level information

Phraseology	Circumstances
e. 'indicating same level'	The aircraft receiving the traffic information is in level flight; and the conflicting aircraft is indicating at the same level and its intentions are unknown; and is used where the risk of inadvertent level bust as a result of stating the level of the conflicting traffic outweighs the benefits of providing specific level information
f. 'indicating (number) feet above/below cleared level'	The aircraft receiving the traffic information is climbing or descending; and the intentions of the conflicting aircraft are unknown; and is used where the risk of inadvertent level bust as a result of stating the level of the conflicting traffic outweighs the benefits of providing specific level information
g. 'at (level)'	The intentions of the conflicting aircraft are known; and specific level information is considered to be necessary
h. 'indicating (level)'	The intentions of the conflicting aircraft are unknown; and specific level information is considered to be necessary
i. 'no height information'	The conflicting aircraft displays no Mode C information; or The conflicting aircraft displays 3A 0000'



NOTES:

1. The terms 'coordinated', 'verified', and 'unverified' shall not be used in traffic information RTF phraseology.
2. The vertical intentions of aircraft outside controlled airspace are considered to be known to the controller in the following circumstances:
 - a) The controller is providing the aircraft with a Traffic Service, Deconfliction Service, or Procedural/Service.
 - b) The controller is providing the aircraft with a Basic Service, and the pilot has made an agreement to maintain a particular level or level band.
 - c) The controller is not providing the aircraft with an ATS, but it is subject to tactical coordination with another controller.



5.25 Speed should be described by using one of the following terms as applicable:



1. 'fast moving'; or
2. 'slow moving'.

5.26 Pilots that receive traffic information but do not yet have the traffic in sight should acknowledge receipt of that information.



	G-CD, traffic 11 o'clock 6 miles crossing left right ahead no height information fast moving		<u>G-CD roger</u>
---	--	---	-------------------



5.27 Pilots in receipt of traffic information should indicate when they have the traffic in sight.

	G-CD, traffic 11 o'clock 6 miles crossing left right ahead no height information fast moving		G-CD, traffic in sight
---	--	---	------------------------



	G-CD, traffic 10 o'clock 6 miles crossing left right behind no height information fast moving		G-CD, traffic not sighted
---	---	---	---------------------------

5.28 In order to assist the pilot in assimilating traffic information, controllers may use the following phraseology to highlight whether they are updating traffic information that was previously provided or providing traffic information on additional conflicting traffic.



	G-CD, previously reported traffic now left nine o'clock, 3 miles, crossing left right behind, no height information		Roger, G-CD
---	--	---	-------------

	G-CD, further traffic right one o'clock 5 miles, converging, indicating 300 feet below, slow moving		Roger, G-CD
---	--	---	-------------



5.29 Avoiding action is given as follows:



	G-CD, avoiding action, turn left immediately heading 270 degrees traffic was left 10 o'clock 5 miles converging indicating 3000 feet fast moving		Left heading 270 degrees, G-CD
---	--	---	--------------------------------

or,



	G-CD, avoiding action descend immediately FL280. Traffic 12 o'clock, 5 miles converging opposite direction, same level		Descend immediately FL280, G-CD
---	--	---	---------------------------------

or in Class E airspace when traffic avoidance advice is requested by a pilot following receipt of traffic information.

	BIGJET 345, VFR traffic right 2 o'clock, 6 miles right left no height information slow moving		Request vectors, BIGJET 345
---	---	---	-----------------------------

	BIGJET 345, avoiding action, turn left immediately heading 270 degrees		Left heading 270 degrees, BIGJET 345
---	--	---	--------------------------------------

5.30 The controller will inform the pilot when the conflict no longer exists.

	G-CD, clear of traffic turn left resume own navigation direct Walden magnetic track 350 distance 13 miles		Wilco, G-CD
---	---	---	-------------

ACAS/TCAS Phraseology

5.31 ACAS/TCAS equipment reacts to transponders of other aircraft in the vicinity to determine whether or not there is a potential confliction. The warning (Traffic Advisory), based on the time to an assumed collision enables the pilot to identify the conflicting traffic, and if necessary, take avoiding action (Resolution Advisory). In the UK, this equipment is mainly referred to as 'TCAS'; however, the use of 'ACAS' is an acceptable alternative in phraseology terms.

5.32 Pilots should report TCAS manoeuvres.



BIGJET 347, TCAS RA



BIGJET 347, Roger

5.33 The pilot should report when returning to the assigned clearance or when the assigned clearance has been resumed.



BIGJET 347, clear of
conflict, returning to
(assigned clearance)



BIGJET 347, Roger



BIGJET 347, clear of
conflict, (assigned
clearance) resumed



BIGJET 347, Roger

(Controllers may issue a revised clearance at this point.)

5.34 Pilots should report that they are unable to comply with a clearance as a result of a TCAS alert.



BIGJET 347, unable TCAS
RA



BIGJET 347, Roger

In these circumstances the pilot should report when clear of the TCAS conflict.

5.35 The pilot should report a TCAS manoeuvre even if it was not possible to notify the controller that a resolution advisory had occurred.

Communication and Loss of Communication

5.36 When a controller suspects that an aircraft is able to receive but not transmit messages, the ATS surveillance system may be used to confirm that the pilot has received instructions. When further instructions are given, they should be passed slowly, clearly and be repeated.



G-CD, reply not received, if
you read Wrayton turn left
heading 040 degrees I say
again turn left heading 040
degrees



G-CD, turn observed 10 miles north of Wrayton I will continue to pass instructions

or,



BIGJET 347, reply not received, if you read Wrayton squawk ident I say again squawk ident



BIGJET 347, squawk observed 3 miles east of BTN I will continue to pass instructions

NOTES:

1. An aircraft experiencing a radio communications failure is expected to select the appropriate SSR code.
2. See also Chapter 8.

Special Use Airspace (SUA) Activity Information and Crossing Services

5.37 'Special use airspace (SUA)' is a generic term used for airspace volumes designated for specific operations, such as military training, exercises and operations. These may include, but are not limited to, restricted, danger and prohibited areas or temporary segregated areas (TSA) and temporary reserved areas (TRA).

5.38 Within the UK, information on SUA activity or approval to cross an SUA are available in-flight, for certain types of SUA, from the nominated ATS units:

1. listed in the UK AIP;
2. detailed on the legend of the appropriate UK 1:500 000 Aeronautical Chart.

Full details of the SUA activity information service and SUA crossing service can be found in the UK AIP ENR 1.1.

5.39 SUA activity information and crossing services relate only to SUA activity and do not imply the provision of an ATS. ATS are available in accordance with the requirements detailed within SERA.6001 and, in airspace classes E and G, provided in accordance with the UK Flight Information Services (CAP 774).

SUA Activity Information

- 5.40 The nominated ATS unit will pass to the pilot, on request, an update on the known activity status of the SUA. Such an update will assist the pilot to decide whether it would be prudent, on flight safety grounds, to enter the SUA. This information does NOT constitute approval to cross SUA.
- 5.41 When used by an ATS unit, the term 'active' means that, from the latest information available to the unit, including activity times where known, the SUA is notified as active, and it is not known whether there is activity taking place. Where a crossing service is also available for the SUA, the pilot may be provided with the appropriate frequency.



Westbury Approach,
G-ABCD, request
information for Danger
Area 701A



G-ABCD, Westbury
Approach. Danger Area
701A active 1300 to
1600, crossing service
may be available from
[ATS Unit] 123.7



Danger Area 701A
active, G-ABCD

- 5.42 Alternatively the ATS unit will advise the pilot that the SUA is 'not active'. When used, the term 'not active' means that, from the latest information available to the unit, the SUA is not notified as active.



Westbury Approach, G-
ABCD, request
information for Danger
Area 701A



G-ABCD, Westbury
Approach. Danger Area
701A not active




Danger Area 701A not
active, G-ABCD


SUA Crossing


- 5.43 When SUA activity permits, the nominated ATS unit is authorised to approve an aircraft to enter or cross an active SUA. The approval is only in relation to SUA activity and does not imply the provision of an ATS. Where there is no possibility of confusion, the identification number of the SUA may be replaced by the name, e.g. 'Danger Area Loudwater'.
- 5.44 When an SUA is notified as not active or is notified as active and it has been confirmed that there is no activity taking place, the ATS unit may provide


approval for the aircraft to cross the SUA. Where possible, the pilot should provide the nominated unit with an estimated crossing time as shown in the following example.


 Westbury Approach,
G-ABCD, request
crossing of Danger
Area 701A between
1430 and 1445


When an approval to cross can be provided.

 G-ABCD Westbury
Approach, Danger Area
701A Crossing approved
between 1430 and 1445,
report vacated


 Danger Area 701A crossing
approved between 1430
and 1445. Wilco. G-ABCD

 G-ABCD, vacated Danger
Area 701A

 G-CD, Westbury
Approach roger, Basic
Service available from
Wrayton Information
125.750

 Changing to Wrayton
Information 125.750, G-CD

When an approval to cross cannot be provided.

 G-ABCD, Westbury
Approach. Danger Area
701A active remain outside



Danger Area 701A active,
remaining outside,
changing to Wrayton
Information 125.750, G-
ABCD



G-CD

Operations with a Flight Information Display (FID)

General

- 5.45 The purpose of a flight information display (FID) is to improve the situational awareness of controllers and FISOs and thus assist them in providing information that is useful for the safe and efficient conduct of flights.
- 5.46 The use of a FID does not permit the provision of an ATS surveillance service; therefore, controllers and FISOs must not use phraseology that implies the provision of such.
- 5.47 When approved by the CAA, the FID may be used to support the provision of the flight information service in performing the following functions:
1. flight path monitoring of aircraft on final approach;
 2. flight path monitoring of other aircraft in the vicinity of the aerodrome;
 3. providing navigation assistance to VFR flights; and,
 4. enhancing the provision of traffic information.

RTF phraseology for the use of the FID

- 5.48 RTF phraseology associated with the functions described in 5.47 above is as follows:

Flight path monitoring

<u>Aircraft on final approach</u>	<u>CONFIRM FINAL RUNWAY (number);</u> <u>CAUTION, CHECK LEVEL</u>
<u>Other aircraft in the vicinity of the aerodrome</u>	<u>CAUTION, TRAFFIC BELIEVED TO BE YOU</u> <u>APPROACHING THE (location) CONTROL ZONE,</u> <u>CONFIRM INTENTIONS;</u> <u>CONFIRM DOWNWIND RUNWAY (number);</u> <u>CONFIRM YOUR POSITION (and/or LEVEL or</u> <u>ROUTING);</u> <u>CONFIRM EMERGENCY</u>

Navigation assistance to VFR flights

<p><u>Providing navigation assistance to VFR flights</u></p>	<p><u>CONFIRM YOUR POSITION (and/or LEVEL or ROUTING);</u> <u>TRAFFIC BELIEVED TO BE YOU INDICATING (number) MILES NORTH (or SOUTH etc) OF (location);</u> <u>CAUTION, TRAFFIC BELIEVED TO BE YOU APPROACHING THE (location) CONTROL ZONE.</u> <u>CONFIRM INTENTIONS;</u> <u>CAUTION, TRAFFIC BELIEVED TO BE YOU APPROACHING AN AREA OF RISING TERRAIN</u></p>
---	--

Enhancing the provision of traffic information

- 5.49 Where cooperative surveillance data alone is utilised, aircraft not transmitting electronic conspicuity data will not be detected; therefore, ATS will not be able to warn pilots of their proximity.

<p><u>Enhancing the provision of traffic information</u></p>	<p><u>ALL STATIONS, (location) TOWER (or INFORMATION), TRAFFIC BELIEVED TO BE (number) MILES EAST (or SOUTH etc) OF (location) TRACKING WEST (or EAST etc);</u> <u>TRAFFIC BELIEVED TO BE OPERATING (number) MILES NORTH (or SOUTH etc) OF (location);</u> <u>MULTIPLE AIRCRAFT BELIEVED TO BE OPERATING AT (or OVER etc) (location)</u></p>
	<p><u>TRAFFIC BELIEVED TO BE YOU HAS TRAFFIC CONVERGING FROM NORTH (or SOUTH etc) INDICATING (level)*</u> <u>* Level information derived from the FID should not routinely be included in traffic information. However, when a controller or an AFISO considers that a definite risk of collision exists, where available, pilot reports or pressure-altitude-derived level information from the FID should be included</u></p>

Chapter 6: Approach Phraseology

Approach Control Service Phraseology

IFR Departures

- 6.1 At many airports both arrivals and departures are handled by a single approach control unit. At busier airports departures and arrivals may be handled separately.
- 6.2 Pilots of all aircraft flying Instrument Departures (including those outside controlled airspace) shall include the following information on initial contact with Approach Control:
1. callsign;
 2. SID or Standard Departure Route Designator (where appropriate);
 3. current or passing level; **PLUS**
 4. initial climb level (i.e. the first level at which the aircraft will level off unless otherwise cleared. For example, on a Standard Instrument Departure that involves a stepped climb profile, the initial climb level will be the first level specified in the profile).



Westbury Departure,
BIGJET 347, BIGRO 5D,
Passing Altitude 2300
feet climbing FL80



BIGJET 347, Westbury
Departure, Roger

- 6.3 On departure from a UK aerodrome at which a maximum IAS restriction has been promulgated in SIDs, the crew of an aircraft who, for configuration reasons, find it necessary to request ATC to approve an acceleration to a minimum clean speed which is higher than the restricted value, may use phraseology shown in the following examples.



Wrayton Control, BIGJET
347, request (number)
knots due configuration



BIGJET 347, (number)
knots approved


or,

BIGJET 347, no ATC
speed restriction

or,

BIGJET 347, negative,
maintain 250 knots


Speed (number) knots,
BIGJET 347 or,




No speed restriction,
BIGJET 347 or,

Maintaining 250 knots,
BIGJET 347


- 6.4 Where it is necessary to request cancellation of the departure speed restriction for overriding safety reasons other than aircraft configuration, pilots should request this in plain language according to the specific circumstances.
- 6.5 In addition to the ATC route clearance, departing IFR flights may be given additional instructions to provide separation in the immediate vicinity.




BIGJET 347, Stourton
Approach, continue heading
040 degrees until passing
FL70 then route direct
Wicken



Heading 040 degrees until
passing FL70 then direct
Wicken, BIGJET 347



BIGJET 347, report
passing FL70



BIGJET 347, passing
FL70 routeing direct
Wicken



BIGJET 347, contact
Wrayton Control 129.1



Wrayton Control 129.1,
BIGJET 347

NOTE: Cancellation of any speed control instruction does not relieve the flight crew of compliance with speed limitations associated with airspace classifications. (SERA 6001 (a); and AMC 1 6001 (a) (4); (5); (6); (7)).

VFR Departures

- 6.6 Departing VFR flights, when handled by approach control, may be passed information on relevant known traffic in order to assist the pilot in maintaining their own separation. Pilots should report leaving the area of jurisdiction of the approach control units.



G-CD, passing the zone boundary



G-CD, Basic Service available from Wrayton Information 125.750



Wrayton Information 125.750, G-CD

- 6.7 Special VFR flights will be given specific instructions in the clearance to leave the control zone.



G-ABCD, cleared to the zone boundary, route via Whiskey, Special VFR not above altitude 1500 feet



Cleared to the zone boundary, route via Whiskey, Special VFR not above altitude 1500 feet, G-ABCD



G-CD, correct

IFR Arrivals

- 6.8 Aircraft flying within controlled airspace will normally receive descent clearance to the clearance limit from the ACC prior to transfer to an approach control unit. On transfer to approach control further descent instructions may be given.



Kennington Approach, BIGJET 347, descending FL90 information Charlie



BIGJET 347, Kennington Approach, cleared direct to North Cross descend FL50



Direct to North Cross descend FL50, BIGJET 347

- 6.9 Arriving IFR flights operating outside controlled airspace are not permitted to enter controlled airspace until cleared to do so. In the examples below the initial approach fix is Kennington NDB (or VOR), identification KTN.



Kennington Approach,
BIGJET 347



BIGJET 347, Kennington
Approach, pass your
message



BIGJET 347, from
Stourton, 25 miles
southeast Kennington
IFR, FL120 estimating
zone boundary 20 KTN
24 information Charlie



BIGJET 347, cleared
from 10 miles southeast
of Kennington to KTN at
FL60. Enter controlled
airspace at FL80 or
below



Cleared from 10 miles
southeast of Kennington
to KTN at FL60. Enter
controlled airspace
southeast of Kennington
at FL80 or below,
BIGJET 347








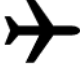







BIGJET 347, expect ILS
approach runway 28 QNH
1011



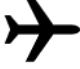

ILS runway 28 QNH
1011, Request straight in
approach, BIGJET 347



BIGJET 347, make
straight in approach
runway 28, descend to
altitude 3000 feet QNH
1011, report established
on the localiser


			Make straight in approach runway 28, descend to altitude 3000 feet QNH 1011, Wilco, BIGJET 347
			BIGJET 347, established on the localiser
			BIGJET 347, runway in sight
			BIGJET 347, number 1 contact Tower 118.7
			Number 1 Tower 118.7, BIGJET 347
	Kennington Tower, BIGJET 347		BIGJET 347, Kennington Tower, report outer marker
			Wilco BIGJET 347
	BIGJET 347, outer marker		BIGJET 347, runway 28, surface wind 280 8, cleared to land
			Runway 28 cleared to land, BIGJET 347
	Kennington Approach, G-DCAB		G-DCAB, Kennington Approach, pass your message


 G-DCAB, PA 31 inbound from Stourton IFR FL80 estimate KTN 47 information Delta


 G-AB, remain outside controlled airspace. Time is 41. Expect joining clearance at 44


NOTE: Where it is not practicable to provide an expected clearance time, e.g. where the instruction 'remain outside controlled airspace' is used by a ground station other than the controlling authority for the relevant controlled airspace, the time check and expected clearance time may be omitted.


  Remain outside controlled airspace, G-AB


 G-DCAB, cleared from 10 miles southeast of Kennington to KTN at FL80


 Cleared from 10 miles southeast of Kennington to KTN at FL80, G-DCAB


 G-AB, expect ILS approach runway 28


 G-AB


 G-AB, descend to altitude 3000 feet QNH 1011

 Descend to altitude 3000 feet QNH 1011, G-AB


 G-AB, cleared ILS approach runway 28 report KTN outbound


 Cleared ILS runway 28,
Wilco, G-AB

 G-AB, KTN outbound


 G-AB, report procedure
turn complete


 Wilco, G-AB


 G-AB, procedure turn
complete localiser
established

 G-AB, report at outer
marker


 Wilco, G-AB

 G-AB, outer marker

 G-AB, number one,
contact Tower 118.7

 Tower 118.7, G-AB

NOTE: Pilots may be requested to change to tower frequency at any point on final approach.

 G-AB, contact tower 118.7
for final approach

- 6.10 On occasions IFR aircraft do not complete the instrument approach procedure but request permission to make a visual approach.



G-AB, over KTN 3000 feet field in sight, request visual approach



G-AB, cleared visual approach runway 28



Cleared visual approach runway 28, G-AB

- 6.11 Normally a holding procedure is published. However, the pilot may require a detailed description of a specific holding procedure.



BIGJET 347, hold at North Cross FL60 expect onward clearance at time 40



Hold at North Cross FL60, request holding instructions, BIGJET 347



BIGJET 347, hold at North Cross FL60 inbound track 260 degrees turns left outbound time 1 minute

- 6.12 It should be noted that the above information is passed in the following order and is for holds **other** than VOR/DME:

1. fix;
2. level;
3. inbound track;
4. right or left turns;
5. time of leg.

- 6.13 Holding information for VOR/DME substitutes DISTANCE for TIME in 5. Above.



BIGJET 347, request holding instructions



BIGJET 347, hold on the Marlow VOR/DME at 20 DME FL100 inbound track 260 degrees turns left, limiting outbound distance 24 DME

VFR Arrivals

- 6.14 Depending on the procedures in use, the pilot of an arriving VFR flight may be required to establish contact with the approach control unit and request instructions before entering its area of jurisdiction e.g. before entering a control zone. Where there is an ATIS broadcast the pilot should acknowledge that they have received it. Where no ATIS broadcast is provided the approach controller will pass the aerodrome data.



Kennington Approach, G-DCDN, Request join



G-DCDN, Kennington Approach pass your message



G-DCDN, C172 inbound from Stourton VFR 2500 feet Wessex QNH 1011 estimating zone boundary 52 Kennington 02 information golf



G-DCDN, cleared from the zone boundary to Kennington VFR, not above 2500 feet Kennington QNH 1012. Traffic is a southbound Cherokee last reported 2000 feet VFR estimating zone boundary 53




Cleared from the zone boundary to Kennington VFR, not above 2500 feet QNH 1012, traffic in sight, G-DCDN





G-DN, report aerodrome in sight



Wilco, G-DN


 G-DN, aerodrome in sight


 G-DN, contact Tower 118.5

 Tower 118.5, G-DN


NOTE: The phraseology for joining the aerodrome traffic circuit is detailed in Chapter 4, under Aerodrome Traffic Circuit.


- 6.15 Instructions issued to VFR flights in class D airspace may comprise routeing instructions, visual holding instructions, level restrictions and information on collision hazards in order to establish a safe, orderly and expeditious flow of traffic. Where the controller requires a VFR aircraft to hold at a specific point pending further clearance, the controller will state this explicitly to the pilot. In the interests of shared understanding among pilots and controllers, the term 'clearance limit' is defined in CAP1430 but is not to be used as a phrase to delineate a restriction to a clearance.


 G-CD, hold at Easton


 Hold at Easton, G-CD

- 6.16 Where there is a need for some mutual flexibility to facilitate a flight within controlled airspace, e.g. a non-standard flight (NSF) or police flight, the controller may instruct the pilot to remain within a specified area.

 G-CD, remain east of River Trent

 Remain east of River Trent, G-CD

 G-CD, for coordination operate no further west of your current position

 No further west of current position, G-CD


Special VFR Flights

- 6.17 Special VFR clearances are only issued for flights within Control Zones and are normally at the request of the pilot. The pilot:
1. must comply with ATC instructions;
 2. is responsible for ensuring that their flight conditions enable them to remain clear of cloud, determine their flight path with reference to the surface and to keep clear of obstructions;
 3. is responsible for ensuring that they fly within the limitations of their licence;
 4. is responsible for complying with SERA 3105 Minimum heights.
NOTE: Whilst the 1000 ft rule may not apply to a pilot in receipt of a Special VFR clearance, the 'alight clear' rule always applies. The responsibility to determine whether to accept a Special VFR clearance and still comply with this rule rests with the pilot;
 5. is responsible for avoiding aerodrome traffic zones unless prior permission for penetration has been obtained from the relevant ATSU.
- 6.18 A full flight plan is not required for Special VFR flight, but the pilot must give brief details of the callsign, aircraft type and pilot's intentions, including ETA at entry point. A full flight plan is required if the pilot wishes their destination to be notified.
- 6.19 Aircraft are not normally given a specific height to fly but vertical separation from aircraft flying above can be achieved by requiring the Special VFR flight to fly not above a specified level.
- 6.20 No separation will be provided between Special VFR flights which are flying in notified areas or routes where an individual clearance is not required, or between flights using such areas or routes and other flights on Special VFR clearances. Full details of the procedures for Special VFR flights appear in the UK AIP ENR, 1.2.

Vectoring to Final Approach

- 6.21 ATS Surveillance Vectors are given to arriving flights to position them onto a pilot interpreted approach aid, or to a point from which a surveillance-assisted approach or visual approach is made.
- 6.22 Controllers shall not instruct pilots to establish on a localiser or descend on a glidepath when outside the designated operational coverage (DOC).
- 6.23 In the following example an identified aircraft inbound to Kennington is given vectors to the ILS.

Figure 1: Vectors to an ILS approach

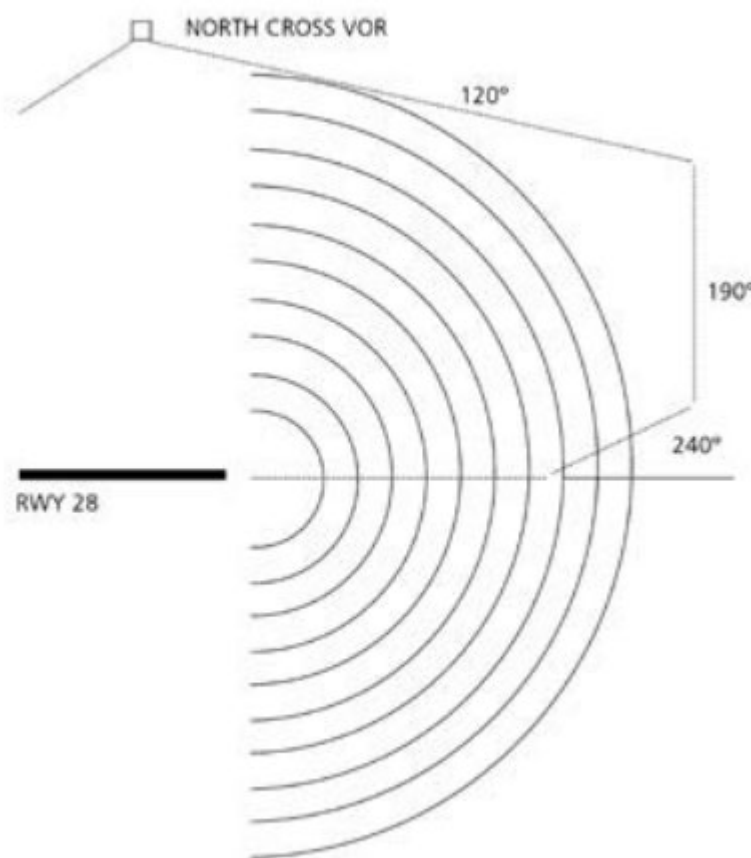

Kennington Radar, BIGJET 347, FL60 Information Golf



BIGJET 347, Kennington Radar, vectoring for an ILS approach runway 28



ILS (Microwave) runway 28, BIGJET 347



BIGJET 347, leave North Cross heading 120 degrees



Leave North Cross heading 120 degrees, BIGJET 347



BIGJET 347, leaving North Cross heading 120 degrees



BIGJET 347, Roger, number 4 in traffic, 18 miles from touchdown, descend to altitude 2500 feet QNH 1011



Descend to altitude 2500 feet QNH 1011, BIGJET 347



BIGJET 347, this is a right-hand circuit for runway 28



BIGJET 347 Roger



BIGJET 347, turn right heading 190 degrees base leg



Right heading 190 degrees, BIGJET 347

6.24 Where vectors would be insufficient to maintain separation between aircraft, it may be necessary to issue speed restrictions.





BIGJET 347, report speed





BIGJET 347 250 knots

 BIGJET 347, for spacing
reduce speed to 210 knots  210 knots, BIGJET 347

- 6.25 If it is necessary to vector an aircraft through the final approach track before subsequently joining the approach from the opposite side, the controller shall advise the pilot prior to the aircraft passing through the final approach track.



 BIGJET 347, this turn will
take you through the
localiser for spacing  BIGJET 347 Roger

or,


 BIGJET 347, taking you
through the localiser for
spacing  BIGJET 347 Roger


NOTE: The following phraseology examples may be combined and ordered by controllers as necessary to appropriately reflect operational needs and priorities.

- 6.26 Controllers will provide closing headings and will continue to give heading instructions until the aircraft is established on the localiser.

 BIGJET 347, 12 miles from
touchdown turn right heading
240 degrees closing localiser
from the right  Right heading 240
degrees, BIGJET 347

- 6.27 When it is judged that this will aid situational awareness, controllers may request aircraft to report established on the localiser. Notwithstanding its use for situational awareness, it should be used where the clearance to establish on the localiser is not implicit within the phraseology used.

 BIGJET 347, report
established on the localiser
runway 28  Wilco, runway 28,
BIGJET 347

 Localiser established
runway 28, BIGJET 347

- 6.28 When a controller has issued a descent instruction to the level that coincides with the published level that intercepts the ILS glidepath at the Final Approach Fix, or to a lower level when allocated in accordance with the

Surveillance Minimum Altitude Chart, the controller may clear the pilot for the ILS approach.



BIGJET 347, cleared ILS approach runway 28, QNH 1011



Cleared ILS approach runway 28, QNH 1011, BIGJET 347

- 6.29 When a controller wishes a pilot to descend on the ILS glidepath from a level which is above the published level that intercepts the ILS glidepath at the Final Approach Fix, the controller may use the following alternative form of phraseology.



BIGJET 347, when established on localiser runway 28, descend on the glidepath QNH 1011



When established on localiser runway 28, descend on the glidepath QNH 1011, BIGJET 347

- 6.30 Or when the aircraft is already established on the localiser.



BIGJET 347, descend on the glidepath, QNH 1011



Descend on the glidepath, QNH 1011, BIGJET 347

- 6.31 When it is necessary, e.g. for traffic separation purposes, to ensure that an aircraft joining the ILS localiser does not commence descent until specifically cleared, the controller may use the following alternative form of phraseology.



BIGJET 347, report established on localiser runway 28, maintain (level)



Wilco, runway 28, maintain (level) BIGJET 347



Localiser established, BIGJET 347

- 6.32 When the reason for restricting the level no longer exists and the aircraft is descending to or maintaining the level that coincides with the published level that intercepts the ILS glidepath at the Final Approach Fix, or to a lower level when allocated in accordance with the Surveillance Minimum Altitude Chart.



BIGJET 347, cleared ILS approach runway 28, QNH 1011



Cleared ILS approach runway 28, QNH 1011, BIGJET 347

- 6.33 Or when the aircraft is descending to or maintaining a level which is higher than the published level that intercepts the ILS glidepath at the final approach fix.



BIGJET 347, descend on the glidepath runway 28, QNH 1011



Descend on the glidepath runway 28, QNH 1011, BIGJET 347

NOTE: When it is judged that this will aid situational awareness, controllers may request aircraft to report established on the glidepath.

- 6.34 When a pilot is transferred to aerodrome control for landing clearance and essential aerodrome information, a controller shall use the following phraseology.



BIGJET 347, contact Kennington Tower 118.5



Kennington Tower 118.5, BIGJET 347

- 6.35 Military ILS phraseology appears in Chapter 10.

Direction Finding

- 6.36 The aeronautical stations that offer a VHF Direction Finding (VDF) service are listed in the UK AIP AD. Some VDF stations stipulate that the service is not available for en-route navigation purposes (except in emergency). VDF bearing information will only be given when conditions are satisfactory, and radio bearings fall within calibrated limits of the station. If the provision of a radio bearing is not possible the pilot will be told of the reason.

- 6.37 A pilot may request a bearing or heading using the appropriate phrase or Q code to specify the service required. Each aircraft transmission shall be ended by the aircraft callsign. A VDF station will provide the following as requested:

1. QDR – Magnetic bearing of the aircraft from the station (i.e. Approach G-ABCD request QDR G-ABCD).
2. QDM – Magnetic heading to be steered by the aircraft (assuming no wind) to reach the VDF station (i.e. Approach G-ABCD request QDM G-ABCD).
3. QTE – True bearing of the aircraft from the station (i.e. True bearing, True bearing Approach G-ABCD request True bearing (or QTE) G-ABCD).

- 6.38 The direction-finding station will reply in the following manner:

1. the appropriate phrase or Q code;

2. the bearing or heading in degrees in relation to the direction-finding station;
3. the class of bearing (Class may be omitted after passing the initial bearing);
4. the time of observation, if necessary.



Kennington Approach, G-ABCD, request QDM G-ABCD



G-ABCD, Kennington Approach, QDM 090 degrees class Bravo



QDM 090 degrees class Bravo, G-ABCD



True bearing, true bearing, Kennington Approach, G-ABCD, request true bearing, G-ABCD



G-ABCD, Kennington Approach, true bearing 276 degrees true, I say again, 276 degrees true class bravo



True bearing 276 degrees class bravo, G-ABCD

- 6.39 Controllers may request a pilot to make a transmission so that the DF bearing associated with the transmission may be observed.



G-ABCD Kennington Approach, transmit for DF



Transmit for DF, G-ABCD

- 6.40 The accuracy of the observation is classified as follows:

Class A – Accurate within plus or minus 2 degrees.
 Class B – Accurate within plus or minus 5 degrees.
 Class C – Accurate within plus or minus 10 degrees.
 Class D – Accuracy less than Class C.

NOTE: Normally no better than Class B bearing will be available.

VDF Procedure

- 6.41 This is a procedure whereby a pilot requests a series of QDMs to home to a VDF station on or near an aerodrome and to carry out a prescribed VDF instrument approach procedure to the aerodrome. VDF procedures are notified in the AD section of the UK AIP.
- 6.42 Requests for QDMs are normally initiated by the pilot at intervals of about 1 minute during the initial stages of the homing, increasing in frequency as the VDF overhead is approached. During this procedure QDMs are requested as required to achieve and maintain the specified tracks. **The VDF Procedure is totally pilot interpreted.**



Borton Approach, G-ABCD, information Delta, request homing and VDF approach



G-ABCD, Borton Approach, pass your message



G-ABCD, T67, 15 miles northwest of Borton, heading 130 degrees, FL50, IFR, inbound Borton, request homing and VDF approach, G-ABCD



G-CD, cleared to the VDF overhead at altitude 3000 feet Borton QNH 1010, QDM 125 class Bravo, report overhead



Cleared to the VDF overhead at altitude 3000 feet Borton QNH 1010, QDM 125 class Bravo, Wilco, G-CD

- 6.43 The pilot employs a series of QDMs to home to the VDF overhead positioning themselves to arrive from a direction which will entail the minimum of manoeuvring in the overhead to proceed outbound on the specified track.





G-CD, request QDM G-CD




G-CD, QDM 125


 QDM 125, G-CD


 G-CD, maintaining 3000 feet, request QDM G-CD


 G-CD, Roger, QDM 135


 QDM 135, G-CD

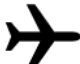 G-CD, request QDM, G-CD

 G-CD, QDM 145, cleared VDF approach runway 34


 QDM 145, cleared VDF approach runway 34, G-CD

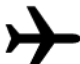
 G-CD, request QDM G-CD


 G-CD, QDM 155


 QDM 155, G-CD


 G-CD, request QDM G-CD


 G-CD, no bearing

 G-CD, request QDM G-CD


 G-CD, no bearing


 G-CD, overhead turning outbound


 G-CD, report descending in the procedure QNH 1010


 Wilco, QNH 1010, G-CD

- 6.44 The pilot starts timing the outbound leg and employing a series of QDMs to establish and maintain the prescribed track, descends as notified for the procedure. The timed outbound leg ends with a turn (normally level) onto the final approach QDM.


 G-CD, request QDM, G-CD


 G-CD, QDM 345

 G-CD, descending outbound QDM 345, G-CD

 G-CD, Roger, report base turn complete


 Wilco, G-CD


 G-CD, request QDM, G-CD

 G-CD, QDM 355


 QDM 355, G-CD


6.45 At the end of the outbound leg the pilot turns as prescribed onto the final approach QDM using a series of QDMs during the turn to achieve the final QDM.

 G-CD, request QDM, G-CD


 G-CD, QDM 345

 QDM 345, G-CD

 G-CD, request QDM, G-CD

 G-CD, QDM 342

 QDM 342, G-CD

 G-CD, base turn complete, descending inbound, G-CD



G-CD, continue approach, report visual QNH 1011



G-CD, Wilco, QNH 1011, request QDM, G-CD



G-CD, QDM 338



QDM 338, G-CD



G-CD, request QDM, G-CD



G-CD, QDM 342



QDM 342, G-CD



G-CD, visual



G-CD, contact Tower 118.7



Tower 118.7, G-CD

6.46 If no visual contact is gained, a missed approach is initiated at the missed approach point which is normally the VDF overhead.



G-CD, request QDM G-CD



G-CD, no bearing

G-CD, nothing seen,
going around

NDB(L) and VOR Procedures

6.47 NDB(L) and VOR instrument approach procedures are pilot interpreted procedures notified for particular aerodromes and runways where procedural tracks are defined by NDB(L) bearings or VOR radials. Some NDB(L) and VOR procedures may include marker beacons or DME to provide ranging information. Aircraft may also be vectored using an ATS Surveillance System to an NDB(L) or VOR final approach track. An example of a typical NDB(L) instrument approach procedure to an aerodrome outside controlled airspace follows; similar RTF phraseology may be employed in VOR procedures.



Borton Approach, G-ABCD,
inbound Borton, information
Delta



G-ABCD, Borton
Approach, pass your
message



G-ABCD, T67, 20 miles
south of Borton, FL80,
IFR, estimating BTN 47,
request NDB/DME
approach




G-CD, cleared to BTN at
FL80, expect NDB/DME
approach RW 34,
expected approach time
58




Cleared to BTN FL80 to
hold. Expected approach
time 58, G-CD




G-CD, descend to
altitude 3000 feet, Borton
QNH 1015, report
entering the hold


 Descend to altitude 3000 feet Borton QNH 1015, wilco, G-CD

 G-CD, overhead the BTN, maintaining 3000 feet entering the hold

 G-CD


NOTE: All manoeuvres associated with entering the holding pattern are considered to be part of the holding procedure.


 G-CD, cleared NDB/DME approach runway 34, report BTN outbound


 Cleared for NDB/DME approach runway 34, Wilco, G-CD


 G-CD, BTN outbound

NOTE: Beacon outbound should be called only at the final passage over the beacon when commencing the outbound portion of the procedure.

 G-CD, report base turn complete, QNH 1015

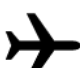 Wilco, QNH 1015, G-CD

 G-CD, base turn complete

 G-CD, report at 4 DME





-  Wilco, G-CD
-  G-CD, 4 DME
-  G-CD, Roger, contact Tower 118.7
-  Tower 118.7, G-CD

Figure 2: Join and hold for non-precision approach

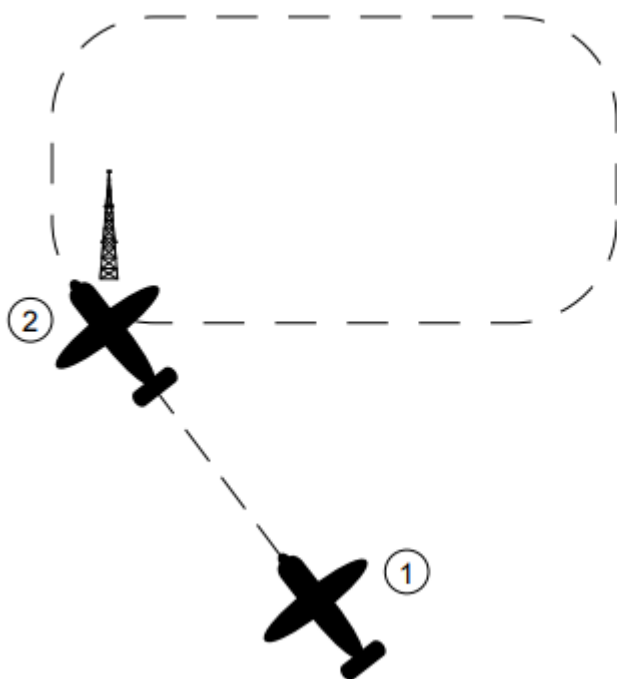
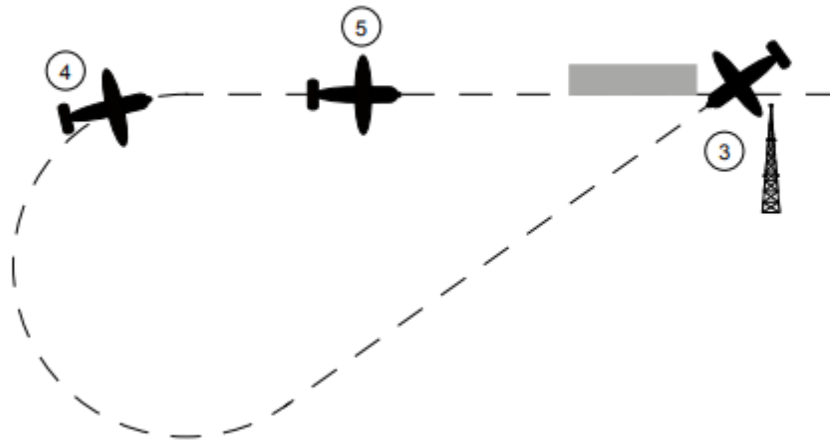


Figure 3: Procedure**RTF for a Non-precision Approach**


Position 1: Pilot transmits callsign, aircraft type, position, flight level, flight conditions, estimate for the beacon and requests type of approach required.

Position 2: When overhead the beacon, pilot reports '**Callsign, entering the hold, maintaining (altitude/flight level)**'.

Position 3: Pilot reports '**Callsign, (navigation aid designator) outbound**' (in Figure 2 when overhead the beacon).

Position 4: Pilot reports '**Callsign, base turn complete**'.

Position 5: Pilot reports '**Callsign, 4 DME**' (or other position as required).

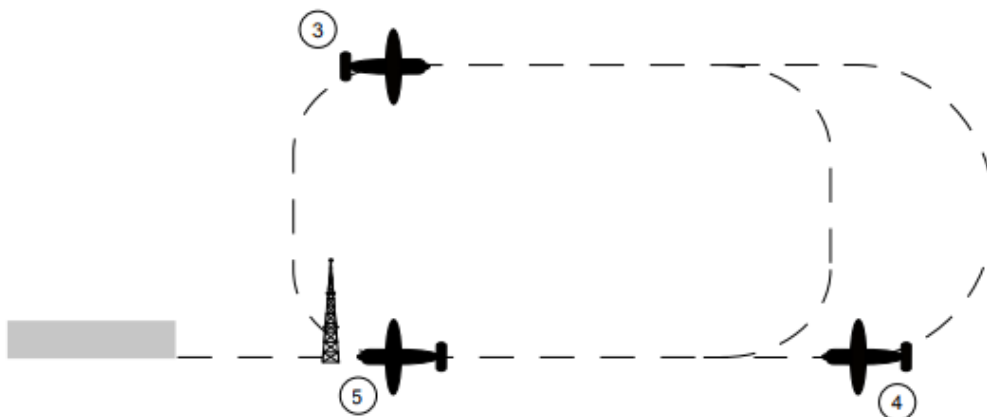
Figure 4: Alternative procedure

Phraseology linked to the use of Global Navigation Satellite System on an RNP Approach


- 6.48 Pilot interpreted RNP instrument approach procedures are available for use by suitably equipped aircraft at certain aerodromes. The phraseology to be used is illustrated in the following examples.

Procedure Clearance

- 6.49 Clearance to fly the approach should be requested using the initial approach fix and runway designator.


 G-ABCD, request RNP approach via BEMBO, Runway 27


- 6.50 Where traffic conditions permit, controllers shall clear the pilot to follow the procedure, indicating the runway designator and initial approach fix to be used.

 G-ABCD, cleared RNP approach Runway 27, report at BEMBO.

Position Reporting


- 6.51 For traffic sequencing and to aid situational awareness, controllers may request the pilot to report when established on final approach track or to report at any other relevant point in the procedure, as shown below and overleaf, respectively.

 G-CD, report established on final approach track

 G-CD, report 2 miles from final approach fix

Final Approach Fix

- 6.52 Controllers will instruct the pilot to report at the final approach fix.

 G-CD, report final approach fix

Reporting GNSS Problems

- 6.53 When aware of problems with the GNSS system, controllers will notify the pilot specifying, where known, applicability in terms of type of operation, location, geographical boundaries and times.



G-CD, GNSS reported unreliable

or,



G-CD, GNSS may not be available due to interference in the vicinity of Wraysbury until further notice

- 6.54 A RAIM (Receiver Autonomous Integrity Monitoring) alert indicates to the pilot that the RNP system is unavailable either due to insufficient satellites in view or a fault in the equipment, in both cases, the pilot will break off the approach. Following a RAIM indication, pilots shall inform the controller of the event together with their intentions.



G-CD, Unable RNP, Loss of RAIM, Request NDB Approach



G-CD, RAIM alert, going around

Visual Manoeuvring (Circling)

- 6.55 If a pilot intends to complete an instrument approach that is to be followed by visual manoeuvring (circling) to land on another runway, the following should be used:



G-CD, cleared (type of approach), Runway (number), followed by circling to runway (number)

Surveillance Radar Approach (SRA)

- 6.56 During a surveillance radar approach (SRA) the pilot is given distances from touchdown, advisory altitude information and azimuth instructions to enable them to make an approach to a particular runway.
- 6.57 Unless offered by the controller or local procedures require, a pilot wishing to conduct their approach by reference to height must inform the controller and request the QFE. All references to the level of the aircraft will then be to height.
- 6.58 If the pilot reports visual in the early stages of the approach they will be asked whether they wish to continue the SRA. Normally aircraft will not be transferred to aerodrome control until after they have completed the SRA approach.
- 6.59 When the SRA terminates at 2 miles from touchdown, the advisory level checks at half mile intervals are omitted and pilots are expected to reply to all transmissions from the ground station.
- 6.60 When the SRA terminates at less than 2 miles, half mile ranges will be advised. However, once advised, pilots are not required to acknowledge instructions unless requested.
- 6.61 Altitude/height checks below the category A aircraft OCA/OCH will be omitted.
- 6.62 The equivalent military SRA phraseology appears in Chapter 10.
- 6.63 The following are required to be transmitted to pilots being offered SRA approaches (ICAO Doc 4444 PANS ATM 8.9.7, MATS Part 1 Section 3, Chapter 2 Paragraph 11). However, the exact timing of these transmissions can be at the discretion of each individual unit, depending on their particular operational requirements and procedures.
1. The OCA/H, and an instruction to check the applicable minima, missed approach point and, where appropriate, step-down fixes;
 2. Surface Wind;
 3. QNH/QFE;
 4. Gear Check.

















6.64 Exemplar phraseology – SRA to 2 Mile final












BIGJET 347, this will be a surveillance radar approach runway 28 terminating at 2 miles from touchdown with a (number) degree glidepath





















BIGJET 347

	BIGJET 347, QNH 1003, ([OCA] /[OCH]) is (number) feet, check your minima, [step down fixes] and missed approach point		QNH 1003, wilco BIGJET 347
	BIGJET 347, turn right heading 275 closing final approach		Right heading 275, BIGJET 347
	BIGJET 347, (number) miles from touchdown. Your descent will begin at (number) miles		BIGJET 347
	BIGJET 347, (number) miles from touchdown. Report runway lights in sight		Wilco, BIGJET 347
	BIGJET 347, slightly left of track closing [slowly/quickly/rapidly/nicely] from the left. Turn right heading 280 degrees		Heading 280 degrees BIGJET 347
	BIGJET 347 (number) miles from touchdown, check gear		Gear down, BIGJET 347
	BIGJET 347 approaching (number) miles from touchdown. Commence descent now to maintain a (number) degree glidepath		Descending, BIGJET 347
6.65	The range at which the descent begins depends on the altitude or height of the aircraft during the intermediate phase and the angle of the glide path.		
	BIGJET 347 (number) miles from touchdown. Altitude (or height) should be (number) feet		BIGJET 347

	BIGJET 347 (number) miles from touchdown. Altitude (or height) should be (number) feet. Heading 280 is good		BIGJET 347
	BIGJET 347 (number) miles from touchdown. Altitude (or height) should be (number) feet. Slightly right of track, closing from the right. Turn left 5 degrees heading 275		Heading 275, BIGJET 347
	BIGJET 347 (number) miles from touchdown. Altitude (or height) should be (number) feet. Runway 28, surface wind calm, cleared to land		Runway 28, cleared to land, BIGJET 347
	BIGJET 347 (number) miles from touchdown. Altitude (or height) should be (number) feet. Heading 280 is good		
	BIGJET 347 2 miles from touchdown. Altitude (or height) should be (number) feet. On track, approach complete, contact tower 118.5		Contact tower 118.5, BIGJET347

6.66 Exemplar phraseology – SRA to 1/2 Mile final

	BIGJET 347, this will be a surveillance radar approach runway 28 terminating at ½ a mile from touchdown with a (number) degree glidepath		BIGJET 347
---	--	---	------------

	BIGJET 347, QNH 1003, ([OCA] / [OCH]) is (number) feet, check your minima, [step down fixes] and missed approach point		QNH 1003, wilco BIGJET 347
	BIGJET 347, turn right heading 275 closing final approach		Right heading 275, BIGJET 347
	BIGJET 347, (number) miles from touchdown. Your descent will begin at (number) miles		BIGJET 347
	BIGJET 347 (number) miles from touchdown. Report Runway in sight		Wilco, BIGJET 347
	BIGJET 347, after landing contact Kennington Tower on 118.5		After landing Kennington Tower 118.5, BIGJET 347
	BIGJET 347, slightly left of track closing [slowly/quickly/rapidly/nicely] from the left. Turn right heading 280 degrees		Heading 280 degrees BIGJET 347
	BIGJET 347 (number) miles from touchdown, check gear		Gear down, BIGJET 347
	BIGJET 347 approaching (number) miles from touchdown. Commence descent now to maintain a (number) degree glidepath		Descending, BIGJET 347

6.67 The range at which the descent begins depends on the altitude or height of the aircraft during the intermediate phase and the angle of the glide path. CAP 493, Section 3, Chapter 2, paragraph 13.1 (1) states that "Advisory heights through which the aircraft should be passing to maintain the nominal glidepath, together with ranges from touchdown, shall be passed at each half mile". Therefore, half mile ranges should be passed after descent has

commenced. This should follow the spoken format, “(number) and a half miles.”



BIGJET 347 (number) miles from touchdown. Altitude (or height) should be (number) feet. Do not acknowledge further instructions unless instructed



BIGJET 347 (number) miles from touchdown. Altitude (or height) should be (number) feet. Heading 280 is good



BIGJET 347 (number) miles from touchdown. Altitude (or height) should be (number) feet. Slightly right of track, closing from the right. Turn left 5 degrees heading 275



BIGJET 347 4 miles from touchdown. Altitude (or height) should be (number) feet. Runway 28, surface wind calm, cleared to land, acknowledge



Runway 28, cleared to land, BIGJET 347

6.68 After 4 miles, the gap between further transmissions will be less than 5 seconds.



BIGJET 347 (number) miles from touchdown. Altitude (or height) should be (number) feet. Heading 275 is good



BIGJET 347 (number) miles from touchdown. Altitude (or height) should be (number) feet. Heading 275 is good



BIGJET 347 (number) miles from touchdown. Altitude (or height) should be (number) feet. On track, check minimum descent height (or altitude)



BIGJET 347 (number) miles from touchdown. Altitude (or height) should be (number) feet. On track



BIGJET 347 half a mile from touchdown, approach completed. Out

Landing Altimeter Setting (QNE)

6.69 QNE is the indication which the altimeter will give on landing, at a particular time and place, when the hectopascal scale is set to 1013.2 hPa. QNE information may be used by pilots of aircraft whose altimeters cannot be set to below 950 hPa. The QFE/QNE conversion will be calculated by ATC.

Example: QFE 947.6 Set 1013.2 on altimeter.

Altimeter will read 1842 ft on touchdown.

PAR Approach

6.70 Pilots visiting military airfields may wish to undertake a PAR Approach (Precision Approach Radar). An explanation of the phraseology used by military pilots and controllers appears in Chapter 10, under PAR Phraseology.

Clearance to enter Control Zones (CTR)

6.71 The majority of CTRs in the UK are designated Class D airspace, which permits VFR flight subject to an ATC clearance.



Greenfield Approach, G-ABCD, request Traffic Service and zone transit



G-ABCD, Greenfield Approach, pass your message



G-ABCD, Cessna 172, from Seaton to Borton, overhead Selden, altitude 2500 feet Wessex 998 hectopascals, estimating Hampton 03, request Traffic Service and zone transit



G-CD, remain outside controlled airspace, expect joining clearance at 45. Time is 40



Wilco, G-CD



G-CD, squawk 3577



Squawk 3577, G-CD



G-CD, identified 10 miles southeast of Greenfield Traffic Service



Traffic Service, G-CD



G-ABCD, cleared to cross the Greenfield Zone, routing via Hampton and Littleton, VFR not above altitude 2500 feet
Greenfield QNH 1002



Cleared to cross the Greenfield Zone routing via Hampton and Littleton, VFR not above altitude 2500 feet
Greenfield QNH 1002, G-ABCD



G-CD, report at Hampton



Wilco, G-CD

G-CD, overhead
HamptonG-CD, Roger, report at
LittletownG-CD, overhead
LittletownG-CD, Roger, leaving
controlled airspace,
Traffic Service, Portland
1000Traffic Service, Portland
1000, G-CD

Aerodrome Traffic Zone (ATZ) associated with another Aerodrome

- 6.72 The legislation for flights within ATZs is contained in Rule 11 of the Rules of the Air Regulations. Controllers who are uncertain as to whether a pilot will either route around or transit through an ATZ for which they are not the controlling authority should advise the pilot of the ATZ status and confirm the pilot's intentions. Controllers may advise pilots to change to the published aerodrome frequency to either obtain ATZ crossing clearance from an ATC unit, or to obtain information from an AFIS or AGCS unit.

G-CD, approaching Borton
ATZ, confirm your intentionsG-CD, approaching Seaton
ATZ, contact Seaton
Information 122.775

UK Flight Information Services

6.73 Air Traffic Services are provided outside controlled airspace by a variety of air traffic units and are detailed within CAP 774 (UK Flight Information Services) and the UK AIP.

6.74 Pilots requiring an ATS should establish RTF communication with the appropriate ATSU using the following format.



Westbury Approach, G-
ABCD, request Traffic
Service



G-ABCD, Westbury
Approach, pass your
message

6.75 Once communications have been established the pilot should pass the following details:

1. aircraft callsign;
2. aircraft type;
3. departure aerodrome;
4. destination aerodrome;
5. present position;
6. level;
7. additional details/intentions (e.g., next route point, squawk code).

NOTE: Unless requested by the ATSU, pilots do not need to state their flight conditions or flight rules when requesting an ATS for transit flights outside controlled airspace. However, pilots are required to state their flight rules in initial calls for arriving and departing flights and for crossings of Class C, D and E Airspace.



G-CD, Cessna 172, from
Borton to Walden, 15 NM
South of Westbury, altitude
2500 feet Wessex 1008,
VFR, tracking to Wells,
Squawking 7000

6.76 When an ATS is being provided outside controlled airspace, agreements can be established between a controller and a pilot on a short-term tactical basis.





G-CD, for coordination
request maintain Flight
Level 50




Maintain Flight Level 50,
G-CD


or,


 Negative, G-CD


 G-CD, for coordination
request not above Flight
Level 90

 Not above Flight Level
90, G-CD


or,


 Negative, G-CD


 G-CD, for coordination
request turn right heading
050 degrees

 Turn right 050 degrees,
G-CD


or,

 Negative, G-CD


 G-CD, for coordination
request operate no further
west of your current position

 No further west of current
position, G-CD

or,

 Negative, G-CD

6.77 Phraseology used in surveillance derived traffic information and avoiding action is detailed in Chapter 5. When providing a Basic Service, the controller may provide traffic information in general terms to assist with the pilot's situational awareness, using the following phraseology.

 G-CD, gliding activity over
Smallville



G-CD, multiple aircraft known to be operating 15 miles north of Smallville



G-CD, PA28 estimating CPT at 25, altitude 2000 feet



G-CD, fast jet reported routing from Smallville to Midtown below altitude 500 feet



G-CD, helicopter conducting power line inspection 5 miles north of Borton below altitude 500 feet

Reduced Traffic Information

6.78 When providing a surveillance derived ATS, there may be circumstances that prevent controllers from passing timely traffic information and/or deconfliction advice, e.g. high workload, areas of high traffic density, against aircraft conducting high energy manoeuvres, or when traffic is not displayed to the controller. Controllers shall inform the pilot of reductions in traffic information along with the reason and the probable duration; however, it may not always be possible to provide these warnings in a timely fashion.

6.79 In high workload situations, which may not always be apparent from RTF loading, it may not be possible for controllers to always provide timely traffic information and/or deconfliction advice. High workload situations may not necessarily be linked to high traffic density.



G-CD, reduced traffic information due to controller workload

6.80 High traffic density can cause difficulty interpreting ATS surveillance system data and may affect radiotelephony loading or controller workload to the extent that they are unable to pass timely traffic information and/or deconfliction advice on all traffic.



G-CD, approaching an area of high traffic density, possible late warning of traffic for the next 8 miles

- 6.81 Where aircraft are operating close to the lateral and/or vertical limits of solid ATS surveillance system cover, or close to a radar overhead, there is potential for conflicting traffic to be detected late.



G-CD, reduced traffic information from the left for the next 10 miles due to the limits of surveillance coverage

- 6.82 Where aircraft are operating in known areas of poor surveillance performance, permanent echoes, weather clutter or when the controller suspects the performance of the ATS surveillance system is degraded, there is potential for aircraft to be undetected or detected late.



G-CD reduced traffic information due to limited surveillance performance

- 6.83 Where a primary ATS surveillance system is unavailable and transponding information alone is used to provide an ATS.



BIGJET 347, reduced traffic information, traffic information provided on transponding aircraft only

- 6.84 Where the ATS Surveillance System display is affected by clutter, the controller shall advise the pilot of the reduction in traffic information.



G-CD, reduced traffic information from the left for the next 10 miles due displayed clutter

Traffic Service – Operations below ATC Terrain Safety Levels

- 6.85 If a pilot receiving a Traffic Service requests a heading from the controller whilst operating below the ATC unit terrain safe level, this may be provided as long as the controller reminds the pilot that they remain responsible for terrain clearance.



G-CD, request a heading for Seaton



G-CD, taking your own terrain clearance, suggest right heading 120 degrees



My own terrain clearance, right heading 120 degrees, G-CD

- 6.86 Other than when following a notified instrument flight procedure, a pilot requesting to descend below the ATC unit terrain safe level under a Traffic Service shall be reminded that they remain responsible for terrain clearance.



G-CD, request descent to altitude 1000 feet



G-CD, taking your own terrain clearance, descent approved



My own terrain clearance, descent approved, G-CD

- 6.87 When providing a Traffic Service, levels allocated by controllers shall be terrain safe in accordance with ATC unit terrain safe levels, unless an agreement is reached with the pilot, or such levels form part of VFR clearances for aerodrome arrival or to enter controlled airspace that by necessity require flight below the ATC unit terrain safe levels. In such circumstances, the instruction shall be accompanied by a reminder that the pilot remains responsible for terrain clearance.



G-CD, for coordination can you accept flight at altitude 1500 feet



G-CD Affirm



G-CD, taking your own terrain clearance, report reaching altitude 1500 feet



My own terrain clearance,
report reaching altitude
1500 feet, G-CD

Deconfliction Service – Descent below ATC Unit Terrain Safe Level

- 6.88 If a pilot requests descent below ATC unit terrain safe levels, controllers shall no longer provide a Deconfliction Service but should instead, subject to surveillance and RTF coverage, apply a Traffic Service.



G-CD, request descent to
altitude 1000 feet



G-CD, Traffic Service,
taking your own terrain
clearance, descent
approved



Traffic Service, my own
terrain clearance,
descent approved, G-CD

Deconfliction Service – Departing and Arriving Aircraft

- 6.89 If a controller detects a conflict when an aircraft is below the ATC unit terrain safe level whilst departing from an aerodrome and climbing to the ATC unit terrain safe level, traffic information without deconfliction advice shall be passed. However, if the pilot requests deconfliction advice, or the controller considers that a definite risk of collision exists, the controller shall immediately offer such advice.



G-CD, avoiding action with
terrain alert, turn left
immediately heading 180
degrees, traffic 12 o'clock, 5
miles opposite direction,
indicating 2000 feet

- 6.90 If a controller detects a conflict when an aircraft is conducting a pilot interpreted instrument approach, controllers shall provide avoiding action advice and an associated terrain safe level to climb to or fly at.



G-CD, avoiding action, turn
left immediately heading
230 degrees, climb to
altitude 2000 feet, traffic 2
o'clock, 2 miles converging
indicating 1000 feet

Chapter 7: Area Phraseology

Area Control Service Phraseology

General

7.1 The following examples of phraseology are suitable for use at area control centres according to the requirements of the prevailing traffic situation.



BIGJET 347, request descent



BIGJET 347, maintain FL280 expect descent after Marlow



Maintaining FL280, BIGJET 347



BIGJET 347, descend FL120. Cross Colinton FL170 or above



Descend FL120. Cross Colinton FL170 or above, BIGJET 347



BIGJET 347, confirm able to cross Colinton at time 52



Affirm, BIGJET 347



BIGJET 347, cross Colinton 52 or before



Cross Colinton 52 or before, BIGJET 347

Position Reporting

7.2 In order to assist in establishing separation, pilots may be instructed to provide additional position report information as well as routine reports.



BIGJET 347, report
Colinton



Wilco, BIGJET 347



BIGJET 347, Colinton 47
FL170 descending FL120,
abeam KTN at 55



BIGJET 347, Roger



BIGJET 347, report 25
miles DME from Kennington



Wilco, BIGJET 347



BIGJET 347, report your
DME distance from
Kennington



BIGJET 347, 26 miles



BIGJET 347, report passing
radial 270 Kennington VOR



Wilco, BIGJET 347

Flights Joining Airways

7.3 Aircraft requiring to join an airway, including VFR flights in receipt of an ATS in Class E airspace and transitioning into Class C/D airspace, should make their request to the appropriate ATSU. Where no flight plan has been filed, the request should include the filing of an airborne flight plan (see Chapter 3). Where a flight plan has already been filed an abbreviated call may be made.



Wrayton Control, G-RDVC,
request clearance to enter
controlled airspace
northeast of Marlow at
FL240 at time 42



G-RDVC, cleared at time
42 from 8 miles northeast
of Marlow to Colinton via
A1, maintain FL240,
squawk 5507



Cleared at time 42 from 8
miles northeast of Marlow
to Colinton, via A1,
maintain FL240, squawk
5507, G-RDVC



G-RDVC, correct

- 7.4 Because of the prevailing traffic situation, a joining clearance may not be issued immediately. Where it is not practicable to provide an expected clearance time, e.g. where the instruction 'remain outside controlled airspace' is used by a ground station other than the controlling authority for the relevant controlled airspace, the time check and expected clearance time may be omitted.



G-RDVC, remain outside controlled airspace, expect joining clearance at time 55, time is 44



Remaining outside controlled airspace, G-RDVC

- 7.5 In the event that the requested flight level is already occupied the controller will offer an alternative.



G-RDVC, request FL240



G-RDVC, unable approve FL240, FL220 available



G-RDVC, accept FL220

- 7.6 Controllers shall inform VFR flights in receipt of a surveillance-based ATS that is transitioning from Class G to Class E airspace that they are entering Class E airspace and are to maintain VMC.



G-VC, entering Class Echo airspace, maintain VMC



Roger, wilco, G-VC




- 7.7 Unidentified known VFR flights may be instructed to report entering/ leaving Class E airspace. Established reporting points and geographical points may be employed as necessary.




G-VC report entering Class Echo airspace







Wilco, G-VC

	G-VC, Entering Class Echo airspace		G-VC roger, maintain VMC, [Traffic (information)], report leaving Class Echo airspace
			Roger, wilco, G-VC


7.8 Prior to entering Class E + TMZ airspace pilots should make the initial call:

	Wrayton Control, G-RDVC (aircraft type), position, level, routing, request approval to enter Class Echo TMZ at (position) (level)
---	---

VFR flights operating without a functioning Mode S SSR transponder and in radio contact with the controlling authority should be advised, either:

	G-VC, Class Echo airspace ([entry]/[crossing]/[transit]) approved [at (position) at (level)], [report entering]		G-VC roger, wilco
	G-VC, entering Class Echo airspace		G-VC roger, maintain VMC [traffic information], [report leaving Class Echo airspace]

or may not receive immediate approval to enter Class E + TMZ airspace. In such cases they will be advised as follows:

	G-VC negative, [reason], [expect xx minute delay]
---	---

Flights Transitioning Between Different Classifications of Controlled Airspace

7.9 In order to highlight to the pilot that they are entering an unknown VFR traffic environment, IFR flights transitioning from Class A airspace into Class E airspace and IFR and VFR flights transitioning from Class C/D airspace into Class E airspace shall be advised by ATC that they are entering Class E airspace.



G-VC entering Class Echo airspace



Roger, G-VC

- 7.10 IFR flights transitioning from Class E airspace into Class A/C/D airspace, should be advised of the change in airspace classification.



G-VC, entering Class [Alpha/Charlie/Delta] airspace



Roger, G-VC

Flights Leaving Airways

- 7.11 IFR flights leaving controlled airspace will normally be given a specific point at which to leave, together with any other relevant instructions necessary to ensure separation.



G-RDVC, cleared to leave controlled airspace northeast of Marlow at FL220 whilst in controlled airspace



Cleared to leave controlled airspace northeast Marlow at FL220 in controlled airspace, G-RDVC

- 7.12 An aircraft may request permission to leave controlled airspace by descent.



G-RDVC, request permission to leave controlled airspace by descent



G-RDVC, cleared to leave controlled airspace by descent. Report passing altitude 5500 feet Wessex 1014



Cleared to leave controlled airspace by descent, will report passing altitude 5500 feet Wessex 1014, G-RDVC

- 7.13 In the above example the base of the airway is 5500 feet.

- 7.14 Controllers shall inform VFR flights transitioning from Class E to Class G airspace that they are leaving Class E airspace.



G-VC, leaving Class Echo airspace



Roger, G-VC

- 7.15 VFR flights that have not been identified may be instructed to report leaving Class E airspace; established reporting points and geographical points may be employed as necessary.



G-VC leaving Class Echo airspace



G-VC roger

Flights Crossing Airways

- 7.16 The pilot of a flight requiring clearance to cross a Class A/D airway, or an IFR flight requiring to cross a Class E airway, shall make their request to the appropriate ATSU.



Wrayton Control, G-ABCD, request crossing of A1 at Wicken



G-ABCD, Wrayton Control, pass your message



G-ABCD, T67 from Borton, 20 miles north of Wicken heading 220 FL80 IMC request crossing clearance of airway A1 at Wicken FL80 at 1033



G-ABCD, cleared to cross A1 at Wicken, maintain FL80 whilst in controlled airspace. Report entering the airway



Cleared to cross A1 at Wicken maintain FL80 in controlled airspace. Wilco, G-ABCD

Flights Holding En-Route

- 7.17 When an aircraft is required to hold en-route, the controller will issue holding instructions and a time at which onward clearance can be expected. Where it is not self-evident, the reason for the delay should also be given.



BIGJET 347, hold at Colinton FL170, expect onward clearance at 03, landing delays at Kennington 20 minutes



Hold at Colinton FL170 expect onward clearance at time 03, BIGJET 347

Reduced Vertical Separation Minimum (RVSM) Phraseology

7.18 The phraseology in Table 1 is applicable for RVSM operations:

Table 1

Message	Phraseology (<i>italics indicates a pilot transmission</i>)
To ascertain the RVSM approval status of a flight	CONFIRM RVSM APPROVED
Pilot indication of RVSM Approved status Pilot indication of non RVSM approval status	<i>AFFIRM RVSM</i> <i>NEGATIVE RVSM (supplementary information e.g. State aircraft)</i>
To deny ATC clearance into RVSM airspace	UNABLE ISSUE CLEARANCE INTO RVSM AIRSPACE, MAINTAIN [or DESCEND or CLIMB] (level)
For the case of an individual aircraft reporting severe turbulence or other severe weather-related phenomenon	<i>UNABLE RVSM DUE TURBULENCE</i>
The phraseology required for a pilot to communicate those circumstances which would cause an aircraft's equipment to degrade to below altimetry Minimum Aircraft Systems Performance Specification (MASPS) compliance levels NOTE: The phrase is to be used to convey both the initial indication of the non-altimetry MASPS compliance and, henceforth, on initial contact on all frequencies within the lateral limits of the RVSM airspace until such time as the problem ceases to exist	<i>UNABLE RVSM DUE EQUIPMENT</i>
To request an aircraft provide information as soon as RVSM approved status has been regained or the pilot is ready to resume RVSM operations	REPORT WHEN ABLE TO RESUME RVSM

Message	Phraseology (<i>italics indicates a pilot transmission</i>)
To request confirmation that an aircraft has regained RVSM approved status, or the pilot is ready to resume RVSM operations	CONFIRM ABLE TO RESUME RVSM
The pilot shall communicate their ability to resume operation within the RVSM airspace after an equipment related contingency, or their ability to resume RVSM operations after a weather-related contingency	<i>READY TO RESUME RVSM</i>

NOTE: Should there be reason to believe that an aircraft's declared RVSM status is in doubt, then the controller shall ask the RVSM status in accordance with the table above.

Example: A non-RVSM compliant aircraft maintaining FL350 making an initial call on a new frequency:

Pilot: (**callsign**) MAINTAINING FL350, NEGATIVE RVSM

- 7.19 During operations in, or vertical transit through, reduced vertical separation minimum (RVSM) airspace with aircraft not approved for RVSM operations, pilots shall report non-approved status in accordance with Table 1 as follows:
1. At initial call on any channel within RVSM airspace.
 2. In all requests for level changes.
 3. In all read backs of level clearances.
- 7.20 Air traffic controllers shall explicitly acknowledge receipt of messages from aircraft reporting RVSM non-approved status.

Chapter 8: Emergency Phraseology

Distress and Urgency Communication Procedures

Introduction

8.1 This Chapter describes the characteristics of the VHF International Aeronautical Emergency Service and equivalent services provided in the UK by Distress and Diversion (D&D) section on UHF. It also describes the RTF procedures which should be used by civil pilots under the Aeronautical Mobile Service during an emergency in the UK. Additional information is published in the UK AIP (GEN) section and AICs.

States of Emergency

8.2 The states of emergency are classified as follows:

1. Distress - A condition of being threatened by serious and/or imminent danger and of requiring immediate assistance.
2. Urgency - A condition concerning the safety of an aircraft or other vehicle, or of some person on board or within sight, but does not require immediate assistance.

8.3 The pilot should start the emergency call with the appropriate international RTF prefix as follows:

1. Distress 'MAYDAY, MAYDAY, MAYDAY'.
2. Urgency 'PAN PAN, PAN PAN, PAN PAN'.

UHF and VHF Emergency Service

8.4 The UK Distress and Diversion (D&D) Section is located at the London Control Centre. It is manned by RAF control staff who are assisted in the provision of an emergency service on the International Aeronautical Emergency Frequency 121.5 MHz and on 243.0 MHz by suitably equipped civil and military units and certain HM Coastguard stations. The service is available continuously to pilots flying within UK airspace who are in distress, in urgent need of assistance, or experiencing difficulties (i.e. temporarily unsure of position) which could lead to a state of emergency. The service may also be available for practices provided that no actual emergency is in progress on the UHF or VHF distress frequencies. More information on the emergency service for civil pilots can be found in the UK AIP (GEN).

8.5 The primary role of the D&D Section is to provide military and civil pilots with an emergency aid and position fixer service. Autotriangulation (DF) coverage on 121.5 MHz is available over most of the London FIR above 3000 ft amsl to

aircraft flying to the east and south of Manchester, apart from within approximately 40 NM of Heathrow, where coverage is available above approximately 2000 ft amsl. In respect of other civil aircraft incidents on VHF they rely for position fixing on DF bearing information obtained by telephone from external units equipped with VDF. This fixing procedure takes time and may require several minutes of concentrated activity because it involves the manual plotting onto 1:250,000 charts of the bearings received. The quality of the position fixes is determined by the availability of VDF bearings, and thus, depends largely on the height of an aircraft and its distance from the VDF stations. The coverage of the VHF fixing service is limited below 3000 ft amsl; indeed, the ability to locate aircraft at low altitude by the use of VDF may be severely inhibited (because of the effects of high ground) over much of Scotland, Wales and SW England. In circumstances where 121.5 MHz DF data is lacking, the controller's ability to assist a pilot who is uncertain of their position is very limited and will depend on such factors as the availability of SSR information and the amount and accuracy of the information provided by the pilot about their route, last known position and observed landmarks.

- 8.6 Certain UK aerodromes can also offer civil pilots an effective emergency communications and aid service. Some maintain a continuous watch on 121.5 MHz, but not all are equipped with VDF or SSR. Others do not normally listen out on 121.5 MHz, but they do have VDF and may be asked by the Emergency Controller to provide DF bearing information on an aircraft, and other assistance. Where a bearing is required for fixing purposes from an airfield which has VDF but not on 121.5 MHz, the Emergency Controller may instruct the pilot to change temporarily to the frequency on which VDF is available.

UHF and VHF Emergency Service – General Procedures

- 8.7 Pilots should address their emergency calls on 121.5 MHz or 243.0 MHz to 'London Centre'. Once two-way communication has been established, pilots should not leave 121.5 MHz or 243.0 MHz without telling the controller. The use of a special D&D Section at the London Centre in the provision of emergency services is unique to the UK. Detailed information on related UK Search and Rescue (SAR) procedures is contained in the GEN Section of the UK AIP.
- 8.8 Pilots are urged – in their own interests – to request assistance from the emergency service as soon as there is any doubt about the safe conduct of their flight. Even then, the provision of assistance may be delayed if a pilot does not pass clear details of their difficulties and requirements, using the international standard RTF prefix 'MAYDAY, MAYDAY, MAYDAY' or 'PAN PAN, PAN PAN, PAN PAN' as appropriate. For example, a vague request from a pilot for 'confirmation of position' is unlikely to be accorded as much priority as would be given to a statement that they are lost. If, subsequent to the transmission of a 'MAYDAY' or 'PAN', a pilot considers the problem not to be as serious as first thought and priority attention is no longer required, the

emergency condition may be cancelled at the pilot's discretion. It is invariably preferable for pilots believing themselves to be facing emergency situations to declare them as early as possible and then cancel later if they decide the situation allows.

- 8.9 If a pilot is already receiving an air traffic service from a civil or military ATSU, before the emergency arises, assistance should be requested from the controller on the frequency in use. In this case, any SSR code setting previously assigned by ATC (other than the Conspicuity Codes 7000 and 2000) may be retained at the discretion of either the pilot or the controller.
- 8.10 If, however, the pilot is not receiving an air traffic service from an ATSU and the aircraft is equipped with an SSR transponder it should be switched, preferably before the emergency call is made, to Emergency Code 7700, with Mode C if available. If the transponding aircraft is high enough to be within secondary surveillance system cover, the selection of the Emergency 7700 Code will alert the Emergency Controller to the presence of an incident by means of an audio and visual warning. The received SSR plot will show the precise location of the aircraft on the controller's ATS surveillance system display and will then obviate the need for the emergency controller to carry out the more time-consuming manual aircraft position plotting procedure. Information on SSR operating procedures, including Special Purpose Codes 7700 (Emergency), 7600 (Radio Failure) and 7500 (Hijack or Other Act of Violence) are detailed in the ENR Section of the UK AIP.
- 8.11 If no acknowledgement of the distress or urgency message is made by the station addressed by the aircraft, other stations shall render assistance. Due to the nature of distress and urgency situations, the originator of messages addressed to an aircraft in distress or urgency condition shall restrict to the minimum the number and volume and content of such messages as required by the condition.
- 8.12 Following the initial distress or urgency message, it is permissible for pilots and controllers to use 'MAYDAY' and 'PAN' as a callsign prefix at their discretion, where it is judged that this would have a beneficial effect on the outcome.

Emergency Message

- 8.13 The emergency message shall contain the following information (time and circumstance permitting) and, whenever possible, should be passed in the order given:
1. 'MAYDAY/MAYDAY/MAYDAY' (or 'PAN PAN/PAN PAN/PAN PAN');
 2. name of the station addressed (when appropriate and time and circumstances permitting);
 3. callsign;
 4. type of aircraft;

5. nature of the emergency;
6. intention of the person-in-command;
7. present or last known position, flight level/altitude and heading;
8. pilot qualifications (See Note 1), viz:
 - a) Student pilots (see Notes 2 and 3);
 - b) No Instrument Qualification;
 - c) IMC Rating;
 - d) Full Instrument Rating.
9. any other useful information e.g. endurance remaining, number of people on board (POB), aircraft colour/markings, any survival aids.

NOTES:

1. There is no ICAO requirement to include pilot qualifications in a distress message. However, this information should be included whenever possible in UK emergency messages as it may help the controller to plan a course of action best suited to the pilot's ability.
2. Solo student pilots shall prefix the aircraft callsign with 'STUDENT', e.g. 'MAYDAY, MAYDAY, MAYDAY STUDENT G-ABCD ... ' to indicate their lack of experience.
3. Although intended primarily for use by ab initio students, the prefix shall also be used in other circumstances where, for example, the holder of a valid licence is returning to flying practice after a significant absence and is undergoing renewal training involving solo flight conducted as a student under the supervision of a flight instructor.
4. POB – Total number of Persons on Board.
5. Emergency messages by military pilots are different and are detailed in Military Aviation Authority Regulatory Publications.



MAYDAY MAYDAY
 MAYDAY Milthorpe Tower,
 G-ABCD, Slingsby engine
 fire losing height intend an
 immediate forced landing
 20 miles south of Milthorpe.
 Passing 3000 feet heading
 360 degrees PPL no
 instrument qualification 1
 POB



G-ABCD, Milthorpe
 Tower, Roger MAYDAY
 (any pertinent
 information)



MAYDAY MAYDAY
MAYDAY Milthorpe Tower,
G-ABCD, C172 engine
failed. Will attempt to land
Milthorpe, 10 miles south,
4000 feet heading 360
degrees, Student pilot



G-ABCD, Milthorpe
Tower, Roger MAYDAY
make straight in
approach runway 35 wind
260 10 knots QFE 1008
you are number one

PAN PAN MEDICAL

8.14 The use of the term 'PAN PAN MEDICAL' indicates that the message which follows concerns a protected 'medical transport' as defined in the 1949 Geneva Conventions and Additional Protocols, which refers to 'any means of transportation by land, water, or air, whether military or civilian, permanent or temporary, assigned exclusively to medical transportation and under the control of a competent authority of a Party to the conflict'. The message shall convey the following data:

1. the callsign or other recognised means of identification of the medical transports;
2. position of the medical transports;
3. number and type of medical transports;
4. intended route;
5. estimated time en-route and of departure and arrival, as appropriate; and
6. any other information such as flight altitude, radio frequencies guarded, languages used, and secondary surveillance system modes and codes.

Ejection from Aircraft

8.15 The phrase to advise a controller that a pilot is abandoning an aircraft equipped with an ejection seat.



(Callsign), Ejecting

Ballistic Recovery Systems

8.16 Ballistic recovery systems, which take the form of a parachute, are fitted to some general aviation aircraft for use in situations where a pilot considers continued safe flight is no longer possible. Such situations could include engine failure and loss of control.

8.17 The following phrase should be used by pilots, where time permits, as part of additional information within the emergency message.



Ballistic recovery system
deployed

Speechless Code

- 8.18 If an emergency message received by the Military Emergency Controller is weak or distorted to the point of being unintelligible, the pilot may be asked to adopt the Speechless Code. A comprehensive description of the speechless procedure appears in Chapter 10.
- 8.19 An aircraft SSR transponder can also be used, during times of communication difficulties, by a pilot to acknowledge or respond to messages by the transmission of SSR Code changes or squawking 'Ident' as requested by the controller.
- 8.20 If neither the state of DISTRESS nor URGENCY applies, a service is available at lower priority to pilots who find themselves in DIFFICULTY. Such pilots should make their situation clear and then provide as much information as possible to the emergency controller from the list at paragraph 8.13.

Radio Procedures – Practice Emergencies

- 8.21 Pilots may simulate emergency incidents (BUT NOT THE STATE OF DISTRESS) on 121.5 MHz or 243.0 MHz to enable them to gain experience of the ATC service provided. Before calling, pilots should listen out on the emergency frequency to ensure that no actual or practice incident is already in progress. Practice calls need not disrupt a planned flight or involve additional expense in fuel or time since the pilot can request 'diversion' to their intended destination or cancel the exercise when necessary. Simulated emergency calls must be prefixed 'PRACTICE' and should be brief, e.g.:



PRACTICE PAN,
PRACTICE PAN,
PRACTICE PAN,
London Centre, G-ABCD

The Emergency Controller will then indicate acceptance of the Practice Pan by transmitting:



G-ABCD, London Centre,
PRACTICE PAN
acknowledged, pass
details when ready

The Emergency Controller may instruct the pilot to call at another time, if the practice cannot be accommodated.

- 8.22 If a practice is accepted, the pilot should then pass their details. SSR Code 7700 should *not* be selected during a practice emergency exercise unless required by the Emergency Controller. Mode C should be switched on, if available.

Training Fix

- 8.23 Pilots who do not wish to carry out a practice emergency but only wish to confirm their position for training purposes may request a 'Training Fix' on 121.5 MHz. This 'Training Fix' is secondary in importance to actual emergency calls but takes precedence over practice emergency calls in the event of simultaneous incidents. Pilots who are unsure of their position should state this and request a position fix or make a "PAN" call, rather than requesting a training fix.

(Listen out before transmitting)



Training Fix, Training Fix,
Training Fix, G-ABCD



G-ABCD, London Centre,
your position indicates 7
miles south of Pitlochry

Relayed Emergency Message

- 8.24 Any aeronautical station or aircraft knowing of an emergency incident may transmit a distress message whenever such action is necessary to obtain assistance for the aircraft or vessel in distress. In such circumstances, it should be made clear that the aircraft transmitting is not itself in distress.



MAYDAY MAYDAY
MAYDAY Milthorpe Tower,
G-ABCD, have intercepted
MAYDAY from G-BJRD, I
say again G-BJRD Cessna
172 engine failure forced
landing 10 miles west of
Wicken VOR, 1000 feet
descending, heading 120,
IMC rating, over



G-ABCD, Milthorpe
Tower, Roger your
relayed MAYDAY from G-
BJRD

Imposition of Silence

- 8.25 Transmissions from aircraft in distress have priority over all other transmissions. On hearing a distress call, all stations must maintain radio silence on that frequency unless the distress is cancelled, or the distress traffic is terminated; all distress traffic has been transferred to other frequencies; the station controlling communications gives permission; it has itself to render assistance. Any station which has knowledge of distress traffic, and which cannot itself assist the station in distress, shall nevertheless

continue listening to such traffic until it is evident that assistance is being provided. Stations should take care not to interfere with the transmission of urgency calls.

- 8.26 The aircraft in distress or the station in control of a distress incident may impose silence either on all stations in the area or on any particular station that interferes with distress transmissions. In either case, the message should take the following form:



All stations, Milthorpe
Tower, stop transmitting.
MAYDAY

or,



G-ABCD, stop transmitting.
MAYDAY

- 8.27 The aeronautical station acknowledging a distress message on a particular frequency may consider it prudent to transfer other aircraft from that frequency in order to avoid any disruption of transmission from or to the emergency aircraft.



MAYDAY, G-BJRD, remain
this frequency, Break,
Break, all other aircraft
contact Milthorpe Tower
123.825, out.

Emergency Descent

- 8.28 When an emergency descent is in progress controllers may broadcast an emergency message on appropriate frequencies to warn other aircraft. The broadcast may include specific instructions, clearances or traffic information as necessary.



Attention all aircraft in the
vicinity of Wicken,
emergency descent in
progress from FL310
passing FL230, standby for
instructions



BIGJET 347, route direct
Marlow



Route direct Marlow,
BIGJET 347

Fuel Shortage

- 8.29 A pilot's declaration of "MINIMUM FUEL" indicates that no further fuel diversion options are available where the aircraft is committed to land at the pilot's nominated aerodrome of landing with not less than 'final reserve fuel'. However, "MINIMUM FUEL" RTF phraseology is not universally used by every aircraft operator and pilot. Controllers are not required to provide priority to pilots of aircraft that have declared "MINIMUM FUEL" or that have indicated that they are becoming short of fuel.



BIGJET 347, MINIMUM
FUEL

- 8.30 Controllers shall respond to a pilot's declaration of "MINIMUM FUEL" by:
1. confirming the estimated delay they can expect to receive, expressed in minutes, if the pilot is en-route to, is joining, or is established in an airborne hold; or
 2. expressing the remaining track mileage from touchdown if the aircraft is being vectored to an approach.
- 8.31 Controllers shall respond to a pilot who has indicated that they are becoming short of fuel but has not declared "MINIMUM FUEL", as above but shall then ask the pilot if they wish to declare an emergency.
- 8.32 Pilots declaring an emergency should use the following RTF phraseology "MAYDAY, MAYDAY, MAYDAY" or "MAYDAY, MAYDAY, MAYDAY FUEL" and controllers shall provide such aircraft with flight priority category A (ICAO Annex 6).



MAYDAY MAYDAY
MAYDAY FUEL (name of
station addressed where
appropriate and time
permits) BIGJET 347

Termination of Distress Communications and of RTF Silence

- 8.33 When an aircraft is no longer in distress it shall transmit a message cancelling the emergency condition.



Milthorpe Tower, G-BJRD,
cancel MAYDAY, engine
restarted, runway in sight.
Request landing



G-RD, runway 35,
surface wind 320 6,
cleared to land



Runway 35 cleared to
land, G-RD

- 8.34 When a distress incident has been resolved, the station which has been controlling the emergency traffic will transmit a message indicating that normal working may be resumed.



All stations, Milthorpe
Tower, distress traffic
ended

Chapter 9: Miscellaneous Phraseology

Other Communications

Wake Turbulence

- 9.1 ATC will provide the appropriate separation between IFR flights. When instructions are issued to regain wake turbulence separation, the controller shall use the following phraseology to make this apparent to the pilot.



G-BJCD, for wake turbulence separation turn left heading 270 degrees



Turning left heading 270 degrees, G-BJCD

- 9.2 If a pilot elects to execute a visual approach, or is arriving as a VFR flight, it is their responsibility to ensure an adequate distance from the preceding aircraft, although ATC will pass the appropriate distance.



G-BJCD, caution wake turbulence the recommended distance is (number) miles



G-BJCD

- 9.3 For departing flights ATC will issue take-off clearance when the required wake turbulence separation minima will be achieved. The minima to be applied at the time the aircraft are airborne is dependent on aircraft sequence, wake turbulence categories, and runway departure configuration.



G-BJCD, Ready



G-BJCD, Hold position, (number) minutes delay due to wake turbulence



Holding, G-BJCD

Reporting of Unnotified Small Unmanned Aircraft Activity

- 9.4 Any reports of unnotified small, unmanned aircraft activity should follow a format similar to that used for activities such as bird reports or windshear and ATS personnel should use the descriptor of the aircraft as provided by the individual making the report. Furthermore, in the absence of updated information (including confirmation of the cessation of such activity), any such reports should continue for up to 30 minutes after the initial report.



Kennington Approach
BIGJET 347



BIGJET 347, Kennington
Approach, pass your
message



BIGJET 347, I am visual
with (Pilot description)
which is approximately/
overhead/at (location)
and appears to be/is at
(height)



BIGJET 347, Roger



All stations (or specific
callsign(s) which may be
affected by the activity)
(Pilot description) is
reported approximately/
overhead/at (location)
and appears to be/is at
(height)...

Sailplane Operations

9.5 UK Reg (EU) No 923/2012 Article 2(117) states that the term 'sailplane' ('glider' is often used as an alternative term for a 'conventional' sailplane) can refer to conventional or powered sailplanes, hang gliders, paragliders and other comparable craft. Sailplanes have different capabilities from powered aircraft which gives rise to a number of specific terms which have the meaning below.

Word/Phrase	Meaning
THERMAL / THERMALLING	The sailplane is circling in a zone of rising air of limited area, typically over an area around ½ NM wide and often below cumulus clouds, to maintain or gain altitude
CLIMBING IN WAVE	The sailplane is climbing in 'wave lift' and its path may form an extended racetrack
LANDING OUT	The sailplane is unable to continue with soaring flight and must land somewhere other than at a recognised aerodrome; it is not considered to be an emergency

- 9.6 A sailplane's flight path may deviate around a straight-line route to take advantage of lift and avoid sink and altitude may vary significantly. A sailplane pilot may also seek to exploit a source of thermal lift in a specific location which lies within controlled airspace, or an aerodrome traffic zone (ATZ). The flight characteristics of sailplanes can thus present unique challenges to ATS in responding to requests to transit control zones and ATZ and cross airways.
- 9.7 Sailplane pilots seeking a clearance to transit a control zone (CTR) or cross an airway should use the RTF phraseology detailed in CAP 413 paragraphs 6.71 and 7.16 respectively, modified as follows to account for the aircraft's characteristics. Pilots need to be aware that, in issuing a clearance, controllers may need to issue a more restrictive clearance than that requested. Pilots unable to comply with the more restrictive clearance should utilise the RTF phraseology detailed in CAP 413 paragraph 2.72.
- 9.8 Sailplane pilots seeking a clearance to transit or cross controlled airspace or permission to transit an aerodrome traffic zone shall make their request to the appropriate ATSU. In making their request, pilots should expect that their altitude may vary significantly and consider the best means of describing their level and intended track or heading during the transit/crossing, taking into account the meteorological conditions. Implicit within such a request is that the flight path may deviate around the straight-line route by around 30° or 2 NM to take advantage of lift and avoid sink.



Greenfield Approach, Glider G-ABCD, request basic service and zone transit



Glider G-ABCD, Greenfield Approach, pass your message



Glider G-ABCD, from Seaton to Seaton, overhead Selden, altitude 4 000 feet Wessex 998 hectopascals, VFR, request zone transit on a southerly track at altitude 5000 feet or below. Negative transponder



Glider CD, Basic Service, Greenfield QNH 1002, report 5 miles from Hampton



Basic Service, QNH
1002, wilco, Glider CD



Glider CD 5 miles from
Hampton



Glider CD, cleared to
cross the Greenfield
Zone on a southerly track
remaining east of
Hampton, VFR, at
altitude 5000 feet or
below Greenfield QNH
1002



Cleared to cross the
Greenfield Zone on a
southerly track remaining
east of Hampton, VFR, at
altitude 5000 feet or
below Greenfield QNH
1002, Glider CD

9.9 Pilots need to be aware that, in issuing a clearance, controllers may need to issue a more restrictive clearance than that requested.



Wrayton Control, Glider G-
ABCD, request airway
crossing



Glider G-ABCD, Wrayton
Control, pass your
message



Glider G-ABCD, from
Borton to Borton, 20
miles north of Borton,
track 220 degrees, FL80,
VFR, request crossing of
airway E7 at Wicken
between FL90 and FL70
at 1430



Glider CD, cleared to cross E7 at Wicken, between FL90 and FL70. Maintain track 220 degrees. Report entering the airway



Cleared to cross E7 at Wicken between FL90 and FL70, maintaining track 220 degrees, wilco, Glider CD

- 9.10 Glider pilots may seek to exploit a source of thermal lift within controlled airspace. Pilots and ATS personnel should use features detailed on the 1:500000 Aeronautical Chart to describe the location required for thermalling.



Greenfield Approach, Glider G-ABCD, request basic service and zone entry for thermalling



Glider G-ABCD, Greenfield Approach, pass your message



Glider G-ABCD, from Seaton to Seaton, overhead Selden, altitude 3 500 feet Wessex 1019, VFR, request zone entry to thermal 1 mile north of Hampton



Glider CD, Basic Service, Greenfield QNH 1020, report 5 miles from Hampton



Basic Service, QNH 1020, wilco, Glider CD



Glider CD 5 miles from Hampton



Glider CD, cleared to enter the Greenfield Zone at Hampton to thermal, remain east of Hampton and south of Hartfield village, VFR, below altitude 6 000 feet
Greenfield QNH 1020



Cleared to enter the Greenfield Zone to thermal, remaining east of Hampton and south of Hartfield village, VFR, below altitude 6 000 feet
Greenfield QNH 1020,
Glider CD

Wind Shear

- 9.11 When wind shear is forecast or is reported by aircraft, ATC will warn other aircraft until such time as aircraft report the phenomenon no longer exists.



G-CD, at 0745 a departing B757 reported windshear at 800 feet. Airspeed loss 20 knots, strong right drift

AIRPROX Reporting

- 9.12 An AIRPROX Report should be made by any pilot flying in the UK FIRs, the Upper Flight Information Region or Shanwick Oceanic Area when in their opinion, the distance between aircraft as well as their relative positions and speed have been such that the safety of the aircraft involved was or may have been compromised.
- 9.13 The initial report is made by RTF to the ATSU in communication with the aircraft except that if the controllers' workload is such that they are not able to accept the report the pilot will be requested to file details after landing.
- 9.14 The Pilot's RTF report should commence with words 'AIRPROX REPORT' and should include the following items:
1. aircraft callsign;
 2. SSR Code;
 3. position of AIRPROX;

4. aircraft heading;
5. flight level, altitude or height;
6. altimeter setting;
7. aircraft attitude (level/climbing/descending/turning);
8. weather conditions;
9. date and time (UTC) of the AIRPROX;
10. description of other aircraft;
11. first sighting distance; and
12. details of flight paths of reporting and reported aircraft.

9.15 RTF AIRPROX reports are to be confirmed in writing within seven days of the incident to allow follow up action to be taken (See UK AIP ENR Section).

Oil Pollution Reporting

9.16 Pilots sighting substantial patches of oil are requested to make reports by RTF to the ATSU with whom they are in communication or the appropriate FIS in order that action can be taken. The RTF reports should contain the following:

1. 'OIL POLLUTION REPORT' or 'POLLUTION REPORT';
2. time and date (if required) pollution was observed and identity of reporting aircraft;
3. position and extent of pollution;
4. tide, windspeed and direction;
5. weather conditions and sea state;
6. characteristics of pollution;
7. name and nationality or description, including any distinctive markings, of any vessel seen discharging oil or other harmful substances; also estimated course and speed of vessel and if pollution is observed ahead of the discharging ship and the estimated length of pollution in their wake;
8. identity of any other vessels in the immediate vicinity;
9. whether photographs were taken.

Interceptions by Military Aircraft

9.17 Pilots are warned that should they become involved in an interception by military aircraft they should follow the international procedures as detailed in the UK AIP ENR Section.

Aircraft Operating Agency Messages

Introduction

9.18 An aeronautical radio station which is licensed and established for company operational control communications (OPC) may be used only for communication with company aircraft or aircraft for which the company is the operating agency. A radio operator's certificate of competence issued by the UK CAA is not required for the use of this radio station.

Limitations

9.19 Personnel authorised to use an aircraft operating agency radio must not hold themselves out as providing an air traffic control service, i.e. they must not pass instructions to aircraft which could be construed in any way to be such a service. Flight safety messages must be confined to messages originated by the agency which are of immediate concern to an aircraft in flight or just about to depart. This may include meteorological information.

9.20 Aircraft operating agency radio stations may only transmit and receive flight regularity and flight safety messages.

9.21 Air traffic service units using direct pilot-controller communication channels shall only be required to handle flight regularity messages provided this can be achieved without interference with their primary role and no other channels are available for the handling of such messages.

Flight Regularity Messages

9.22 Flight regularity messages comprise the following:

1. Messages regarding the operation or maintenance of facilities essential for the safety or regularity of aircraft operation;
2. Messages concerning the servicing of aircraft;
3. Instructions to aircraft operating agency representatives concerning changes in requirements for passengers and crew caused by unavoidable deviations from normal operating schedules. Individual requirements of passengers or crew are not admissible in this type of message;
4. Messages concerning non-routine landings to be made by the aircraft;
5. Messages concerning aircraft parts and materials urgently required;
6. Messages concerning changes in aircraft operating schedules.

Flight Safety Messages

9.23 Flight safety messages shall comprise the following:

1. Movement and control messages (e.g. flight plans, clearances);

2. Messages originated by an aircraft operating agency, or by an aircraft, of immediate concern to an aircraft in flight;
 3. Meteorological advice of immediate concern to an aircraft in flight or about to depart (individually communicated or for broadcast);
 4. Other messages concerning aircraft in flight or about to depart.
- 9.24 It is permissible for aircraft operating agency messages to be handled by the aerodrome communication facility provided this can be achieved without interference with its primary role and no other channels are available for the handling of such messages.
- 9.25 Public correspondence messages are not permitted on VHF frequencies in the aeronautical mobile service.

Use of ATS Frequencies for Aircraft Operating Agency Messages

- 9.26 When requested by a company representative, controllers may transmit specific operational messages to aircraft subject to normal air traffic service requirements and shall prefix the transmission "Company advise/request...". When passing such messages the controller must ensure that doing so will not compromise the safe provision of an air traffic service and such messages should not be passed when they could act as a distraction to pilots during critical phrases of flight.
- 9.27 Where messages of a technical and complicated nature are involved it may be found advisable to permit direct speech between the originator of the message and the pilot. In such cases the company's representative may be permitted to use the RTF themselves provided that their identity is announced before the message is passed and that the controller continues to monitor the frequency.
- 9.28 A message affecting the safety of an aircraft in flight, e.g. bomb warning, suspected damage to the aircraft etc., is to be passed to the commander immediately using the company representative's precise wording. An abbreviation or précis could be misunderstood and lead to a wasteful operation or even a dangerous situation.
- 9.29 Prolonged company messages could prevent controllers from providing a safe air traffic service and the use of a discrete frequency for the passing of such messages should be considered.

8.33 kHz Phraseology

9.30 As a solution to severe VHF spectrum congestion, ICAO has split the VHF communications band from 25 kHz to 8.33 kHz channel spacing.

9.31 The following phraseology shall only be used when referring to 8.33 kHz channels to request the capability of the radio equipment:



BIGJET 347, confirm eight point three three



BIGJET 347, affirm eight point three three

or,



BIGJET 347, negative eight point three three

9.32 To request UHF capability:



BIGJET 347, confirm UHF



BIGJET 347, affirm UHF

or,



BIGJET 347, negative UHF

9.33 To request the status regarding exemption:



BIGJET 347, confirm eight point three three exempted



BIGJET 347, affirm eight point three three exempted

or,



BIGJET 347, negative eight point three three exempted

9.34 To indicate that a certain clearance is given because otherwise a non-equipped aircraft would enter the airspace of mandatory carriage.



BIGJET 347, (Clearance/
Instruction) Due eight point
three three requirement

Operations by Aircraft deploying Brake Chutes

- 9.35 Some military and ex-military aircraft may use brake chutes to slow the aircraft on landing; this procedure is known as streaming. When the pilot deploys the equipment, a small parachute should inflate and trail from the back of the aircraft, thereby slowing its landing run. When the aircraft has slowed sufficiently and is under control, the pilot will jettison the brake chute to detach it from the aircraft.
- 9.36 It is important that pilots who intend to deploy a brake chute advise the aerodrome staff so that appropriate ground procedures can be put in place in order to reduce the flight safety hazard posed to other aerodrome users. Additionally, in certain circumstances, a brake chute may fail to deploy correctly, and it is important that, where possible, the pilot is advised of the failure.
- 9.37 Operations by military and ex-military aircraft that use brake chutes commonly take place at aerodromes with FISO or AGCS. The following examples show the phraseology suitable for use by personnel providing FISO, AGCS or aerodrome control.
- 9.38 When the aircraft is downwind or on final to land, the pilot should advise the aeronautical radio station if they intend to deploy the brake chute using the word 'stream' or 'streaming' to indicate that the chute will be deployed.



Wrayton Information,
Redship 1, downwind to
land and stream



Redship 1, Wrayton
Information, Roger, report
final

- 9.39 If there is any doubt about the pilot's intentions, the aeronautical radio station should ascertain whether or not the pilot intends to deploy a brake chute.



Redship 1, confirm
streaming



Redship 1, affirm
streaming

- 9.40 To ensure that other pilots using the aerodrome are aware of the intention to stream, an all-stations broadcast may be made as follows:



All Stations, Wrayton
Information, aircraft on final
will be deploying a brake
chute

- 9.41 On landing, it is important that, where possible, the pilot is kept informed if the chute does not deploy in the correct manner. The following phraseology may be used according to the situation:

"Callsign streamed and candled"	To be used when the chute is seen to deploy but fails to inflate.
"Callsign negative stream"	To be used when the chute fails to deploy.

NOTE: Pilots must be aware the ATS will not always be able to advise the malfunction of a chute and that the pilot remains responsible for the safety of the aircraft.

- 9.42 Unless otherwise instructed, or where there is a designated area for jettisoning the chute, the pilot should jettison the chute at a suitable location, taking account of the wind speed and direction, preferably when the aircraft has vacated the runway. The term 'drop' or 'dropping' should be used in communications relating to jettisoning the chute as shown in the examples below.



Redship 1, dropping the chute now



Redship 1, Roger

or,



Redship 1, vacate via link Charlie and drop the chute after passing holding point C3



Vacate via link C and drop the chute after passing holding point C3, Redship 1

Freezing Orders

- 9.43 A freezing order is a court order, which prevents a defendant from removing assets from the UK and thus the jurisdiction of the court.
- 9.44 Where an aircraft subject to a Freezing Order is being provided with an air traffic service, controllers/FISOs should inform the pilot that the aircraft is prohibited from leaving the UK and request the pilot's intentions. The transmission is to be made irrespective of whether the aircraft is conducting an internal UK or an international flight.



BIGJET 347, you are subject to a Court Order prohibiting your aircraft from leaving the United Kingdom, request your intentions

CPDLC Failure

- 9.45 In the event of a CPDLC failure, the controller will advise pilots and issue instructions as necessary.



All stations, Metro Ground,
CPDLC failure, standby for
Metro Delivery 118.950

- 9.46 Additionally, when the CDA detects a CPDLC failure, the controller will contact the aircraft using voice, inform the crew.



BIGJET 347 Disregard
CPDLC [message type]
message, break, [correct
clearance or instruction]

Crews are requested to respond 'unable' if the message remains unanswered. This closes the message dialogue and ensures that messages do not trigger time out alerts.

Aerodrome Emergency Services

- 9.47 Changes in the level of rescue and firefighting service (RFFS) protection normally available at an aerodrome will be notified by the Aerodrome Operator to the appropriate ATSU to enable the necessary information to be provided to arriving and departing aircraft.

- 9.48 ATS units shall ensure that flight crew are notified of unplanned reductions in the RFFS category, as advised by the Aerodrome Operator, either via ATIS or directly by RTF. On receipt of such information, flight crew will decide whether to continue their flight or to divert. Normal ATS and clearances will be provided in response to flight crew intentions.



G-ABCD, Message from the
Aerodrome Operator, rescue and
firefighting services reduced to
category (number)



G-ABCD, Message from the
Aerodrome Operator, rescue and
firefighting services reduced to
category (number)

Radio Mandatory Zones

- 9.49 A Radio Mandatory Zone (RMZ) is airspace of defined dimensions wherein the carriage and operation of suitable/appropriate radio equipment is mandatory (SERA.6005(a) refers). RMZ airspace is to be operated in accordance with the regulations pertaining to the background airspace classification.
- 9.50 Flights operating in airspace designated as a RMZ by the CAA, shall establish two-way communication before entering the RMZ and maintain a continuous air-ground voice communication watch, as necessary, on the appropriate communication channel, unless in compliance with alternative provisions prescribed for that particular airspace by the ANSP. If unable to establish two-way radio communication with the designated ANSP the pilot is to remain outside the RMZ.
- 9.51 Two-way communication is considered to have been achieved once the pilot has provided at least the following information on the appropriate communication channel:
1. callsign;
 2. type of aircraft;
 3. position;
 4. level;
 5. flight rules;
 6. intentions of the flight; and
 7. has received acknowledgement from ATS.
- 9.52 Where aircraft are based at aerodromes or operating sites located within a RMZ and radio communications are not possible either prior to getting airborne, or at all, pilots of such flights are directed to:
1. Seek to agree letters of agreement with the ANSP describing alternative provisions for compliance; and,
 2. Establish two-way radio communications (where appropriate) at the earliest opportunity after take-off.
- 9.53 The pilot of an aircraft that wishes to operate in a RMZ without the necessary radio equipment must operate in accordance with conditions promulgated for the specific RMZ or in accordance with agreed tactical arrangements with the ANSP. If a pilot is unable to make such tactical arrangements, they are to remain outside the RMZ, unless in an emergency.

Chapter 10: Military Specific Phraseology

Military Specific Phraseology

- 10.1 This Chapter details Military Specific Phraseology for specific use by military controllers, civil licensed controllers at military aerodromes and military aircrew. The RTF described in this Chapter is complementary to NATO STANAG 3817. It is also complementary to the remainder of CAP 413, as it either differs from civil phraseology or there is no equivalent civil phraseology, e.g. in the case of arrestor system procedures.
- 10.2 Civil pilots visiting military aerodromes will be expected to be aware of the military phraseology in Chapter 10 and to comply with such instructions as may be issued by military controllers during their visit. Where relevant, cross references from the remainder of CAP 413 to the equivalent military phraseology are provided for the assistance of civil pilots visiting military aerodromes.

Military Variances to Chapter 2

Transmission of UHF Channels

- 10.3 Supplementary to guidance detailed in Chapter 2, UHF channels are separated by 25 kHz and are to be passed using only the first 5 figures as follows:

Frequency	Transmitted as	Pronounced as
332.000	Three three two decimal zero zero	TREE TREE TOO DAY-SEE-MAL ZE-RO ZE-RO
332.025	Three three two decimal zero two	TREE TREE TOO DAY-SEE-MAL ZE-RO TOO
332.050	Three three two decimal zero five	TREE TREE TOO DAY-SEE-MAL ZE-RO FIFE
332.075	Three three two decimal zero seven	TREE TREE TOO DAY-SEE-MAL ZE-RO SEVEN

Transmission of Time

- 10.4 Supplementary to guidance detailed in Chapter 2, when aircraft check the time with the appropriate Military ATS unit, the time checks shall be given to the nearest half-minute, or to the second on request.

Standard Words and Phrases

10.5 Supplementary to guidance detailed in Chapter 2, the following additional or amended standard words and phrases shall be used.

Table 2

Continue with	Used either when it is known that an aircraft has already established contact with another unit or when pre-notification of details has been passed to the receiving controller, but no radar handover has taken place
Contact	Used when a radar handover has taken place between ATSU's
Spell	Spell portion indicated phonetically

Communications

10.6 Units utilising Automatic Terminal Information Service (ATIS) may accept the information coded letter, as transmitted by the pilot, as acknowledgement that the information contained in that code has been received and understood. ATC units employing ATIS codes are to implement procedures to ensure that information transmitted on ATIS is correct and cross-checked for accuracy by a controller or ASOS.

Transponder Phraseology

10.7 In addition to the phraseology shown in Chapter 5, military controllers are to use the following RTF phraseology when using instructions for the use of transponders: ... (Callsign) (plus following phrase as appropriate).

Table 3

CONTROL TO AIRCRAFT	MEANING
Squawk emergency or Squawk 7700 (see Note)	Select 'EMERGENCY'

NOTE: Squawk MAYDAY is specified by some nations. See Chapter 5 for civil usage. RTF Failure and Hijack squawks are to be specified by code, e.g. squawk 7600 and squawk 7500 respectively.

Military Specific Procedures (Control of Aircraft)

NATO Standard Visual Circuit Procedures

10.8 Information on NATO standard visual circuit procedures is contained in STANAG 3297. For the convenience of civil pilots landing at military aerodromes, basic information on the military visual circuit is also included in Chapter 11 under Flight in the Military Visual Circuit.

Weather and Aerodrome Information

- 10.9 At aerodromes where ATIS is installed, all weather and aerodrome information transmissions are to be prefixed with a letter code. The letter code is to start with the letter of the alphabet coincident with the first weather issued for the day. Each subsequent weather issued is to be assigned the next letter of the alphabet including 'Met Specials'. The letters I, O, Q and Z are not to be used. If all letters are used in the course of a day/night, then the alphabet is to be started again from the beginning. Pilots are to quote letter of weather and aerodrome information received on initial contact with each appropriate ATC element. Additionally, before taxiing or joining a visual circuit, the pilot is to confirm the runway information they have received. Where ATIS procedures do not apply, weather and aerodrome information may be passed to aircraft either in full or abbreviated. Abbreviated information is only to be passed if colour code is better than green. Additional details such as flying phase, recovery states and fuel states may also be added according to aerodrome requirements.
- 10.10 The long weather and aerodrome information is to be passed in the following order and format:
1. aerodrome letter/code.
 2. time.
 3. runway in use.
 4. surface wind.
 5. colour state.
 6. visibility.
 7. general weather observations (when applicable, e.g. fog, rain).
 8. cloud levels and amounts.
 9. temperature.
 10. altimeter setting.
 11. runway condition reading (RC)/runway visual range (RVR) (if applicable).
 12. unserviceable aids/facilities (as appropriate).
- 10.11 The short weather and aerodrome information is to be passed in the following order and format:
1. aerodrome letter/code.
 2. time.
 3. runway in use.

4. surface wind.
5. colour state.
6. altimeter setting.
7. unserviceable aids/facilities (as appropriate).

10.12 Some emergency, civil or non-British military aircraft may wish to fly in accordance with different pressure setting procedures. If a pilot requests the use of QNH during the final approach the controller may omit QFE and substitute QNH and elevation in appropriate messages.

Use of Runway Designators

10.13 Controllers at military aerodromes may omit the runway designator for take-off, landing, low approach and touch and go clearances where no potential for misunderstanding exists.

Cancellation of Take-Off

10.14 At variance to Chapter 4, if the aerodrome controller is aware of a potential hazard to an aircraft about to start its take-off run, the controller is to instruct or signal the aircraft to hold. If the aircraft has already started its take-off run, the controller is to inform the aircraft of the hazard; it is then the captain's responsibility to decide the best course of action as it may be more dangerous to abort than to proceed.

Phraseology for Joining the Visual Circuit/Pattern

10.15 The terms circuit and pattern are interchangeable. A join through the Initial Point is an alternative to other ICAO joining procedures for the visual circuit/pattern. It may include a break (pitch) from a point on the deadside in order to make a continuous circle onto final approach or to conduct a standard circuit turn on to downwind leg. This could be determined by aircraft type and/or other circuit traffic with which the joining aircraft has to integrate. There may also be occasions where ATC issues additional positioning instructions to aid sequencing with other traffic. The visual circuit pattern direction shall be left-handed unless otherwise stated. For a diagram of a military visual circuit see Chapter 11 Figure 30.

When ideally 3 to 5 mins from the aerodrome or initial point




Markston Tower, VYT 21,
10 miles east, request initial
for runway 05, information
Bravo





VYT 21, Markston Tower,
join, 2 in

 Join, V 21


If no current ATIS code is passed, the controller shall supply relevant information.


 Markston Tower, VYT 21,
10 miles east, request initial
for runway 05

 VYT 21, Markston Tower,
join runway 05,
QNH/QFE 1015, 2 in

 Join runway 05,
QNH/QFE 1015, V 21

If pre-noted to Tower


 Markston Tower, VYT 21,
request join, information
Bravo

 VYT 21, Markston Tower,
join, 2 in

 Join, V21


At initial point


 V 21, initial [for the break]


 V 21, one upwind, one
downwind


The examples for joining the visual patterns are not exhaustive and it should be noted that once inside the initial point, local sequencing procedures may be applied. Where these are being used the procedures and detailed phraseology will be included in local orders.

On the Break

 V 21, [on the] break [to]
land

 V 21, one ahead, surface
wind, 320 5 knots

 V 21, [on the] break [to]
touch and go

 V 21, one ahead, surface
wind, 320 5 knots



V 21, [on the] break [to] low approach



V 21, one ahead, surface wind, 320 5 knots

'On the break' is equivalent to a downwind call.

Landing Gear Position

10.16 Pilots of aircraft with retractable landing gear shall report the gear position as part of the request for an ATC clearance to use a runway. If the position of the landing gear is not passed at the appropriate point or is required to be checked by the controller then a simple request will be issued.



V21 Final, gear down or



V 21, cleared to land



V21 Final, three greens *



V 21, cleared to land

Where a check of the landing gear is required, the following phraseology is used:



V21, final*



V21, check gear down



gear down, V21

or



Three greens**, V21



V 21, cleared to land

* Controllers are to give Tilt Rotor aircraft the following clearance only when operating in the visual circuit "Callsign...with your gear down...clearance."

** Or the appropriate number of greens from aircraft that are not equipped with conventional retractable tricycle undercarriage (e.g. BBMF, A380 and B747).

Calibrator Aircraft

10.17 While Calibrator aircraft are carrying out equipment checks at military airfields they may be cleared to fly through gear using the following phraseology.

Talkdown Controller



(range) miles,
CALIBRATOR fly through
gear up

Aerodrome Controller



CALIBRATOR, cleared to
fly through gear up (circuit
state) barrier (state if
required)

Arrestor System Procedures and Phraseology

10.18 All landing and take-off clearances are to include advice on the status of the arresting system. The status can be as follows.

Cables:

UP – the cable is raised on rubber rings often referred to as grommets or doughnuts, or on automated raising systems. In this position the cable is ready for engagement.

DOWN – the cable is lowered and normally lying flat on the runway or in a slight recess. The cable cannot be engaged in this position.

DERIGGED – the cable has been physically removed from the runway and will take an extended period of time before it could be ready for an engagement.

'Approach Cable' refers to an arrestor cable in the first half of the runway, normally a short distance beyond the threshold in the direction of landing.

'Centre Cable' refers to an arrestor cable that is positioned approximately at the mid-point of the runway.

'Overrun Cable' refers to an arrestor cable that is in the latter half of the runway in the direction of landing, normally prior to the upwind threshold.

Barrier:

UP – the barrier is in the raised position and ready for an engagement.

DOWN – the barrier is in the lowered position but could be raised on request.

UNSERVICEABLE – the barrier system is not available.

- 10.19 The position of a cable, in distance from the approach end threshold rounded to nearest 100 ft is to be given to aircraft unfamiliar with the aerodrome. When barrier position and/or cable state is as published in FLIPs, reference to them is normally omitted to aircraft based at the aerodrome. Reference to cable state is normally omitted to visiting aircrew that are familiar with the aerodrome. A pilot may require a change to arrestor system positions and will normally try to warn of an imminent engagement.
- 10.20 An airborne aircraft requesting an engagement will provide as much of the following information as possible:
1. callsign and type of aircraft.
 2. nature of emergency.
 3. the arresting system they are intending to engage.
 4. estimated time to landing in minutes.

In addition, except for short or no notice engagements, the pilot should report “Hook Down” as part of the final call. If the controller does not receive the hook down call, a check will be requested.



Rider 1, final, gear down



Rider 1, check hook down



Rider 1, gear and hook down

- 10.21 On receipt of a request from an airborne aircraft, the controller is to:
1. Advise the pilot of the serviceability state of the preferred arresting system;
 2. If necessary, advise of the time that the arresting system will become available;
 3. fuel remaining;
 4. Alert the Crash/Rescue Crew to an appropriate readiness state.
 5. Pass normal landing information;
 6. And once the engagement has occurred, obtain the aircraft weight and engagement speed;

- 10.22 After a successful engagement, the pilot will not taxi the aircraft until the ground/recovery party has signalled the aircraft can commence taxi and a clearance to do so has been obtained from ATC.
- 10.23 Following an engagement, the runway shall be declared “black” until the team leader of the recovery crew ensures that the runway has been vacated. The following conditions are to be satisfied prior to informing ATC:
1. no personnel, equipment or vehicles are within the confines of the runway or are required to cross the runway to vacate the area.
 2. the arresting system has been returned to a serviceable state, a battery position, removed from the runway or declared as unserviceable.

The ATC Supervisor will then declare the runway open.



Rider 1, final, gear down



Rider 1, cleared to land, approach cable down, overrun cable up, barrier up



Cleared to land, Rider 1

The following phraseology will normally be used by pilots to indicate an intent to utilise an arrestor system at short notice.



Rider 1, barrier, barrier, barrier



Rider 1, barrier up



Rider 1, cable, cable, cable



Rider 1, overrun cable up

Requests for information on arrestor systems and/or to change the status of an arrestor system.



Rider 1, request barrier state



Rider 1, barrier down



Rider 1, request raise the barrier



Rider 1, barrier up

Phraseology for Fixed-Wing SVTOL Operations

10.24 The following terms are used for VTOL operations:

Table 5

Slow landing	A landing between <u>60 KCAS-150 KCAS using a normal ground roll. STOVL mode using intermediate nozzle position (normally 65°) with power nozzle braking available</u>
RVL	Rolling vertical landing. A steeper, slower approach (<u>50 GS – 130 KCAS</u>) followed by an abbreviated ground roll and, normally, no power nozzle braking
Translate	A phrase used to cover largely jetborne flight over short distances between different landing areas
Press-up	Vertical take-off and landing on the same pad without transition to wingborne flight
Pad	An area of concrete for vertical take-off and landing, the surface of which can withstand nozzle blast
Mexe	A metal pad constructed of prefabricated interlocking aluminium strips in the shape of a circle or square, the surface of which can withstand nozzle blast

10.25 Pilots of SVTOL aircraft should be aware that the terms above may not be in regular use at aerodromes that do not operate SVTOL aircraft. Therefore, pilots should anticipate that the terms may not be understood by ATC. In such circumstances pilots of SVTOL aircraft are to revert to standard NATO procedures and phraseology for standard circuits/patterns.

Suspecting Hypoxia in Aircrew

10.26 If a Controller suspects that the pilot of an Aircraft is suffering the effects of hypoxia, they are to attempt to make the pilot aware of their condition by transmitting, with appropriate urgency:



Oxygen! Oxygen! Oxygen!
Descend below 10,000ft*

* Or the required altitude in accordance with AP 3458 – Aircraft Emergency Reference Cards.

Flameout/Engine Failure – Aerodrome Phraseology

- 10.27 In a real flameout or engine failure situation the appropriate emergency message will be passed by the aircraft along with the statement of intent for a flameout recovery. The phraseology to be used when an ATS surveillance system is available to the controller is detailed in this Chapter under Radar PFL.

Once visual with the aerodrome the pilot will position for High Key.



Raider 21, High Key
(intentions)



Raider 21, one ahead,
surface wind 230 10
knots

- 10.28 On some occasions the aircraft may be forced to position straight to Low Key in which case the High Key call will be missed.

- 10.29 If a PFL/Flameout/Engine Failure call is made direct to an Aerodrome Controller who is not equipped with an ATS surveillance system, then a heading will not be given, the aircraft shall be instructed to join, passed aerodrome information if required and told to report High Key from where the phraseology above shall be used.



Raider 21, Low Key



Raider 21

PAR Phraseology

- 10.30 Whilst positioning for the approach:



Gauntlet 25, vectoring for
PAR runway 23, procedure
minimum (number) feet



Gauntlet 25, (number)
feet, touch and go for
further

Initial contact to Talkdown controller.



Markston, talkdown,
Gauntlet 25



Gauntlet 25, Markston
talkdown, identified 8
miles, read back
QNH/QFE



1015 set, Gauntlet 25



Do not acknowledge further instructions unless requested

Glidepath information during the approach and final stages of the approach.



Well left of centreline, approaching descent point



Begin descent now for a (number) degree glidepath*



Slightly above/below glidepath correcting nicely/ slowly/rapidly



Well above/below glidepath not correcting



Dangerously below glidepath, acknowledge



Roger, Gauntlet 25

* The instruction "Do not acknowledge further instructions unless requested" can be added to this instruction if it has not previously been passed.

Reporting of aircraft position in relation to the extended runway centreline, which may follow a turn instruction if appropriate or can be used in isolation.



Well left of centreline



Left of centreline



Slightly right of centreline



Right of centreline



On centreline

General position information.



(Number) miles [from
touchdown]

A gear check should be conducted at an appropriate point on the approach, prior to obtaining a clearance from the Aerodrome controller, which should then be acknowledged by the pilot.



(Number) miles, check gear
acknowledge



Gear down, Gauntlet 25



(Callsign) cleared to
(intentions), (circuit state),
(any additional information)
acknowledge



(intentions), (callsign)

Final stages of the approach.



Approaching decision
height



Passing decision height



Gauntlet 25, approach
completed continue with
Markston tower, Stud xx
(insert local stud number)





Gauntlet 25, changing to
(appropriate stud or
frequency)





PAR Azimuth Only/SRA Phraseology

10.31 When PAR is not available, the surveillance system may be used to carry out a non-precision Surveillance Radar Approach (SRA). Using this procedure, or when practicing for it (PAR Azimuth Only), the controller passes instructions and information to the pilot to enable them to follow a pre-determined approach path to a position from which a visual landing or circuit can be made.

Whilst positioning for the approach.




	Gauntlet 25, PAR Az Only/ SRA runway 23, procedure minimum (number) feet		Gauntlet 25, (number) feet, touch and go for further
---	--	---	--

Initial contact to Talkdown controller.

	Markston, talkdown, Gauntlet 25		Gauntlet 25, Markston talkdown, identified 8 miles, read back QNH/QFE
			1015 set, Gauntlet 25
			Do not acknowledge further instructions unless requested

Centreline information during the approach.

10.32 Reporting of aircraft position in relation to the extended centreline, which may follow a turn instruction if appropriate or can be used in isolation.

	Well left of centreline
	Slightly right of centreline
	Right of centreline



On centreline



Approaching descent point



Begin descent now for a
(number) degree glidepath*



(number) miles, (number)
feet**

* The instruction "Do not acknowledge further instructions unless requested" can be added to this instruction if it has not previously been passed.

** Advisory information to be given at ½ NM intervals

A gear check should be conducted at an appropriate point on the approach, prior to obtaining a clearance from the Aerodrome controller, which should be acknowledged by the pilot.



(Number) miles, check gear
acknowledge



Gear down, Gauntlet 25

Final stages of the approach.



Approaching Minimum
Descent height



Approaching Missed
Approach Point



Passing Missed Approach
Point



Gauntlet 25 approach
complete continue with
Markston tower, Stud xx
(insert local stud number)

* When the Minimum Descent Height is within ½ NM of the Missed Approach Point, the phrase 'Approaching Minimum Descent Height' is not included.

ILS Phraseology



Gauntlet 25, 2000 feet wind
(number)



Gauntlet 25, vectoring for
ILS runway 23, procedure
minimum (number) feet



Gauntlet 25, (number)
feet, touch and go for
further



Gauntlet 25, report
Localiser established,
checks complete*



Gauntlet 25, Localiser
established, checks
complete

* The instruction "Checks complete" may be omitted if already completed.

Initial contact with Talkdown controller (when conducting ATS surveillance system monitored ILS).



Markston talkdown,
Gauntlet 25



Gauntlet 25, Markston
talkdown, identified 8
miles, read back
QNH/QFE



1015 set, Gauntlet 25



Gauntlet 25, report
glidepath descending
gear down



Glidepath descending
gear down, Gauntlet 25

Final stages of the approach.



Approaching Decision Height*



Passing Decision Height*



Approaching Minimum Descent Height**



Approaching Missed Approach Point**



Passing Missed Approach Point**



Gauntlet 25 approach complete, continue with Markston tower, Stud xx (insert local stud number)

* Full ILS.

** ILS Localiser Only Procedure– (When the Minimum Descent Height is within ½ NM of the Missed Approach Point, the phrase ‘Approaching Minimum Descent Height’ is not included.)

Descent to Low Level

10.33 When a pilot requires descent below a controller’s terrain safe level, the controller should remind them of terrain responsibility as part of the approval for further descent.



Tiger 2, request descent to low-level



Tiger 2, taking your own terrain clearance, descent approved



Tiger 2, my own terrain clearance, descent approved

10.34 Controllers should also consider informing the pilot of reduced traffic information if the additional descent has surveillance coverage implications.

Jamming Phraseology

- 10.35 When an ATS unit is suffering from the effects of jamming or interference on a frequency or an ATS surveillance system, the phrases below may be used to request the jamming or interference to be stopped. If the callsign causing the jamming is not known, then the phrase “All Stations” can be used or the generic callsign ‘Hooter’ can be used on the emergency frequency 243.0 MHz.



Rider 21, cease jamming



Rider 21, jamming
ceased [at time (number)]

Speechless Procedures

- 10.36 If an aircraft loses the ability to transmit speech, pilots should adopt the speechless procedure, and all controllers should be familiar with this phraseology.
- 10.37 Before a recovery is effected, certain information common to all types of speechless emergencies is to be ascertained using the speechless code. The ● symbol denotes short carrier-wave only transmissions and a long-dash indicates a long transmission. The code uses these transmissions as follows:
- = Yes
 - ● = No
 - ● ● = Say Again
 - ● ● ● = Homing/Request Assistance
 - ● ● — = Further Emergency
- 10.38 In addition pilots will use one long transmission to indicate the requested manoeuvre or action has been completed. Controllers should be aware that giving more than one instruction at once may require subsequent yes/no type questioning to ascertain which instruction has been completed.



Speechless aircraft,
Markston Approach, do
you require recovery to
Markston?

- 10.39 If the aircraft answers no (● ●) then the controller should try to ascertain the pilot’s intentions using a questioning technique that allows yes/no answers and render what assistance they can.

If the aircraft answers yes (●).



Speechless aircraft, adopt the callsign Speechless 1*, is this a practice?

* Whilst it is unlikely the controller will be working more than one speechless aircraft at a time, it is possible. The controller should allocate numbers in sequence with the first aircraft being allocated Speechless 1 as the callsign.

Depending on the answer the controller is to then ascertain if there are any other forms of emergency.



Speechless 1, do you have any other form of [practice] emergency?

10.40 If the aircraft indicates a further emergency, then the questions in the table below should be asked in sequence moving to the appropriate column for aircraft type (once ascertained if required) if the answer to one of the main questions is no. These questions are not intended to provide an answer to all possible emergencies and controllers must be prepared to adapt to any given situation.

Table 6

Main Question	Supplementary Questions	
	Fixed Wing	Rotary Wing
Can you maintain height?	Are you flamed out? Are you short of oxygen? Are you affected by icing?	Do you have a control problem? Do you have an engine failure? Are you affected by icing?
Can you carry out a normal recovery?	Are you short of fuel? Are you asymmetric? Do you have an instrument failure? Do you have electrical failure? (see note) Do you have hydraulic failure? (see note)	Are you short of fuel? Do you have single engine failure? Do you have an instrument failure? Do you have electrical failure? Do you have hydraulic failure?
Can you carry out a normal landing?	Do you have an undercarriage problem? Do you have a brake failure? Do you intend to engage the cable? Do you require the barrier?	Do you have an undercarriage problem? Can you hover? Do you require a running landing?

NOTE: If it is established that the aircraft type is a Tornado, then controllers should ask if the aircraft has a wing sweep failure.

- 10.41 From this point, the controller should ascertain the type of recovery required, identify the aircraft and provide positioning instructions for the requested recovery procedure. It may also be necessary to ascertain whether there are any casualties on board. If the list becomes exhausted without ascertaining the emergency, then the controller may use additional questions to understand the problem but not to the detriment of providing appropriate control to recover the aircraft expeditiously. Furthermore, if the pilot indicates the aircraft has suffered a further emergency at any point beyond either the speechless emergency or any other identified through questioning, then the controllers should start the questioning process again, time and circumstances permitting.

A pilot, when calling for either an actual or practice speechless recovery, may already be receiving an ATS from the controller, which may assist identification.



Speechless aircraft, were you formerly (callsign)?

- 10.42 On transfer between controllers it is important for the receiving controller to confirm that the speechless aircraft calling them is the same one that has been transferred to them from the other controller.

The pilot will initiate contact with the receiving controller using the Homing/Request Assistance call.



Speechless aircraft, Markston talkdown, are you Speechless 1 from Markston Director?

A gear check for a Speechless aircraft must be a direct question.



Speechless 1, is your gear down?

Military Missed Approach

- 10.43 At variance to Chapter 4, a controller instructing an aircraft carrying out an instrument approach at a military unit to carry out a Missed Approach Procedure will use the following phraseology:



Gauntlet 25, execute
Missed Approach
Procedure, acknowledge



Executing Missed
Approach Procedure,
Gauntlet 25

- 10.44 Within the visual circuit, the phraseology defined within Chapter 4 is to be used. On being instructed to go around, the aircraft is to break off the approach and climb to circuit height, normally on the deadside (or as briefed, if different, at specific aerodromes).

Suspension of RTF Procedures

- 10.45 Aircraft may require to operate in a specified area or on an area of an aerodrome without making RTF transmissions that would normally be required. The request to suspend such transmissions is referred to as operating 'negative RT' and the associated phraseology is as follows:



Rotor 99, request operate
for (number) minutes
negative RT southside



Rotor 99, negative RT
approved, for (number)
minutes, remaining
southside



Rotor 99, request Ops
normal*



Rotor 99, Ops normal



Rotor 99, operate full RT



Operating full RT, Rotor
99

* The time between Ops Normal calls will be covered in local flying orders.

Formations in Trail

- 10.46 The request for conducting a trail approach shall be made as follows:



(Callsign), request trails
approach [(number) aircraft
or elements]



(Callsign), trails approach
approved

Contact Lost

10.47 The term “Contact Lost” when used by a pilot refers to a situation where one or more elements of an aircraft formation loses visual or station keeping equipment contact with one or more elements of the formation. In this instance the formation will invoke standard procedures to establish separation between the elements, and the controller must be prepared for a request to identify individual formation elements in order to provide a service and potentially pass instructions aimed at allowing the formation to rejoin. Upon losing contact within a formation, pilots may set transponder code to 7700.

Freecall and Continue With

10.48 The term “Freecall” is used by a controller to indicate to the pilot that landline communication to the next controller has not been possible prior to transfer position. The pilot should then be prepared to give full position, heading and level information to the next controller.



Ranger 22, unable to arrange a handover to Wadford, your position 10 miles east of Smallville, freecall Wadford Approach 345.67



Freecall Wadford Approach 345.67, Ranger 22

10.49 The term “Continue With” is used by a controller to indicate to the pilot that their flight details and profile have been prenoted to the next controller, but it is not possible to effect a formal radar handover.



Mission 59C, unable to arrange a handover to Wadford, your position 10 miles east of Smallville, continue with Wadford Approach 345.67



Continue with Wadford Approach 345.67, Mission 59C

Use of Unassured Aircraft Surveillance Data

10.50 Where the use of unassured Aircraft surveillance data is permitted, the following phraseology is to be used to ensure that it is clear to Aircrew that unassured aircraft surveillance data is being utilised.



Marston 25, report of traffic
(number of miles and
generic geographical
position), estimated height
(if available), glider reported
by...(additional information
as required)

Aerobatics and General Handling

- 10.51 The term “Block” can be used to describe a height band that an aircraft requires to operate in. The aircraft will subsequently manoeuvre not below the lowest specified level and not above the highest specified level. Normally, the levels will be specified in terms of flight levels.



C55, request operate in the block FL 120 to FL 190



C55, operate in the block FL 120 to FL 190

Passing the Number of Persons on Board (POB)

- 10.52 The pilot should pass the POB in accordance with local or national orders. If not passed, controllers may need to request POB from the pilot.



C55, request POB



C55, (number) POB

Clearances with an Occupied Runway

- 10.53 Where approved, in order to maintain an expeditious flow of air traffic, there are occasions when a controller may utilise clearances while the runway in use is still occupied by another aircraft. Whilst the controller is providing these clearances based on a professional assessment of the situation, it is incumbent on the pilot to make the final decision to execute the clearance. These clearances can only be used for preceding aircraft that conducted an approach and are not to be used for vehicles or aircraft crossing the active runway.



(Callsign), cleared to land [(traffic details)*]



Land, [(traffic details)], (callsign)



(Callsign), cleared touch and go, one ahead [(aircraft type**)]



Touch and go with one ahead, (callsign)

* The controller may include the aircraft type if it is considered necessary to aid clarity. Local orders may dictate how much of the approach end of the runway must be available before this clearance can be issued.

** The aircraft ahead must have commenced the acceleration stage of the Touch and Go before this clearance is issued.

Formation Clearances

10.54 Individual elements of a formation may be issued clearances to land before the preceding element has reached the runway. The formation elements are responsible for their own separation on final and are responsible for executing fast and slow lane procedures as covered in their own formation briefings and unit procedures.



(Callsign) one, final gear down [(intentions)]



(Callsign) one, cleared to land



(Callsign) two, final gear down [(intentions)]



(Callsign) two, cleared to land in turn

TACAN Specific Phraseology

Initial positioning



Markston Approach, VYT 21, 320 Markston at 25 miles heading 170, FL 110, request TACAN to ILS



VYT 21, Markston Approach, identified FL 110, own navigation to the initial approach fix, report steady with heading

10.55 The controller should ascertain whether the pilot requires to conduct any holding at the Initial Approach Fix and ask the pilot to report approaching the fix. Once the pilot makes the report the phraseology will depend on whether holding is required.

Holding required



(Callsign), approaching the fix





(Callsign), report established in the hold





(Callsign), established in the hold



(Callsign), report approaching the fix ready for the procedure


	(Callsign), approaching the fix ready for the procedure		(Callsign), clear TACAN approach, Runway (designator) QNH/QFE (number), report leaving FL (number), [two thousand foot wind (2000ft wind)]
---	---	---	--

- 10.56 If holding is not required and an immediate clearance can be issued, then the clearance phrase above can be used on the first report from the pilot. If a clearance for the procedure cannot be issued at any point. The controller may inform the pilot of the time at which an aircraft will be permitted to continue its flight or when a further clearance will be given.

	(Callsign), approaching the fix ready for the (Callsign), approaching the fix ready for the procedure		(Callsign), continue to hold, report approaching the fix
---	---	---	--




Radar PFL

Initial Call

	Markston Approach, VYT 21, (position), FL/Altitude (number), request Radar PFL
---	--

- 10.57 In a real flameout situation, the appropriate emergency message will be passed by the aircraft and a Radar Forced Landing undertaken. Identification should be as expeditious as possible, taking into account the limitations of an aircraft suffering this type of emergency.

Homing

	V 21, <u>your steer for Markston is (number) degrees</u>		<u>Steer (number) degrees, V21</u>
	V 21, identified Traffic Service, report accelerating*		



V21 Steer (number)



Steer (number), V21

* Ranges to be passed every 1 NM prior to acceleration, then every ½ NM thereafter.



V 21, turn left/right (number)
degrees heading (number)
degrees, range



Left/right heading
(number) degrees, V 21



Accelerating, V 21

Joining the Visual Circuit



V 21, report aerodrome in
sight



Aerodrome in sight, V 21



V 21, continue with
Markston Tower, stud/freq

Controlled Descent through Cloud (QGH)

10.58 Controlled descent through cloud (QGH) procedures are designed to enable a pilot, with the assistance of a ground-interpreted DF aid, to descend through cloud to a position in the vicinity of an airfield from which they can make a visual approach and landing or be positioned within the operational serve coverage of an additional navigation air for continued recovery. There are two standard controlled-descent procedures, one for jet aircraft requiring descent from high levels and the other for aircraft below FL120.



High Level QGH

Initial Call



Markston Approach,
Gauntlet 25, position
(number), FL/Altitude
(number), request QGH




Homing

	Gauntlet 25, Markston Approach, heading for Markston (number) degrees*, fly at FL (number)**		Steady heading (number) degrees, maintaining FL (number), Gauntlet 25
---	--	---	---

* QDMs or QTEs should be obtained at intervals as required to home aircraft to the overhead.

** Aircraft are to be homed at semi-circular flight levels unless local orders say otherwise.





Overhead

	Gauntlet 25, transmit for overhead		Transmitting for overhead, Gauntlet 25
			Gauntlet 25, indicating overhead, turn left/right heading (number) degrees

10.59 Two overhead indications are required (DF) to confirm aircraft overhead.

Outbound

10.60 Descent commences when trace indicates aircraft within 60° either side of ideal outbound QDM or QTE. QDMs or QTEs are checked and corrected as required on outbound leg.

	Gauntlet 25, steady heading (number) degrees		Gauntlet 25, set QFE (number) hectopascal
			QFE (number) hectopascal set, Gauntlet 25
			Gauntlet 25, descend to height (number) feet (IAH), report turning left/right at (number) feet*

* Turning height is normally half the initial approach height.

Turning Inbound



Gauntlet 25, turning left/right



Gauntlet 25, turn left/right heading (number) degrees, report steady, report approaching (number) feet (IAH)



Gauntlet 25, steady heading (number) degrees, will report approaching (number) feet

Inbound (Final Approach)

10.61 QDM checks are obtained until the aircraft is safely within the final approach area. Aircraft to be maintained within the final approach area.



Gauntlet 25, approaching (number) feet



Gauntlet 25, continue descent to MDH

or,



Gauntlet 25, maintain FL (number)

or,



Gauntlet 25, descend to height (number) feet



Gauntlet 25, report aerodrome in sight



Aerodrome in sight, Gauntlet 25

Low Level QGH



Initial Call



Markston Approach, UAS 21, position (number), FL/Altitude (number), request QGH

- 10.62 Except in emergency, if the aircraft is below the minimum safe flight level, safety height or altitude, it is not to be homed. Appropriate instructions are to be given to the pilot to climb to a safe height or altitude.




Homing

	UAS 21, Markston Approach, set heading (number) degrees, fly at FL/feet (number)*		Steady heading (number) degrees, maintaining FL/feet (number), UAS 21
---	--	---	---

* If below Transition Level, RPS to be given





- 10.63 QDMs or QTEs should be obtained at intervals as required to home aircraft to the overhead.

Overhead

	U21, transmit for overhead		Transmitting for overhead, U 21
			U 21, indicating overhead, turn left/right heading (number) degrees

- 10.64 Two overhead indications are required (DF) to confirm aircraft overhead.

Outbound

	U21, steady heading (number) degrees		U 21, set QFE (number) hectopascal
			QFE (number) hectopascal set, U 21
			U 21, descend to height (number) feet

Inbound Turn

- 10.65 The inbound turn is to be given at the end of the timed run. Turn should normally be level; however, exceptionally, a turn may be given while in the descent but a minimum of 1000 ft obstacle clearance is to be maintained.

Inbound (Final Approach)

- 10.66 QDM checks are obtained until the aircraft is safely within the final approach area, which should then be maintained.



U21, steady heading
(number) degrees



U 21, continue descent to
MDH



U 21, maintain (number)
feet, report aerodrome in
sight



U 21, report aerodrome in
sight

Flameout Spiral Descent

- 10.67 In a real flameout situation, the appropriate emergency message will be passed by the aircraft with a request for a flameout recovery (FO).

Initial Call



Markston Approach, Gauntlet 25,
position (number), FL/ Altitude
(number), request PFO

Homing



Gauntlet 25, Markston
Approach, set heading
(number) degrees, report
steady, set QNH/QFE
(number) hPa



Steady heading (number)
degrees, QNH/QFE
(pressure) hPa set,
Gauntlet 25



Gauntlet 25, pass
altitude/ height with all
transmissions



(Number) feet, Gauntlet
25



Gauntlet 25, the safety height is (number) feet*, report passing 8000 feet and 4000 feet



(Number) feet, Gauntlet 25



Gauntlet 25, this will be a left/right hand spiral from the overhead**

* Visiting aircraft are to be advised if significant high ground within 10 NM of the aerodrome.
 ** Direction of spiral should be as visual circuit in use.

Overhead



Gauntlet 25, transmit for overhead



Transmitting for overhead, (number) feet, Gauntlet 25



Gauntlet 25, indicating overhead, commence spiral left/right, report cardinal headings with height



Commencing spiral left/right, (number) feet, Gauntlet 25



Passing N/S/E/W, (number) feet, Gauntlet 25



Gauntlet 25, continue spiral

or,



Gauntlet 25, stop turn heading (number) degrees



Gauntlet 25, recommence spiral left/right



Spiral left/right, (number) feet, Gauntlet 25



Passing 8000 feet, Gauntlet 25



Passing 4000 feet, Gauntlet 25



Gauntlet 25, continue spiral, report breaking cloud



Breaking cloud, Gauntlet 25



Gauntlet 25, approaching safety altitude/height, aerodrome on your left/right, report visual

Aerodrome in sight, Gauntlet 25



Gauntlet 25, continue with Markston Tower (frequency)

No Compass / No Gyro

10.68. If a controller observes an aircraft that does not appear to be tracking as expected for the heading provided or notified by the pilot, the controller may suspect that the aircraft has suffered a compass and/ or gyro failure. Initially, the controller will confirm the heading that the aircraft is following and thereafter may invoke the No Compass/No Gyro procedure.



(Callsign), confirm heading



(Callsign), heading (heading)



(Callsign), suspect unserviceable compass and gyro. Adopt no compass no gyro procedure, make all turns rate one, start and stop turns on the executive word **now**. [Is this a practice?]



(Callsign), adopting [no compass or no gyro] procedure, this is [not] a practice

10.69 Once the procedure has been adopted turn instructions will be as follows:



(Callsign), turn [left or right]
now



Turning [left or right],
(callsign)



(Callsign), stop turn **now**



Stop turn, (callsign)

Supersonic Flight

10.70 The phrase used to approve the commencement of a supersonic run is as follows:



Gauntlet 25, cleared to accelerate,
report supersonic and subsonic








Military Aerodrome Traffic Zones (MATZ) and Penetration Services

10.71 Comprehensive details of MATZ and the associated penetration service, including controlling aerodromes, contact frequencies and hours of watch, are contained in the UK AIP ENR Section, AICs, AIP Supplements or System NOTAM.


10.72 While every effort will be made to ensure safe deconfliction, some civil aircraft flying within the MATZ may not be known to controllers and therefore pilots should keep a careful look-out at all times.

10.73 Pilots requiring a MATZ, and where appropriate, ATZ penetration service must establish two-way RTF communication on the appropriate frequency with the aerodrome controlling the zone when 15 NM or 5 min flying time from the boundary whichever is the sooner, and request approval to penetrate the MATZ, and if appropriate ATZ. When requested by the controller to 'pass your message' the pilot should pass the following information:

1. aircraft Callsign/Type;
2. departure Point and Destination;
3. present Position;
4. level;
5. additional details/Intention (e.g. Flight Rules, Next Route Point).

	Westbury Approach, G-ABCD, request MATZ and ATZ penetration		G-ABCD, Westbury Approach, pass your message
			G-ABCD, Cessna 172, from Borton to Walden, over Middleton, altitude 2500 feet Wessex 1005, VFR, tracking to Wells
			G-CD, MATZ and ATZ penetration approved, at 1500 ft on Westbury QNH/QFE 1001
			MATZ and ATZ penetration approved, cross MATZ at 1500 ft on Westbury QNH/QFE 1001, G-CD
			G-CD, report entering and leaving the MATZ
			Wilco, G-CD

- 10.74 When it is not possible for the controller to approve a penetration of the ATZ, the controller shall advise the pilot.

 G-CD, MATZ penetration approved, remain outside the ATZ

- 10.75 Whilst working a MATZ unit, pilots are expected to comply with any instructions issued by controllers and maintain a listening watch on the allocated RTF frequency. They should not change heading or level without giving prior warning and should advise when leaving the MATZ. At some MATZ units, the Zone controller is responsible for MATZ penetration services.

- 10.76 When crossing a CMATZ it is the responsibility of the pilot to ensure that clearance is obtained to transit each individual ATZ embedded therein. The pilot, in their request for clearance to transit the CMATZ, may ask the controller to obtain such clearance(s) on their behalf. When issuing any clearance to cross a CMATZ controllers will, where appropriate, articulate clearly any approval or otherwise to transit embedded ATZs.



G-CD, request penetration of Westbury MATZ and ATZ and Eastbury ATZ



G-CD, penetration of Westbury MATZ approved. Remain outside the Westbury and Eastbury ATZ

Military Safety Broadcast – Sécurité

- 10.77 Military ground stations may commence a broadcast message with ‘SECURITÉ SECURITÉ SECURITÉ’ (SEC-URI-TAY spoken three times) to inform all traffic that the message contains information affecting safety, but not an emergency situation. Aircraft acknowledgement is not required; however, aircraft may contact the ground station to obtain further details.



SECURITÉ SECURITÉ
SECURITÉ, All traffic, Westbury Approach, D527 now active for live firing, surface to 2500 feet

Rate of Climb and Descent

- 10.78 The conditions of when a higher Rate of Climb and Descent (ROCD), that exceeds the 8000fpm limit, can be applied to military aircraft are stipulated in the Manual of Military Air Traffic Management. The phraseology that is to be applied, in accordance with the airspace classification is contained within Table 1.

Rate of Climb and Descent

Table 1

<u>Phraseology</u>	<u>Classification of Airspace</u>	<u>Definition</u>
<u>Climb / Descend</u>	<u>G</u>	<u>To require a pilot to climb / descend with no restriction on ROCD</u>
<u>Climb / Descend</u>	<u>A - E</u>	<u>To require a pilot to climb / descend but at a rate not exceeding 8000 fpm</u>
<u>Expedite</u>	<u>G</u>	<u>To require a pilot to climb / descend at best rate but with no restriction on ROCD</u>

<u>Expedite</u>	<u>A - E</u>	<u>To require a pilot to climb / descend at best rate but not exceeding 8000 fpm</u>
<u>Expedite, no restriction (at end of transmission).</u>	<u>A - E</u>	<u>To require a pilot to climb / descend at best rate and without any restriction to their ROCD</u>
<u>No restriction (at end of transmission)</u>	<u>A - E</u>	<u>To inform a pilot that they may, at their own discretion, climb/descend at best rate and without any restriction to their ROCD</u>
<u>Climb / descend restricted at 8000 fpm, acknowledge</u>	<u>All</u>	<u>To instruct the pilot to climb / descend at a rate not exceeding 8000 fpm. Pilots must acknowledge the ROCD restriction</u>

For flights approved to manoeuvre in excess of standard ROCD.



Raider 21 operate in the block FL XXX to FL XXX, no restriction



Operate in the block FL XXX to FL XXX, no restriction, Raider 21

Air to Air Refuelling

10.79 The source document, National Standard Related Document United Kingdom is to be referred to for the phraseology to be used when conducting Air to Air Refuelling in the UK. The document is held on the Joint Air and Space Power Community website, a link to which is found within NATO Standard ATP 3.3.4.2 Air-to-Air Refuelling – Chapter 5.

Chapter 11: Phraseology Examples

Examples of Types of Flights

Introduction

- 11.1 An example of an IFR flight from one major airport to another, and an example of a VFR flight from a provincial aerodrome to a landing site, are given in graphic form in this Chapter. The latter then changes to an IFR flight on departure again to illustrate the differences between Deconfliction Service and Traffic Service (see Chapter 6). The agencies are described in Figure 1.

Figure 1 Diagram Key




BIGJET 347



G-ABCD



GROUND/TOWER/APPROACH

WRAYTON ACC
(CONTROL/INFORMATION)

An IFR Flight

Start up

Figure 2 IFR – Start Up Approval



Stourton Ground, BIGJET 347, Radio check 118.3



Station calling Stourton Ground say again your callsign



Stourton Ground, BIGJET 347, radio check 118.3



BIGJET 347, Stourton Ground, readability 5



BIGJET 347, stand 24, information bravo, QNH 1011 request start up



BIGJET 347, start up *approved*

NOTE: The word 'APPROVED' is used – not 'CLEARED'.

ATC Clearance

Figure 3 IFR – ATC Clearance



BIGJET 347 *cleared* to
Kennington via A1 at FL60,
squawk 5501



Cleared to Kennington
via A1 at FL60, squawk
5501, BIGJET 347



BIGJET 347, correct

NOTES:

1. The word **CLEARED** is introduced.
2. A full readback of a clearance is required.

Pushback and Taxi

Figure 4 IFR – Pushback Approval



Ground, BIGJET 347,
request pushback



BIGJET 347, pushback
approved

NOTE: The word 'APPROVED' is used – not 'CLEARED'.

Figure 5 IFR – Taxi Instructions



Ground, BIGJET 347,
information Charlie QNH
1011 request taxi



BIGJET 347, taxi holding
point G2 runway 24



Taxi holding point G2
runway 24, BIGJET 347




BIGJET 347, contact
Stourton Tower 118.950



Stourton Tower 118.950,
BIGJET 347

Pre-departure and Take-off

Figure 6 IFR – Departure Instructions and Line-up (i)

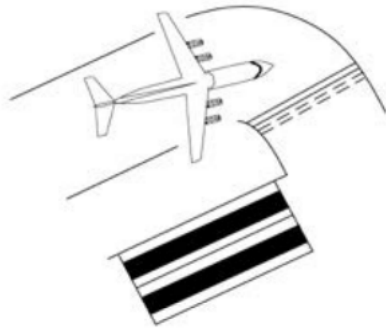

Stourton Tower, BIGJET 347, ready for *departure*



BIGJET 347, Stourton Tower, after *departure* climb straight ahead until passing altitude 2500 feet



After *departure* climb straight ahead until passing altitude 2500 feet, BIGJET 347




BIGJET 347, runway 28 *line up and wait*. Vehicle crossing upwind end of runway



Line up and wait, BIGJET 347

NOTES:

1. 'DEPARTURE' employed and not 'TAKE-OFF'.
2. 'CLEARED' is not used in these cases – see next 'Notes'.
3. Full readback is required for instructions to ENTER, LAND, TAKE-OFF ON, BACKTRACK, HOLD SHORT OF, OR CROSS a runway.
4. 'LINE UP AND WAIT' (plus reason) is employed; 'LINE UP' (only) may also be used.

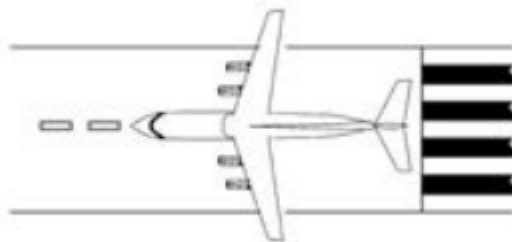Figure7 IFR – Take-off Clearance

BIGJET 347, runway 28,
surface wind calm, cleared
for take-off




Runway 28 cleared for
take-off, BIGJET 347

NOTES:

1. TAKE-OFF – these words are only used when an aircraft is cleared for TAKE-OFF or when TAKE-OFF clearance is cancelled.
2. TAKE-OFF clearance requires readback.
3. Use of CLEARED is restricted to:
 - a) ATC clearances.
 - b) Departure and Approach instructions.
 - c) Take-off and landing clearances.

Figure 8 IFR – Airborne Report

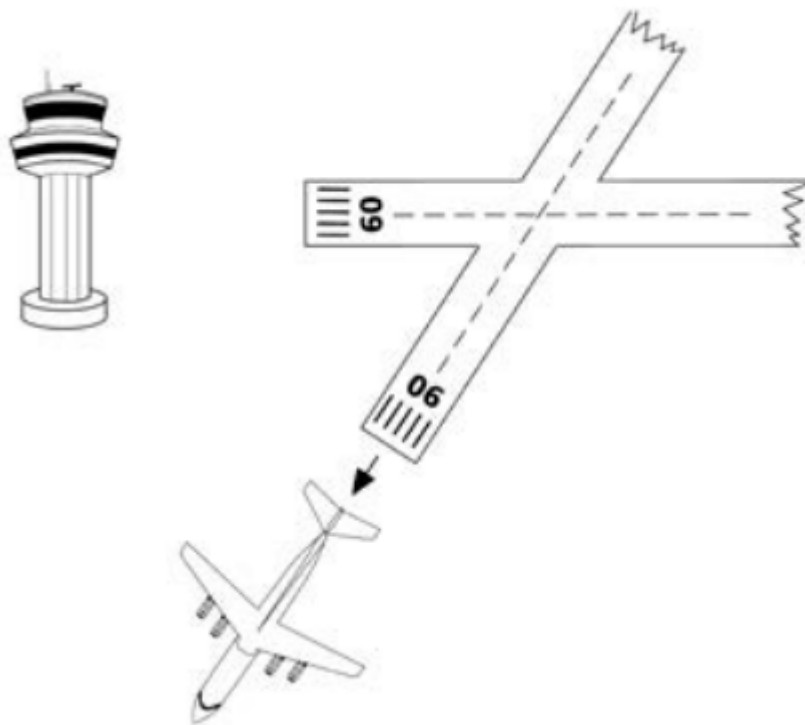

BIGJET 347, contact
Wrayton Control 129.1




Wrayton Control 129.1,
BIGJET 347

NOTE: Full readback of frequency change.

En-Route

Figure 9 IFR – Departure Report

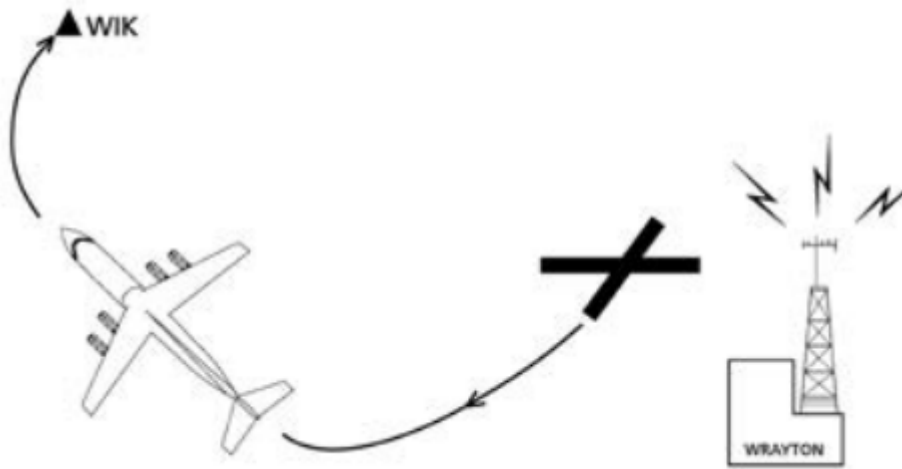

Wrayton Control, BIGJET 347, passing altitude 3000 feet Stourton QNH 1011 turning inbound Wicken climbing FL60 requesting FL280





BIGJET 347, Wrayton Control, climb FL280 report reaching



Climbing FL280 Wilco, BIGJET 347

NOTES:

1. Full readback of level instruction.
2. REPORT instruction employed.

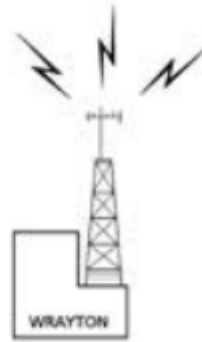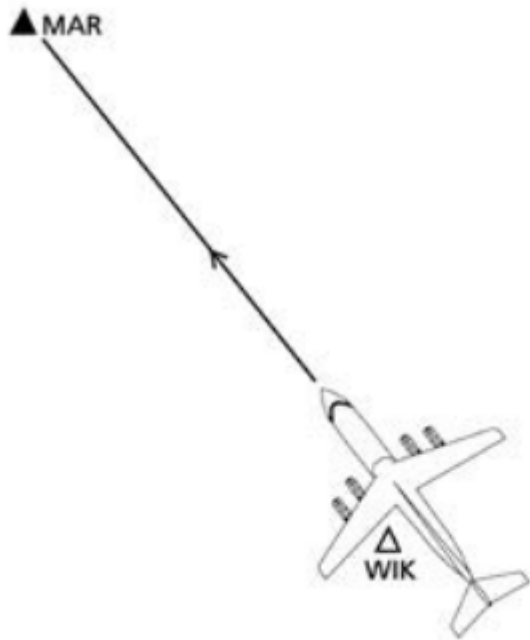Figure 10 IFR – Position Report


BIGJET 347, Wicken 47
FL130 climbing FL280
Marlow 07



BIGJET 347, Roger

NOTE: Position report consists of:

1. aircraft identification.
2. position.
3. time.
4. level.
5. next position and ETA.

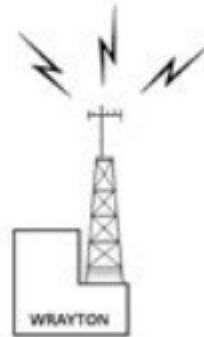Figure 11 IFR – Level Report



BIGJET 347, reaching FL280



BIGJET 347

NOTE: For passing instructions/reports regarding height/altitude or flight level, use CLIMB(ING), DESCEND(ING), PASSING, REACHING or LEAVING but not CLEARED/RE-CLEARED.

Figure 12 IFR – Position Report

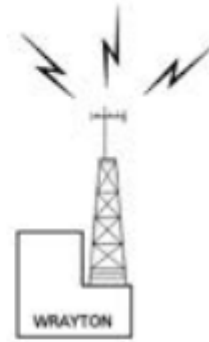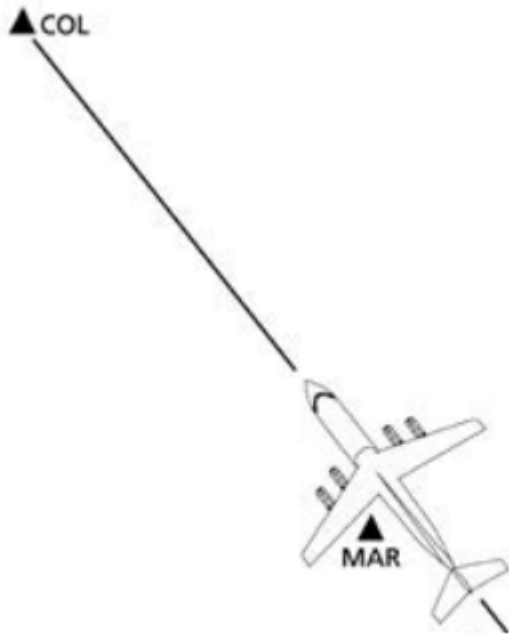


BIGJET 347, Marlow 08
FL280 Colinton 48



BIGJET 347

Figure 13 IFR – Descent Clearance

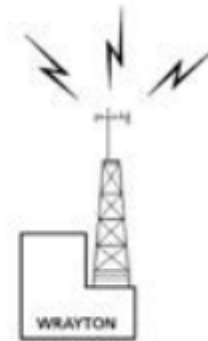

BIGJET 347, request descent




BIGJET 347, descend FL120 cross Colinton FL170 or above



Descending FL120 will cross Colinton FL170 or above, BIGJET 347

Figure 14 IFR – ATC Request and Instruction

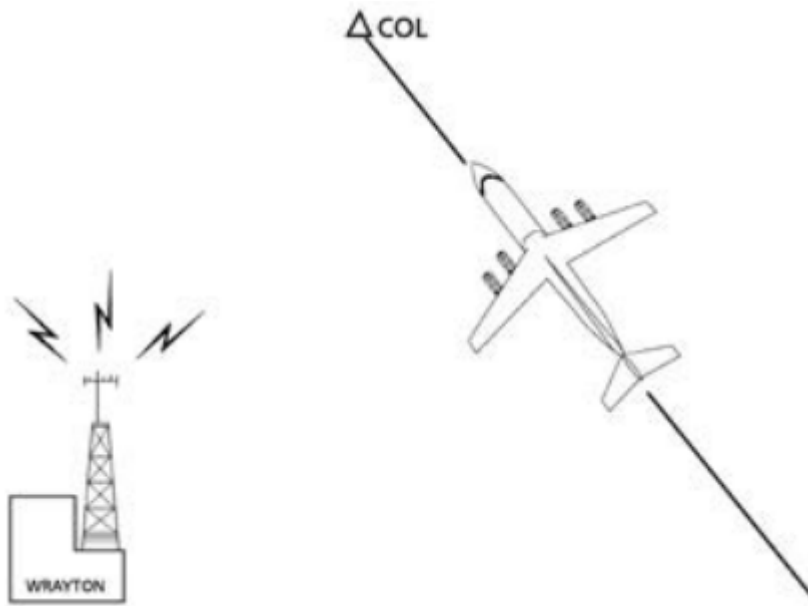

BIGJET 347, report your level



BIGJET 347, passing FL225



BIGJET 347, Roger. Are you able to cross Colinton at time 52 or later



Affirm, BIGJET 347




BIGJET 347, cross Colinton 52 or later



Cross Colinton 52 or later, BIGJET 347

NOTE: AFFIRM/NEGATIVE are used when a question requires a direct answer.

Figure 15 IFR – Pilot Request

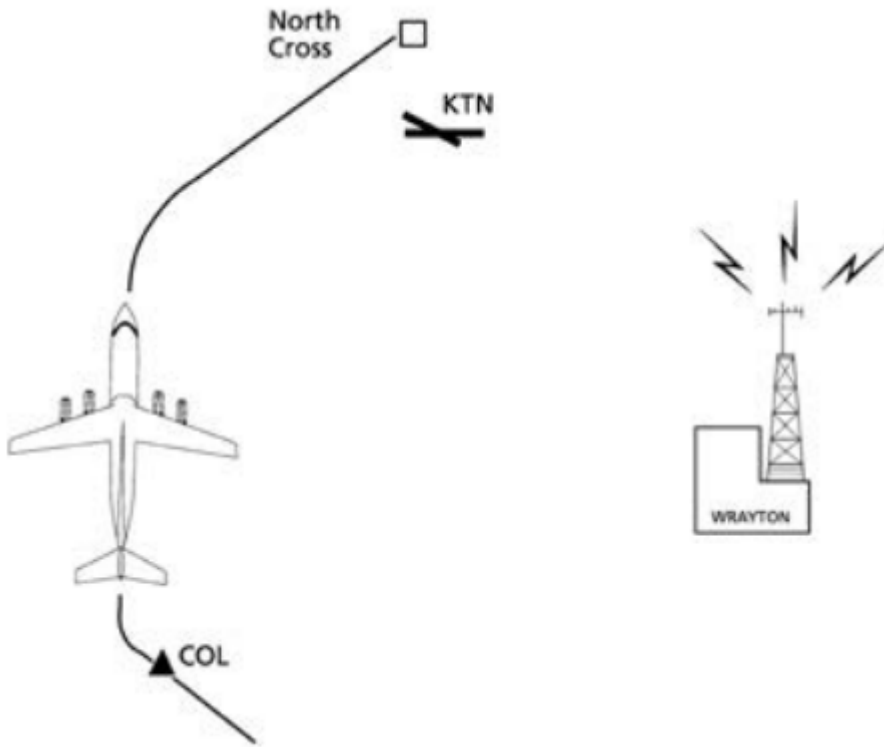

BIGJET 347, Colinton 52
FL180 descending FL120
request direct North Cross
for ILS approach at
Kennington




BIGJET 347, Roger.
Route direct to North
Cross. Descend FL60.
Report West abeam KTN



Direct North Cross
descend FL60. Wilco,
BIGJET 347

Figure 16 IFR – Descent to FL100

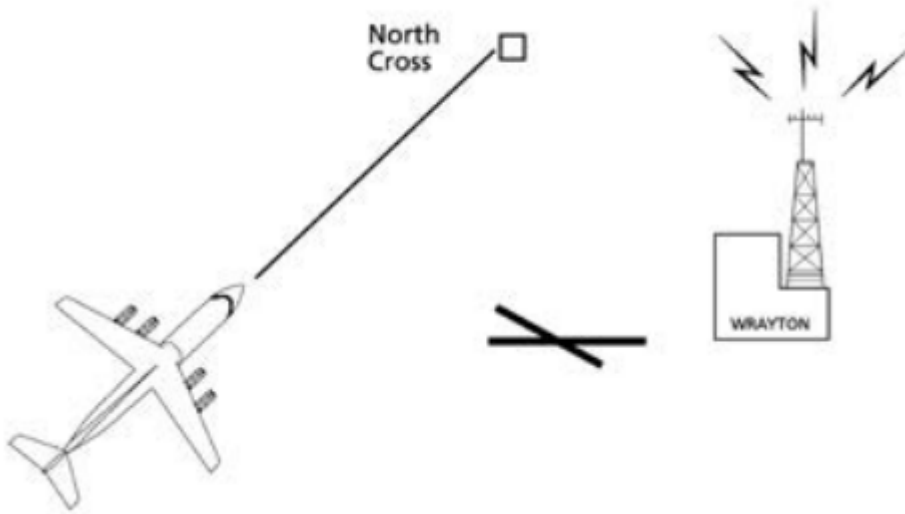

BIGJET 347, West abeam
Kennington 03 FL100
descending FL60 North
Cross 11




BIGJET 347, Roger.
Contact Kennington
Approach 119.750





Kennington Approach
119.750, BIGJET 347


NOTE: FL100 spoken as “flight level WUN HUN DRED”


Figure 17 IFR – Contacting Approach Control

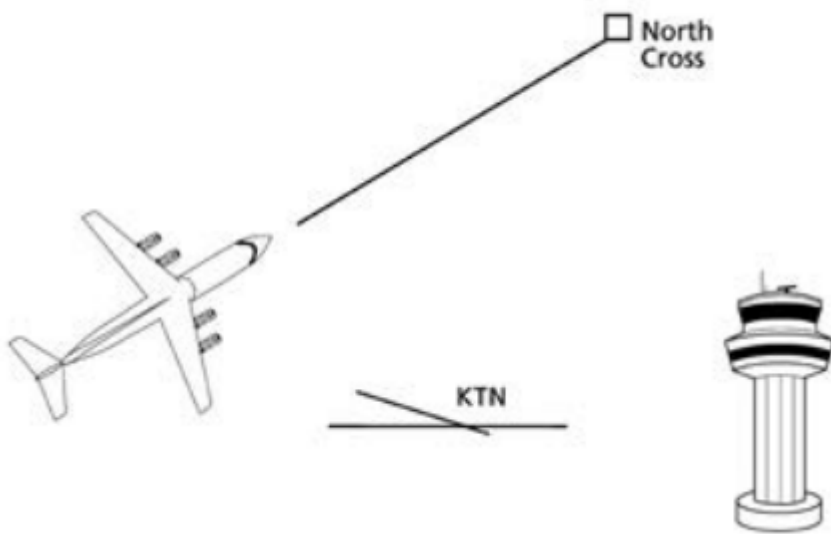

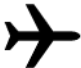
 Kennington Approach, BIGJET 347, passing FL90 descending FL60 approaching North Cross information Golf

 BIGJET 347, Kennington Approach, vectoring for ILS approach runway 28

 ILS runway 28, BIGJET 347

 BIGJET 347, Leave North Cross heading 120 degrees

 Leave North Cross heading 120 degrees, BIGJET 347

NOTE: Full readback of HEADING (and speed) instructions; also, runway identifier.

Figure 18 IFR – Vectoring for Approach



BIGJET 347, North Cross
FL60 heading 120 degrees



BIGJET 347, descend to
altitude 2500 feet QNH
1011



Descend to altitude 2500
feet QNH 1011, BIGJET
347



BIGJET 347, position 10
miles northeast of
Kennington



BIGJET 347



BIGJET 347, turn right
heading 190 degrees
base leg 14 miles
northeast of Kennington



Right heading 190
degrees, BIGJET 347

Figure 19 IFR – Intercepting the Localiser



BIGJET 347, turn right heading 240 degrees



Right heading 240 degrees, BIGJET 347



BIGJET 347, closing final approach track from the right 12 miles from touchdown



BIGJET 347



BIGJET 347, closing the localiser from the right, report established



Wilco, BIGJET 347

Figure 20 IFR – Landing Clearance



BIGJET 347, localiser established



BIGJET 347, cleared ILS approach runway 28, QNH 1008



Cleared ILS approach runway 28, QNH 1008, BIGJET 347



BIGJET 347, contact Kennington Tower 118.925



Kennington Tower 118.925, BIGJET 347



Kennington Tower, BIGJET 347, long final runway 28




BIGJET 347, Kennington Tower, runway 28, surface wind 240 10, cleared to land



Runway 28 cleared to land, BIGJET 347

NOTE: When passing surface wind; the words Surface, Wind and Degrees may be omitted.

Figure 21 IFR – Vacate the Runway

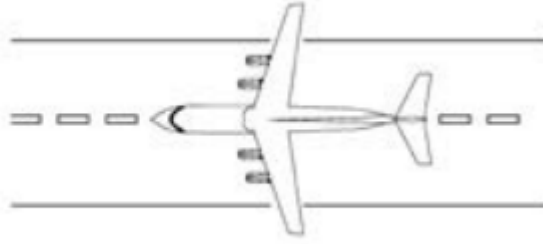


BIGJET 347, *vacate convenient right*



Vacate right, BIGJET 347

Figure 22 IFR – Runway Vacated

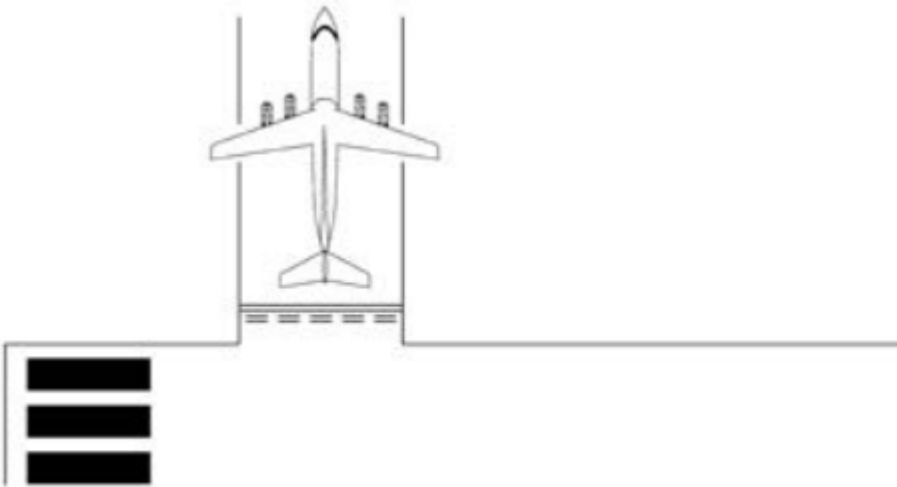

BIGJET 347, *runway vacated*


NOTE: VACATE runway and *not* CLEAR runway.

A VFR/IFR Flight

11.2 This particular example is aimed at the pilot flying outside controlled airspace under services provided by the military in the UK (Westbury) to show the slight differences that exist from civil ATS as portrayed in previous Chapters.

Engine Start and Departure Information

Figure 23 VFR – Start up and Taxi

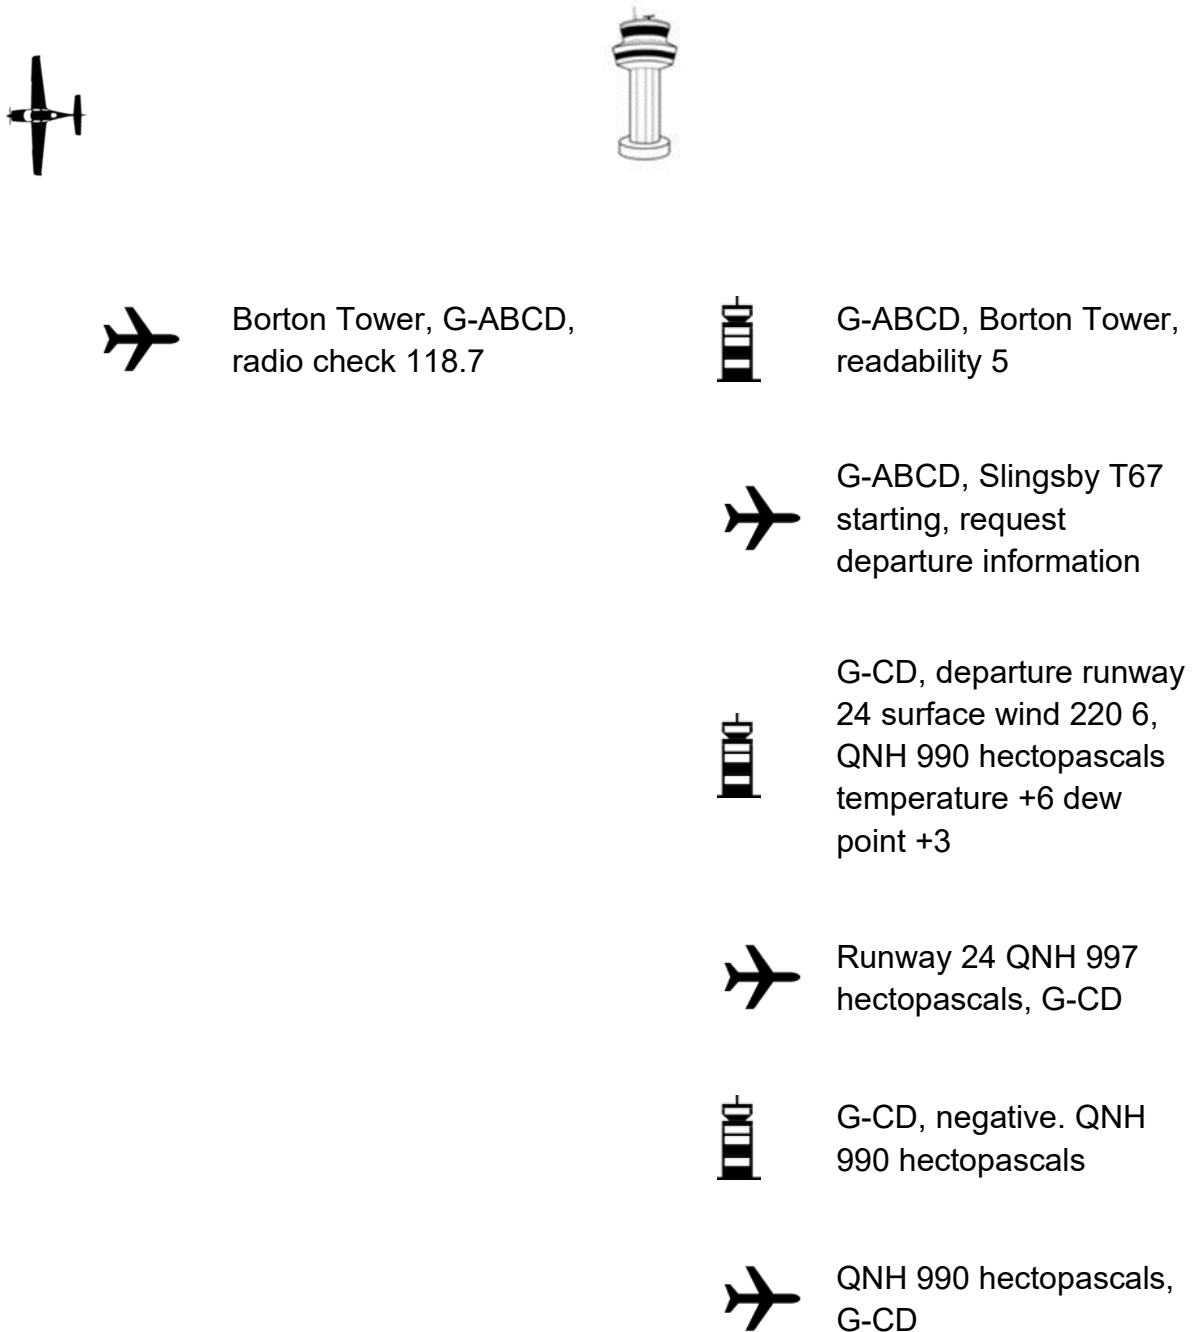



Borton Tower, G-ABCD, T67
at the south side hangars
request taxi for VFR flight to
Walden



G-CD, taxi holding point
G1 runway 24 via
taxiway Charlie QNH 990
hectopascals



Holding point G1 runway
24 via taxiway Charlie
QNH 990 hectopascals,
request surface wind, G-
CD



G-CD, surface wind calm



G-CD, request departure
on runway 14




G-CD, taxi holding point
A1 runway 14



Taxi holding point A1
runway 14, G-CD

Pre-departure and Take-off

Figure 24 VFR – Departure Instructions and Take-off Clearance

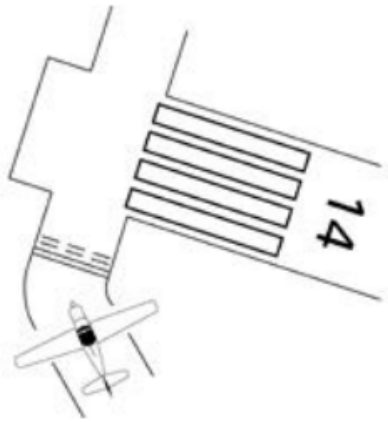

G-CD, ready for *departure*
request left turnout heading
330 degrees



G-CD, after departure,
left turn *approved*, climb
not above altitude 2500
feet until reaching the
zone boundary



Left turn approved. Not
above altitude 2500 feet
until zone boundary, G-
CD



G-CD, runway 14,
surface wind 220 4,
cleared for take-off




Runway 14 cleared for
take-off, G-CD

NOTES:

1. DEPARTURE used not TAKE-OFF.
2. APPROVED used not CLEARED.
3. Full readback of departure clearance.
4. Runway identified.
5. Readback of take-off clearance.

Post Departure Flight

Figure 25 VFR – Departure Report

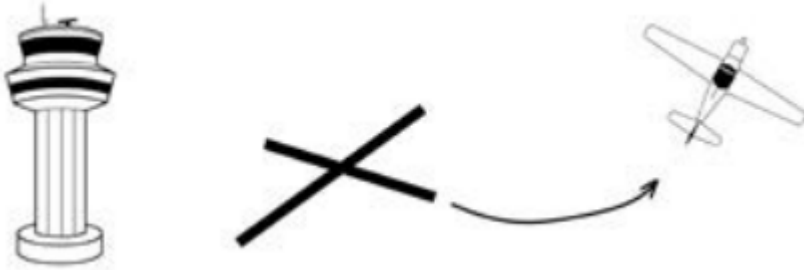

G-CD, contact Borton
Approach 118.750



Borton Approach
118.750, G-CD



Borton Approach, G-ABCD,
airborne runway 14 turning
left heading 330 degrees
climbing to altitude 2500 feet
QNH 990 hectopascals, en-
route Walden



G-CD, Roger. *Report*
reaching 2500 feet



Wilco, G-CD



G-CD, reaching altitude 2500
feet



G-CD, Roger *report* at
the zone boundary



Wilco, G-CD



G-CD, zone boundary
changing to Wrayton
Information 125.750



G-CD, Roger, Wessex
988 hectopascals



Wessex 988
hectopascals, G-CD

NOTES:

1. REPORT introduced.
2. CHANGING TO announces intention to change frequency.
3. Transmission of WESSEX Regional Pressure Setting is limited to regional name and pressure.

En-route Flight**Figure 26 VFR – Request for Basic Service**

Wrayton Information, G-ABCD, request Basic Service



G-ABCD, Wrayton Information, pass your message



G-ABCD, Cessna 172, from Borton to Walden, 15 NM south of Wrayton, altitude 2500 feet
Wessex 988 hectopascals, tracking to Walden



G-CD, Roger. Basic Service



Basic Service, G-CD



G-CD, departed Seton at 38
request activate flight plan



G-CD, departure time 38
will activate flight plan



Wrayton, G-CD, request VHF
frequency for Westbury



G-CD, Westbury
Approach 119.725



G-CD, descending due
weather. Changing to
Westbury Approach



G-CD, Wessex 988
hectopascals





Wessex 988
hectopascals, G-CD


Flight receiving Lower Airspace and MATZ Penetration Service


NOTE: Westbury is a military unit.


Figure 27 VFR – LARS Traffic Service Request

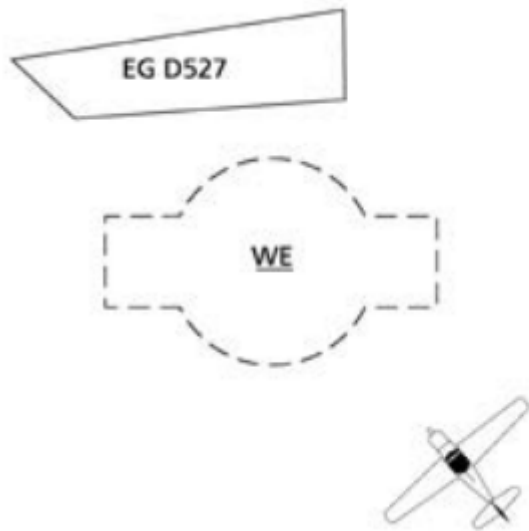



 Westbury Approach, G-ABCD, request Traffic Service

 G-CD, Westbury Approach, pass your message

 G-ABCD, Cessna 172 from Borton to Walden, 15 NM south of Westbury, altitude 2500 feet Wessex 988 Hectopascals, tracking to Wells, Squawking 7000

 G-CD, squawk 6512

 Squawk 6512, G-CD

 G-CD, identified. Traffic Service




Traffic Service, G-CD,
Request MATZ and ATZ
penetration

NOTES:

1. Details of LARS and MATZ Penetration Service can be found in the UK AIP, AICs and Temporary Supplements.
2. When crossing a CMATZ, it is the responsibility of the pilot to ensure that permission is obtained to transit each individual ATZ embedded therein. The pilot, in their request to transit the CMATZ, may ask the controller to obtain such permission on their behalf. When issuing any approval to cross a CMATZ controllers will, where appropriate, articulate clearly any permission or otherwise to transit embedded ATZs.

Figure 28 VFR – MATZ and ATZ Penetration

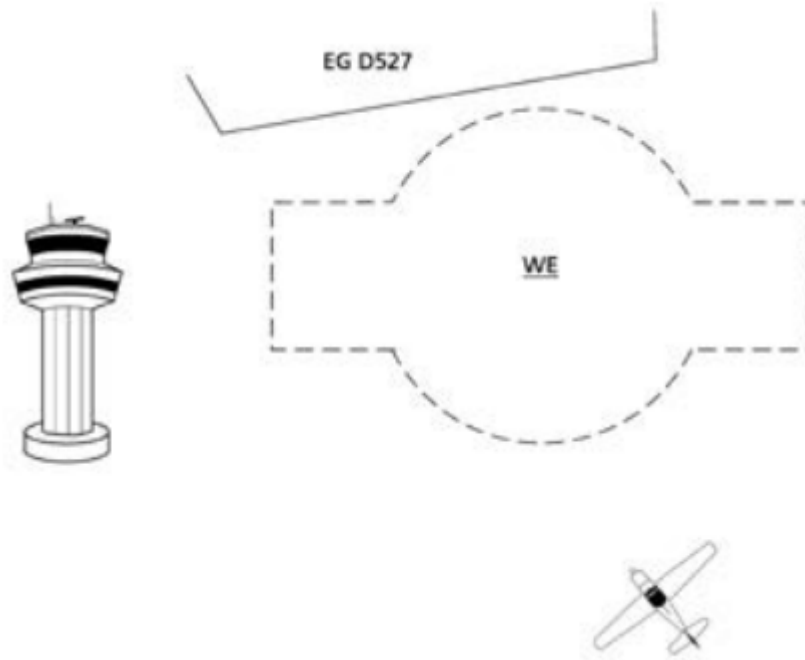

G-CD, report level



G-CD, altitude 2500 feet



G-CD, descend to height 1500 feet for MATZ penetration QNH/QFE 981 hectopascals



Descend to height 1500 feet QNH/QFE 981 hectopascals, G-CD



G-CD, reaching 1500 feet




G-CD, maintain 1500 feet MATZ and ATZ penetration approved



Wilco, MATZ and ATZ penetration approved, G-CD

Figure 29 VFR – Join Request

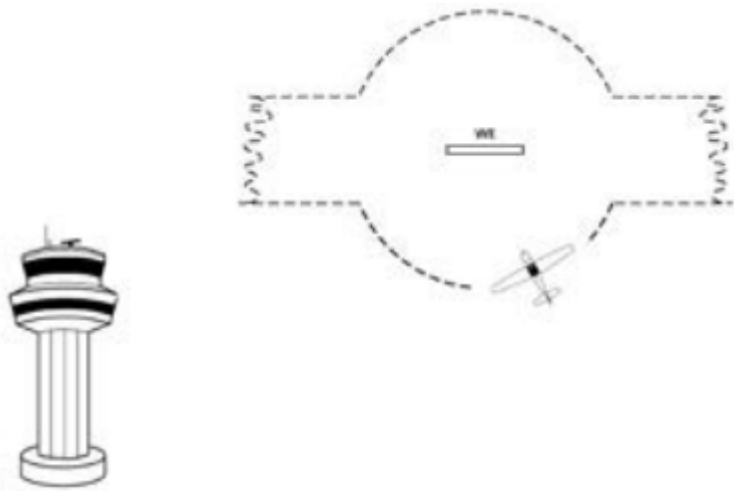

G-CD, entering MATZ
reduced traffic information
from ahead as you approach
my radar overhead



G-CD, Roger. Request
join for one visual circuit



G-CD, Roger. Standby



G-CD, one visual circuit
approved maintain 1500
feet to overhead. Do you
have the field in sight?



Maintain 1500 feet to
overhead. G-CD field in
sight



G-CD, roger. Runway 27
right hand circuit height
1000 feet QNH/QFE 981
hectopascals



Runway 27 right hand
circuit height 1000 feet
QNH/QFE 981
hectopascals, G-CD



G-CD, request POB



G-CD, 1 POB



G-CD, contact Westbury
Tower 132.850



Westbury Tower
132.850, G-CD


NOTES:


1. Circuit direction is only given when circuit is not left-hand.
2. POB – Total number of Persons on Board.


Flights in the Military Visual Circuit


Figure 30 VFR – Circuit Join




 Westbury Tower, G-ABCD, 2 miles southeast height 1500 feet QNH/QFE 981 hectopascals to join for one visual circuit


 G-CD, Westbury Tower, join overhead at 1500 feet for runway 27 right hand QNH/QFE 981 hectopascals circuit clear

 Join overhead 1500 feet runway 27 right hand QNH/QFE 981 hectopascals, G-CD

 G-CD, overhead 1500 feet


 G-CD, report downwind at 1000 feet one fast jet joining base leg to land

 Wilco, G-CD

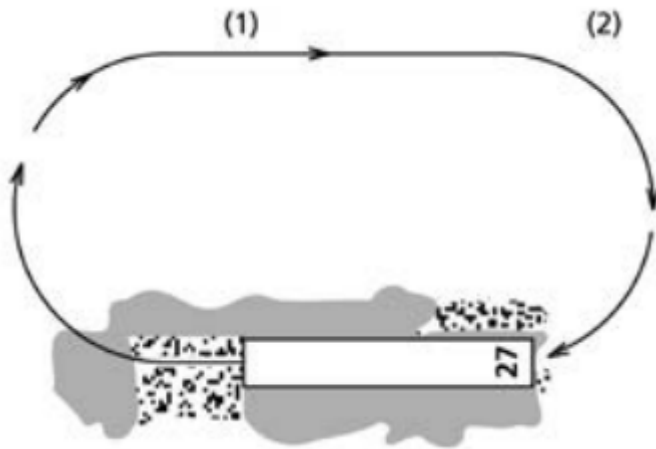Figure 31 – Military Visual Circuit Pattern**NOTES:**

1. Downwind report is made abeam upwind end of runway. Aircraft intentions are stated here.
2. 'Final' call is made *just before turning base leg*.
3. Military (jet) circuits tend to be relatively tight and are more oval-shaped.
4. Military use 'two in', 'three in' etc. for number of aircraft present in the visual circuit.

Figure 32 VFR – Downwind

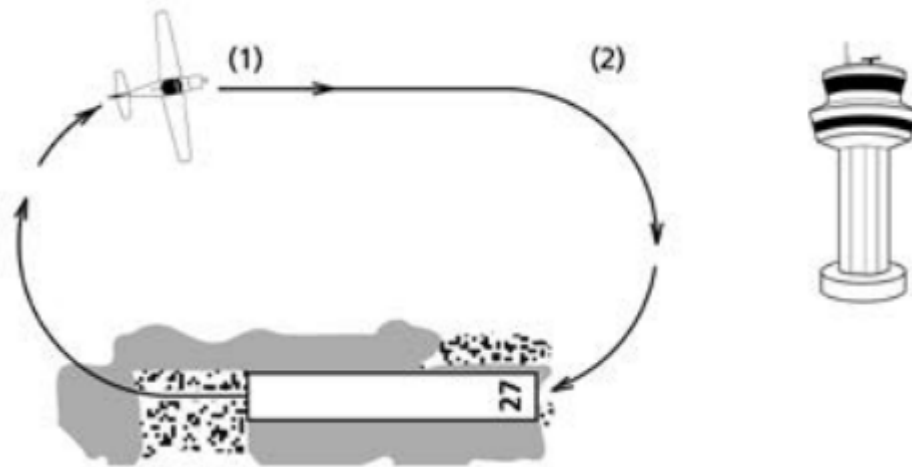

G-CD, downwind 1000 feet
request touch and go then
depart to the northwest.



G-CD, surface wind 250
5 one ahead to land.



G-CD, final gear down



G-CD, go around 500
feet deadside one on
remaining



Go around 500 feet
deadside, G-CD

NOTES:

1. Surface wind is passed at downwind position.
2. An aircraft with retractable undercarriage will be expected to call 'gear down' or three greens with the final call.
3. 'Go Around' see Chapter 10 and Chapter 4.

Figure 33 IFR – Departure Instructions



G-CD, at upwind end of runway turn right heading 295 climb to height 2000 feet QFE 981 hectopascals



Upwind end of runway right heading 295 climb to height 2000 feet QFE 981 hectopascals, G-CD

Figure 34 IFR – Departure Report



G-CD, heading 295 climbing to height 2000 feet



G-CD, contact Westbury Approach 119.725



Westbury Approach 119.725, G-CD

NOTE: Full readback of clearance and frequency change.

Flight Receiving Lower Airspace Radar Service (LARS) and Special Use Airspace Information and Crossing Services

Figure 35 VFR – Requesting Deconfliction Service



Westbury Approach, G-ABCD, heading 295 maintaining height 2000 feet QFE 981 hectopascals requesting Deconfliction Service



G-CD, Westbury Approach, squawk ident. What is your requested level?



Ident G-CD, Request FL 50



G-CD identified, Deconfliction Service, Danger Area 527 active will you accept a re-route?



Deconfliction Service, affirm, G-CD




G-CD, continue heading 295 climb FL 50



Heading 295 climbing FL45, G-CD

Figure 36 VFR – Report Leaving a MATZ

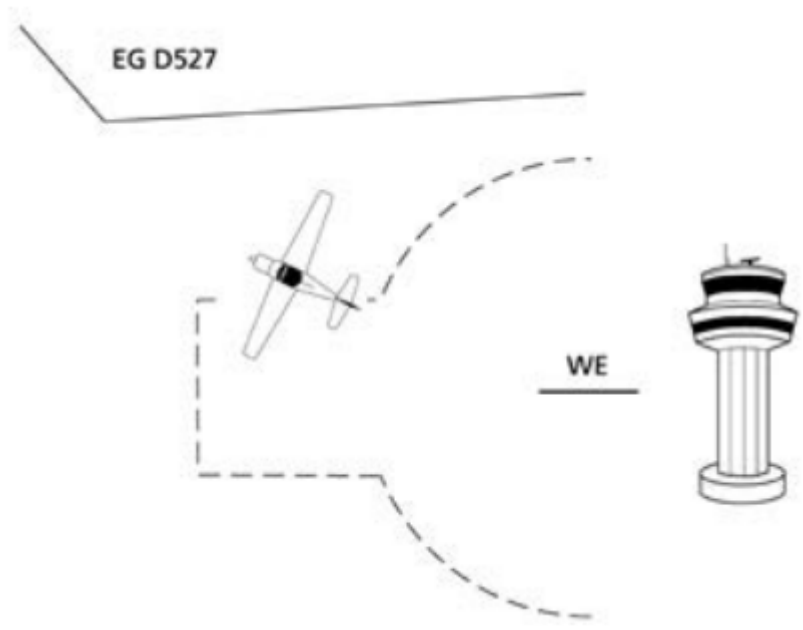

G-CD, leaving MATZ



G-CD



G-CD, reaching FL 50



G-CD, Roger I will be turning you right in 7 miles to regain track



G-CD

NOTE: Report leaving a MATZ.

Military Safety Broadcast - Sécurité

11.3 For details of the broadcast message 'SECURITE' see Chapter 10.

Callsign Prefix – 'STUDENT'

- 11.4 On initial contact with Air Traffic Service Units (ATSUs) (including ATC centres and aerodromes providing an ATC service, an Aerodrome FIS (AFIS) or an AGCS), student pilots who do not yet hold a licence and who are flying solo as part of their training are to prefix the aircraft callsign with the word 'STUDENT'⁵. Once acknowledged, it will not normally be necessary for student pilots to use the prefix in subsequent transmissions until making initial contact with other ATSUs, unless they feel they are being instructed to do something with which they are unfamiliar.
- 11.5 ATS personnel will acknowledge the initial call, again using the prefix, and can be expected, in so far as is practicable, to make due allowance for the limited experience and ability of student pilots in determining the pace and complexity of instructions and/or information which are subsequently passed.
- 11.6 A solo student pilot experiencing an emergency and communicating with a military unit, or the D&D Section shall use the 'STUDENT' prefix with the aircraft callsign as part of the distress or urgency message. A military ground station or the D&D section receiving a distress or urgency message from a student pilot may use this information on pilot experience to render the most appropriate assistance. (See also Chapter 8, Emergency Phraseology).

Figure 37 – Callsign Prefix 'STUDENT'



⁵ Although intended primarily for use by ab initio students, the prefix shall also be used in other circumstances where, for example, the holder of a valid licence is returning to flying practice after a significant absence and is undergoing renewal training involving solo flight conducted as a student under the supervision of a flight instructor.

Flight Receiving Avoiding Action

Figure 38 Avoiding Action



G-CD, avoiding action, turn left immediately heading 230 degrees traffic 12 o'clock 6 miles opposite direction no height information



Left heading 230 degrees, G-CD

NOTES. This type of avoiding action, when under Deconfliction Service, is given at the controller's discretion for late sighting/pop-up traffic.

Figure 39 – Clear of Traffic



G-CD, clear of traffic, turn right heading 340 degrees direct for Walden



Right heading 340 degrees. Request change to Wrayton Information 125.750, G-CD



G-CD radar service terminated, squawk conspicuity Freecall Wrayton Information 125.750



Squawk conspicuity, G-CD

Flight Receiving En-Route Basic Service

Figure 40 VFR – En-route Reply to Pass Your Message



Wrayton Information, G-ABCD, request Basic Service



G-ABCD, Wrayton Information, pass your message



G-CD, Cessna 172, from Borton to Walden, 15 NM south of Westbury, altitude 2500 feet
Wessex 1008, VFR tracking to Wells, request Walden weather



G-CD, Roger Basic Service, standby for weather



Basic Service, G-CD



G-CD, Walden weather available, are you ready to copy?



Affirm, G-CD



G-CD, Walden 0950
weather runway 27,
surface wind calm,
visibility 10 kilometres, nil
weather, few at 4000
feet, QNH 1008,
temperature +4. Dew
point +1



G-CD, QNH 1008,
changing to Wrayton
Centre 121.5 for Practice
PAN




G-CD


Flight Transmitting a Practice Pan


11.7 (121.5 – listen out before transmitting)


Figure 41 – Practice Pan Call



 Practice Pan, Practice Pan,
Practice Pan, Wrayton
Centre, G-ABCD

 G-ABCD, Wrayton
Centre continue with
Practice Pan

 Wrayton Centre, G-
ABCD, Slingsby T67,
simulating rough running
engine, request diversion
to nearest aerodrome, 20
miles northwest of
Westbury, FL 50, turning
right heading 140
degrees, IMC rating, one
person on board
squawking 7000 with
Charlie

 G-ABCD, Wrayton
Centre, squawk 7301
ident


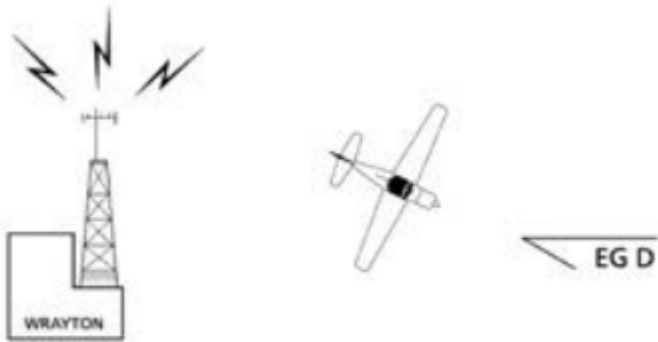
 7301 ident, G-ABCD

Figure 42 VFR – Practice PAN – ATS surveillance system Identification



G-CD, identified 17 miles northwest of Westbury, turn right heading 165 for Westbury for landing runway 09 surface wind 270 3 knots



Heading 165 for approach to runway 09 at Westbury, G-CD



G-CD, are you ready for Westbury weather, 13 miles northwest of Westbury



Wrayton, Westbury weather not required cancelling Practice Pan, G-CD



G-CD, Roger. Practice Pan cancelled



G-CD, changing to Walden Information 135.250



G-CD, squawk conspicuity



Squawk conspicuity, G-CD

NOTES:

1. Use of the VHF International Emergency Service is detailed in the UK AIP and AICs and Chapter 8, Emergency Phraseology.
2. Controllers are not required to pass position information when using SSR to identify an aircraft in uncontrolled airspace. However, controllers may pass position information to aircraft whenever they consider it necessary.

Arrival Flight (Aerodrome FIS)

Figure 43 VFR - Arrival Flight (Aerodrome FIS)



Walden Information, G-ABCD, Request join



G-ABCD, Walden Information, pass your message



G-ABCD, T67, 6 miles southeast descending to height 1000 feet



G-CD, runway 27 QFE 986 hectopascals 1 aircraft in circuit, a PA 28 late downwind



Runway 27 QFE 986 hectopascals, joining via left base G-CD



G-CD, left base



G-CD roger, 1 Ahead, PA 28 Final



G-CD, roger



G-CD, final



G-CD, runway occupied
with a PA28



G-CD, runway now
vacated, surface wind
270 10, land at your
discretion



G-CD, roger landing



G-CD



G-CD, runway vacated

NOTES:

1. Joining **Information** is provided by FISOs at aerodromes and the pilot should position accordingly.
2. Joining **Instructions** are only issued where an **ATC** service is provided.
3. When taking off or landing, the pilot should state their intention when options are available, e.g. landing/going around, taking off/ holding position.

Appendix 1:

UK Differences from ICAO Radiotelephony Procedures

- A1 ICAO sets out standard international phraseology for communications between air traffic services and pilots in several documents including Annex 10 Volume 2 (Communications Procedures) to the Convention on International Civil Aviation and ICAO PANS-ATM (Procedures for Air Navigation Services – Air Traffic Management) Doc. 4444.
- A2 Where the ICAO standard phraseology may be misunderstood, or has weaknesses in the UK environment, different phraseology has been specified for use (and notified to ICAO). In the UK, air traffic service units and pilots are expected to comply with the phraseology and procedures described in main text of this document.
- A3 When communicating with air traffic service units in other States pilots should use phraseology and procedures set out by ICAO (subject to any differences notified by that State)
- A4 Significant differences between the ICAO standard phraseology and that specified for use in CAP 413 are described in the table (below).

Source/ Additional Information	Details of ICAO/UK Difference	Reason/Remarks
Annex 10 See UK AIP GEN 1.7	Phraseology FLIGHT LEVEL ONE ZERO ZERO (ICAO) is not used in the UK. In the UK flight levels ending in hundreds are transmitted as HUNDRED e.g. FLIGHT LEVEL ONE HUNDRED	To avoid potential confusion with adjacent flight levels and misidentification of cleared levels e.g. FLIGHT LEVEL ONE ZERO ZERO with FLIGHT LEVEL ONE ONE ZERO
Annex 10 See UK AIP GEN 1.7	In the UK, the name of either the aircraft manufacturer, or name of the aircraft model, or name of the aircraft category (e.g. helicopter or gyrocopter) may be used as a prefix to the callsign	To aid recognition by the ground station and/or other aircraft that the aircraft transmitting is of a particular category and may manoeuvre differently or require special handling
Annex 10 See UK AIP GEN 1.7	In the UK CONTACT shall have the meaning “Establish communications with...(your details have been passed)”	This shortens a pilot’s first call on the next ATS unit/frequency, as they know they do not have to pass full details

Source/ Additional Information	Details of ICAO/UK Difference	Reason/Remarks
Annex 10 See UK AIP GEN 1.7	In the UK the additional term – FREECALL shall have the meaning “ CALL (unit) (your details have not been passed) ”	This informs the pilot they will have to pass full details to the next ATS unit/ frequency on first contact
ANNEX 10 and PANS-ATM See UK AIP GEN 1.7	RECLEARED (ICAO) is only used in the UK for route clearances and not for vertical clearances	The direction of vertical movement, provided by CLIMB and DESCEND , acts as a check in some circumstances when a pilot misinterprets a call not directed at them
Annex 10 See UK AIP GEN 1.7	The following method of acknowledging receipt is not used in the UK. ‘The callsign of the aircraft followed if necessary by callsign of the aeronautical station’ (ICAO). (CALLSIGN) ROGER is used in the UK	The UK procedure is in accordance with the examples in ICAO Doc 9432 (1990) Manual of Radiotelephony, which are different to those described in ICAO Annex 10 Aeronautical Telecommunications
PANS-ATM See UK AIP GEN 1.7	In the UK an additional phrase, LAND AFTER THE (Aircraft Type) is used	This phrase may be used under certain conditions and indicates that a preceding aircraft is not clear of the runway
CAP 413 Chapter 4 NOTE: phraseology used by Flight Information Service Officers at aerodromes and by controllers in relation to specified helicopter manoeuvres	In the UK, additional phrases, LAND AT YOUR DISCRETION and TAKE-OFF AT YOUR DISCRETION are used	These phrases may be used under certain conditions and indicate that a landing clearance or a take-off clearance cannot be issued, and any landing or take-off is to be conducted at the pilot’s discretion

Source/ Additional Information	Details of ICAO/UK Difference	Reason/Remarks
Annex 10 See UK AIP GEN 1.7	The following method of ending conversations is not used in the UK. ' A radiotelephone conversation shall be terminated by the receiving station using its own callsign ' (ICAO). In the UK the word OUT is used to indicate that the transmission has ended, and no response is expected	When there is little possibility of confusion or misunderstanding, the word OUT is normally omitted
Annex 10 See UK AIP GEN 1.7	Radiotelephony Reply Procedure In the UK under certain circumstances the answering ground station may omit its callsign	Omitting the ground station callsign may reduce RTF congestion and therefore improve safety standards at busy ATC units
See UK AIP Gen 1.7	Helicopter Phraseology Additional radiotelephony terms for helicopter operations are defined for use in the UK	To reduce the possibility of misunderstanding, several additional terms pertaining to rotary wing operations are defined for use in the UK
Annex 10 See UK AIP GEN 1.7	Listening Watch on 121.5 MHz ICAO requirements for Aeronautical Station Listening Watch on VHF emergency channel 121.5 MHz are not applied in the UK	VHF emergency channel frequency 121.5 MHz is not routinely monitored at civil aerodromes; however, it is monitored H24 at Area Control Centres with coverage over most of the UK above 3000 ft amsl
PANS ATM See UK AIP GEN 1.7	For level changes and reports, TO shall only be used in connection with altitude or height, e.g. DESCEND TO ALTITUDE 3000 FEET . It is not used when describing Flight Levels, e.g. CLIMB FLIGHT LEVEL 250	TO is not used in connection with Flight Levels, in order to reduce the possibility of misunderstanding in circumstances where the Flight Level includes the figure two, e.g. FLIGHT LEVEL 220
PANS-ATM See UK AIP GEN 1.7	' CRUISE CLIMB ' is not used in the UK	

Source/ Additional Information	Details of ICAO/UK Difference	Reason/Remarks
PANS-ATM See UK AIP GEN 1.7	Avoiding Action For avoiding action, the following phraseology will be used: AVOIDING ACTION, TURN LEFT (OR RIGHT) IMMEDIATELY HEADING (three digits). TRAFFIC (bearing by clock reference and distance)	
See UK AIP GEN 1.7	Student Pilots In the UK, pilots may hear the term 'STUDENT' as part of the RTF call sign	The use of this term has been introduced to alert controllers and other airspace users to the presence of student pilots flying solo
See UK AIP GEN 1.7 and 3.3.3	Reduced Runway Separations When using ICAO reduced runway separation procedures, the phraseology LAND AFTER THE (aircraft type) will be used. Full details of these procedures are notified in GEN 3.3.3	

Source/ Additional Information	Details of ICAO/UK Difference	Reason/Remarks
See UK AIP GEN 1.7	<p>Unlawful Interference</p> <p>Pilots of aircraft subject to unlawful interference may hear one or more of the following phraseologies:</p> <p>I AM INSTRUCTED BY HIS MAJESTY’S GOVERNMENT TO REFUSE ENTRY INTO UNITED KINGDOM AIRSPACE/TO INFORM YOU THAT LANDING CLEARANCE HAS BEEN REFUSED FOR ANY AERODROME WITHIN THE UNITED KINGDOM. WHAT ARE YOUR INTENTIONS?</p> <p>I AM INSTRUCTED BY HIS MAJESTY’S GOVERNMENT THAT YOU ARE TO HOLD AT (fix or GPS position) AT (level). ACKNOWLEDGE</p>	
See UK AIP GEN 1.7	<p>Approach Delays</p> <p>If, for reasons other than weather, e.g. an obstruction on the runway, the extent of approach delays is not known, aircraft will be advised DELAY NOT DETERMINED. As soon as it is possible for aircraft to recommence approach procedures, EAT’s will be issued</p>	

Appendix 2

UK Civil/Military Radiotelephony Differences

- B1 For operational reasons there are several areas where UK military phraseology differs from UK civil phraseology.
- B2 Chapter 10 of this Manual details Military Specific Phraseology for specific use by military controllers and military aircrew. The RTF described in Chapter 10 is complementary to NATO STANAG 3817. It is also complementary to the remainder of CAP 413, as it either differs from civil phraseology or there is no equivalent civil phraseology, e.g. in the case of arrestor system procedures.
- B3 Although the RTF described in Chapter 10 is designed for use by military controllers and aircrew, civil pilots visiting military aerodromes will be expected to be aware of the military phraseology shown in Chapter 10 and comply with such instructions as may be issued by military controllers. Where relevant, cross references from the remainder of CAP 413 to the equivalent military phraseology are provided for the assistance of civil pilots visiting military aerodromes.
- B4 Significant differences between UK civil and UK military phraseology are described in the table below.

Details of Civil/Military Phraseology Difference	Civil Phraseology Reference	Military Phraseology Reference
<p>Transmission of Frequencies Civil usage is to transmit all 6 figures of a frequency, except where the final 2 digits are zero, in which case only the first 4 digits need be given. For UHF channels military usage differs in that only the first five digits are pronounced</p>	Chapter 2	Chapter 10
<p>Transmission of Time Civil usage is that when transmitting time, only the minutes of the hours are normally required. However, the hours should be included if there is any possibility of confusion. When aircraft check the time with the appropriate military ATSU, time checks shall be given to the nearest half-minute, or to the second on request</p>	Chapter 2	Chapter 10

Details of Civil/Military Phraseology Difference	Civil Phraseology Reference	Military Phraseology Reference
<p>Standard Words and Phrases A small number of additional or amended standard words and phrases are used by military pilots and controllers</p>	Chapter 2	Chapter 10
<p>SSR Phraseology Civil phraseology is 'squawk Mayday'. Military phraseology is 'squawk emergency' or 'squawk 7700'</p>	Chapter 5	Chapter 10
<p>NATO Studs and Common VHF Frequencies</p>	Not used	Chapter 10
<p>Weather and Aerodrome Information</p>	Chapter 4	Chapter 10
<p>Cancellation of Take-Off When an aircraft is about to take-off or has commenced the take-off run, and it is necessary that the aircraft should abandon take-off, a civil controller will instruct the aircraft to cancel take-off or stop immediately If a military controller is aware of a potential hazard to an aircraft about to start its take-off run, the controller will instruct or signal the aircraft to hold. If the aircraft has already started its take-off run, the controller will inform the aircraft of the hazard. It is then the aircraft captain's responsibility to decide the best course of action</p>	Chapter 4	Chapter 10
<p>Phraseology for Joining the Visual Circuit/ Pattern via the Initial Point</p>	Not used	Chapter 10
<p>Visual Circuit Phraseology If intending to land it is not necessary for a civil pilot to include intentions in the downwind report Military pilots will state their intentions as part of the downwind report</p>	Chapter 4	Chapter 11
<p>Landing Gear Position At civil aerodromes it is not normal practice for pilots to report the gear position as part of the 'final' report At military aerodromes pilots of aircraft with retractable landing gear will report the gear position as part of the request for an ATC clearance to use the runway</p>	Chapter 4	Chapter 10

Details of Civil/Military Phraseology Difference	Civil Phraseology Reference	Military Phraseology Reference
Phraseology for Arrestor Gear Positions and Engagements	Not used	Chapter 10
Phraseology for Vertical Take-Off and Landing (VTOL) Operations	Not used	Chapter 10
Flameout/Engine Failure – Aerodrome Phraseology	Not used	Chapter 10
Phraseology for Precision Approach Radar (PAR)	Not used	Chapter 10
PAR Azimuth Only/Surveillance Radar Approach (SRA) Phraseology There are a number of significant differences between civil and military SRA phraseology	Chapter 6	Chapter 10
ILS Phraseology There are a number of significant differences between civil and military ILS phraseology	Chapter 6	Chapter 10
Descent to Low Level	Not used	Chapter 10
Jamming Phraseology	Not used	Chapter 10
Speechless Procedures	Not used	Chapter 10
Missed Approach Military phraseology for instructing an aircraft to carry out a missed approach differs from civil phraseology	Chapter 4	Chapter 10
Suspension of RT Procedures	Not used	Chapter 10
Trail Approaches	Not used	Chapter 10
Contact Lost	Not used	Chapter 10
Phraseology ‘Freecall’ and ‘Continue with’ ‘Continue with’ is not used by civil controllers, whilst ‘Freecall’ is mainly used by military controllers	Chapter 2	Chapter 10
Aerobatics and General Handling	Not used	Chapter 10
Persons on Board (POB) In civil usage POB may be added to a taxi request, e.g. where a flight plan is not required and has not been filed. Military pilots should transmit POB in accordance with local or national orders	Chapter 4	Chapter 10
Clearances with an Occupied Runway	Chapter 4	Chapter 10
Formation Landing Clearances	Not used	Chapter 10
TACAN Specific Phraseology	Not used	Chapter 10
Radar Practice Forced Landing (PFL)	Not used	Chapter 10

Details of Civil/Military Phraseology Difference	Civil Phraseology Reference	Military Phraseology Reference
Controlled Descent through Cloud (QGH)	Not used. NOTE: A QGH differs from the VDF procedure shown in Chapter 6 which is totally pilot interpreted.	Chapter 10
Flameout Spiral Descent	Not used	Chapter 10
No Compass no Gyro Phraseology	Not used	Chapter 10
Supersonic Flight	Not used	Chapter 10
Details of Civil/Military Phraseology Difference	Civil Phraseology Reference	Military Phraseology Reference
MATZ Crossing	Not used	Chapter 10
Emergency Message Emergency messages by military pilots are different from civil usage	Chapter 8	Chapter 10 (MMATM ATM 3000)

Bibliography

ICAO Annex 10 Volume 2 Communication Procedures.

ICAO Document No. 4444 Procedures for Air Navigation Services – Air Traffic Management

(PANS-ATM).

ICAO Document No. 8400 Procedures for Air Navigation Services – ICAO Abbreviations and Codes (PANS-ABC).

ICAO Document No. 9432 Manual of Radiotelephony.

CAP 32 UK Aeronautical Information Publication (AIP) (*All 'ENR' references are contained herein*).

CAP 493 Manual of Air Traffic Services (MATS Part 1).

CAP 797 Flight Information Service Officer Manual.

CAP 452 Aeronautical Radio Station Operator's Guide.

CAP 774 UK Flight Information Services.

NATO Standing Agreements (STANAG) 3817 Standard R/T Phraseology to be used for Air Traffic Control.

Military Aviation Authority Regulatory Publications, 3000 Series and Manual Military Air Traffic Management.

All CAA Publications are available from the CAA website at www.caa.co.uk/publications.